

## NO. 83272

### PLASTIC COVER CAP

FOR

SL-1 & SL-44 INJECTORS  
 PACKAGE CONTAINS  
 ONE NO. 247438 (NEOPRENE) "O" RING  
 ONE PLASTIC CAP


**LINCOLN** One Lincoln Way, St. Louis, Missouri 63120-1578  
 INDUSTRIAL (314) 679-4200

### TO ASSEMBLE COVER CAP ON INJECTOR

1. APPLY LIGHT COATING OF A TRANSPARENT TYPE LUBRICANT TO THE INSIDE OF THE CAP.
2. FORCE COVER CAP OVER INDICATOR STEM UNTIL IT COVERS GROOVE IN PISTON PLUG.
3. PLACE "O" RING OVER THE CAP AND SLIDE RING DOWN UNTIL IT FORCES THE COVER CAP INTO THE GROOVE TO FORM A SEAL.

FORM 404849

 Printed in U.S.A.

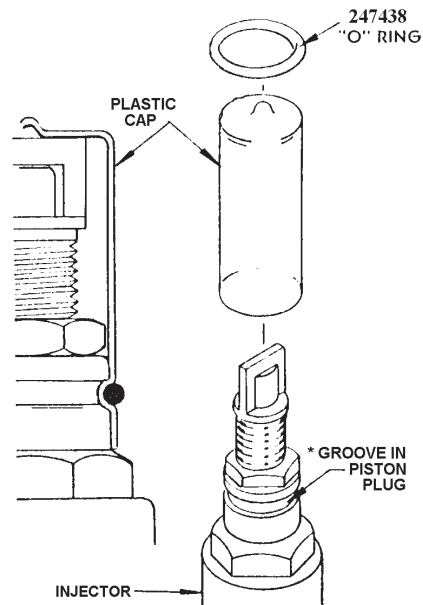

## NO. 83272

### PLASTIC COVER CAP

FOR

SL-1 & SL-44 INJECTORS  
 PACKAGE CONTAINS  
 ONE NO. 247438 (NEOPRENE) "O" RING  
 ONE PLASTIC CAP


**LINCOLN** One Lincoln Way, St. Louis, Missouri 63120-1578  
 INDUSTRIAL (314) 679-4200

### TO ASSEMBLE COVER CAP ON INJECTOR

1. APPLY LIGHT COATING OF A TRANSPARENT TYPE LUBRICANT TO THE INSIDE OF THE CAP.
2. FORCE COVER CAP OVER INDICATOR STEM UNTIL IT COVERS GROOVE IN PISTON PLUG.
3. PLACE "O" RING OVER THE CAP AND SLIDE RING DOWN UNTIL IT FORCES THE COVER CAP INTO THE GROOVE TO FORM A SEAL.

FORM 404849

 Printed in U.S.A.

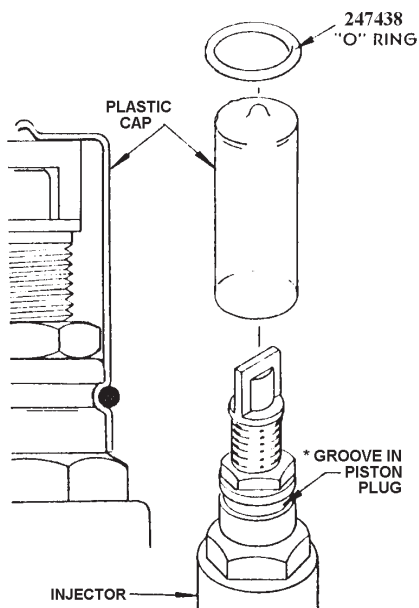

## NO. 83272

### PLASTIC COVER CAP

FOR

SL-1 & SL-44 INJECTORS  
 PACKAGE CONTAINS  
 ONE NO. 247438 (NEOPRENE) "O" RING  
 ONE PLASTIC CAP


**LINCOLN** One Lincoln Way, St. Louis, Missouri 63120-1578  
 INDUSTRIAL (314) 679-4200

### TO ASSEMBLE COVER CAP ON INJECTOR

1. APPLY LIGHT COATING OF A TRANSPARENT TYPE LUBRICANT TO THE INSIDE OF THE CAP.
2. FORCE COVER CAP OVER INDICATOR STEM UNTIL IT COVERS GROOVE IN PISTON PLUG.
3. PLACE "O" RING OVER THE CAP AND SLIDE RING DOWN UNTIL IT FORCES THE COVER CAP INTO THE GROOVE TO FORM A SEAL.

FORM 404849

 Printed in U.S.A.

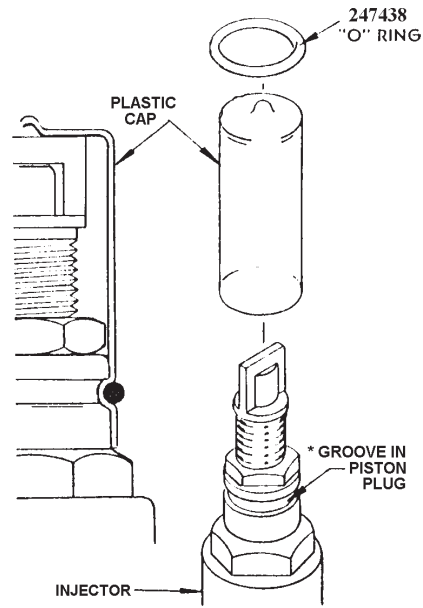

## NO. 83272

### PLASTIC COVER CAP

FOR

SL-1 & SL-44 INJECTORS  
 PACKAGE CONTAINS  
 ONE NO. 247438 (NEOPRENE) "O" RING  
 ONE PLASTIC CAP

**LINCOLN** One Lincoln Way, St. Louis, Missouri 63120-1578  
 INDUSTRIAL (314) 679-4200

### TO ASSEMBLE COVER CAP ON INJECTOR

1. APPLY LIGHT COATING OF A TRANSPARENT TYPE LUBRICANT TO THE INSIDE OF THE CAP.
2. FORCE COVER CAP OVER INDICATOR STEM UNTIL IT COVERS GROOVE IN PISTON PLUG.
3. PLACE "O" RING OVER THE CAP AND SLIDE RING DOWN UNTIL IT FORCES THE COVER CAP INTO THE GROOVE TO FORM A SEAL.

FORM 404849

Printed in U.S.A.