




25 LB. TO 50 LB. BULK CONTAINER
50:1 RATIO

OVERALL HEIGHT: 39"
BASE: 18" Sq.

83513 Basic Pump Assembly
Refer to Service Manual
Section A5, Page 7 Series.

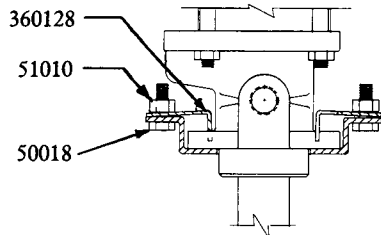

SECTION A-A

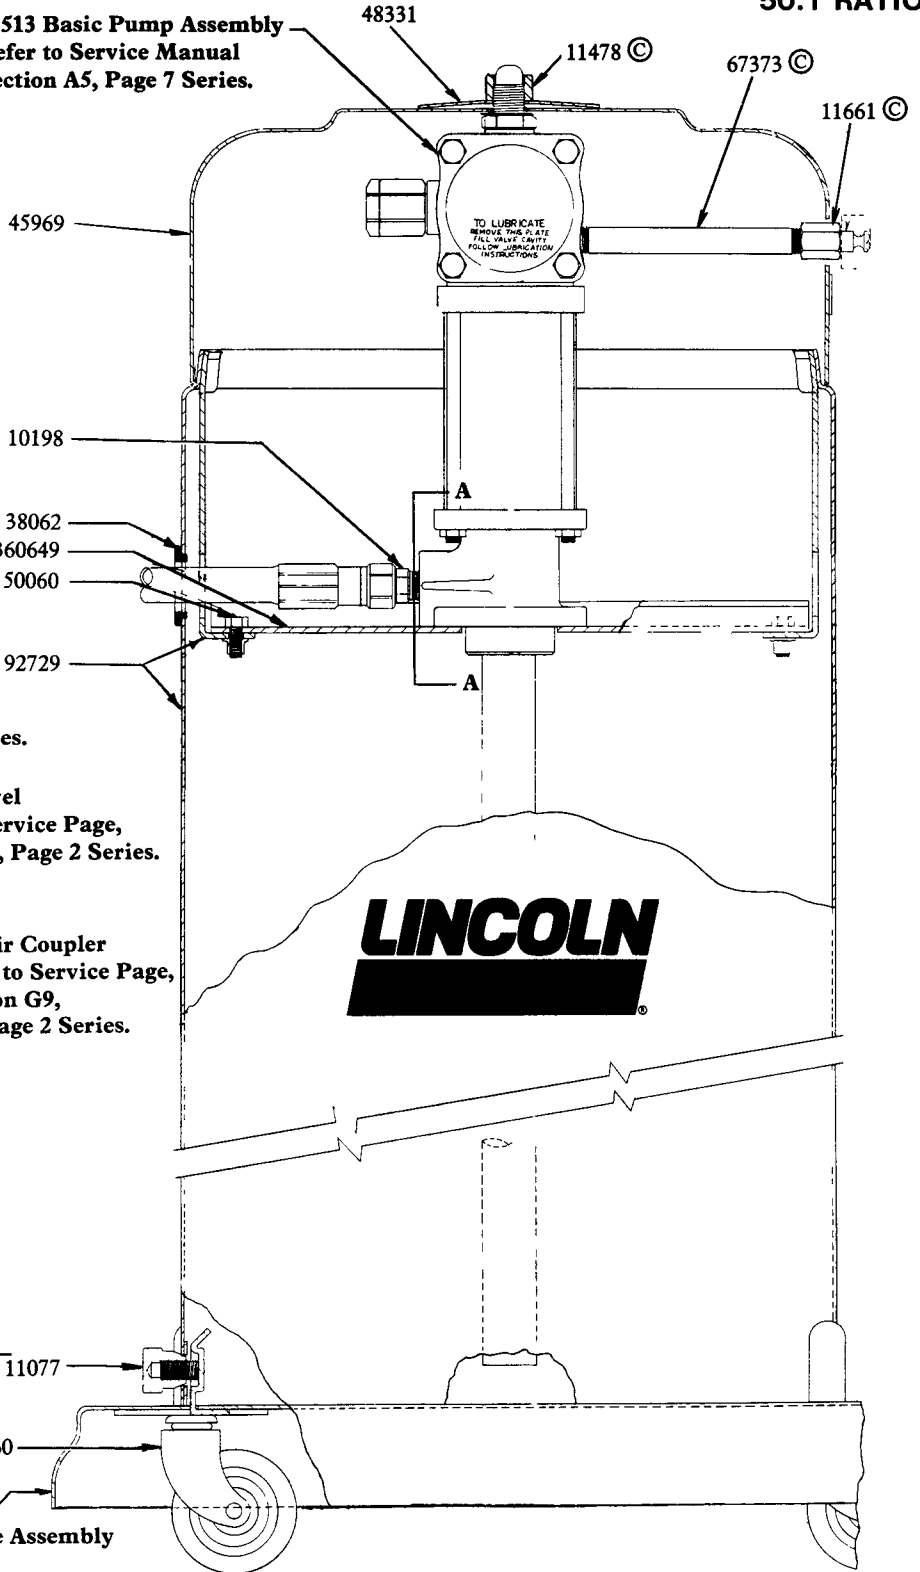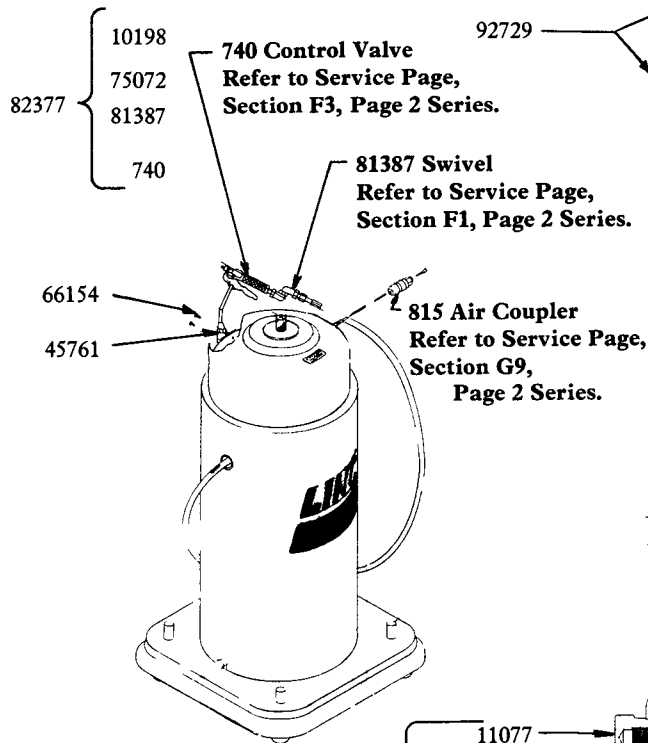

© Indicates Change

TO CHANGE LUBRICANT DRUMS



- 1) Disconnect air coupler from pump.
- 2) Loosen the two latch knobs on the base several turns.
- 3) Lift sleeve from base, raising it high enough to clear the lubricant drum.
- 4) Fresh drum of lubricant should then be placed centrally on the base.

IMPORTANT: Avoid bumping latch knobs when placing lubricant drum on base.

- 5) Replace the sleeve on the base, being careful to guide the key hole slots onto the latch knobs.
- 6) Tighten latch knobs securely so that sleeve is clamped firmly to the base.

TO REMOVE AIRMOTOR COVER

Remove cover nut & cover cap washer. Tilt the airmotor cover on an angle so that the hole in the cover will clear the air coupler nipple.

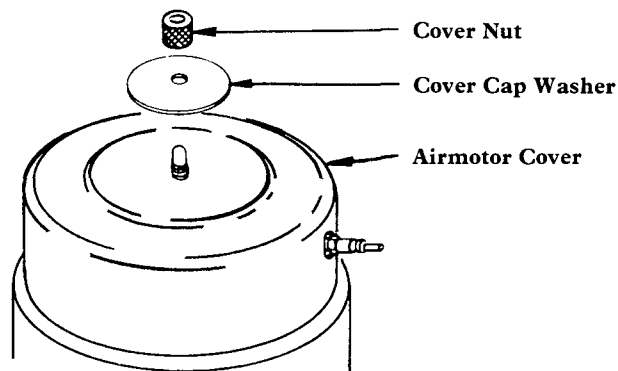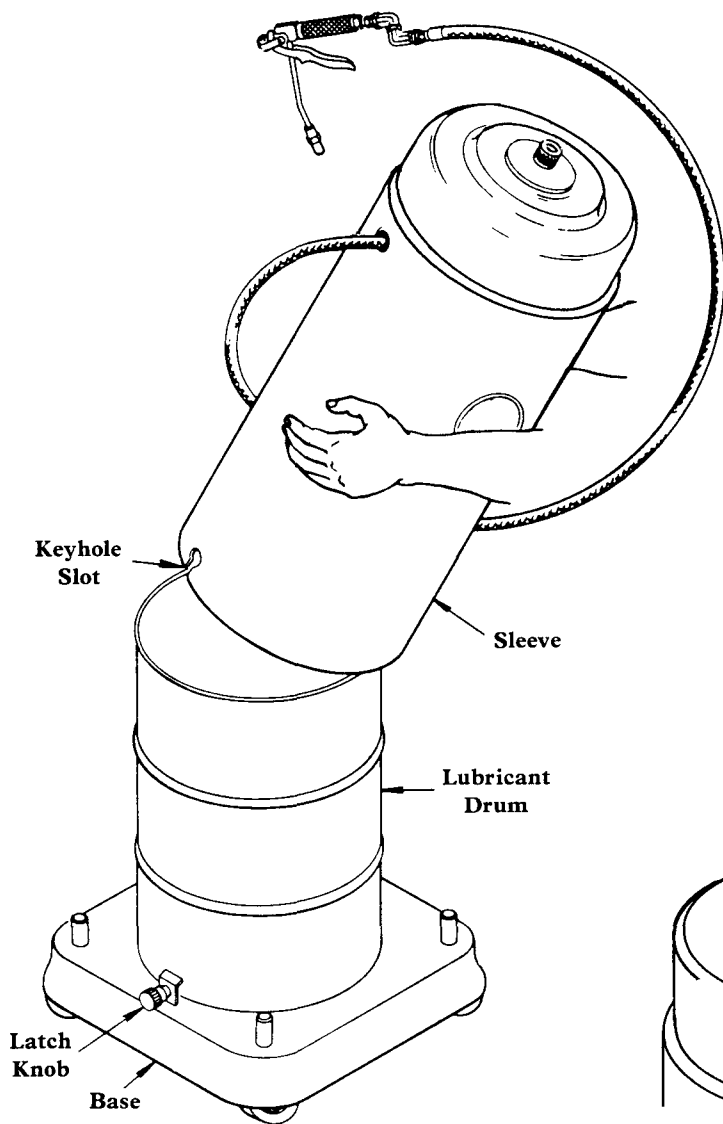

SERVICE PARTS

Part	Qty.	Description	Part	Qty.	Description
740	1	Control valve	51010	2	Nut
815	1	Air coupler	66060	4	Caster
10198	1	Hose connector	66154	2	Screw
11077	2	Latch knob	67373	1	Pipe nipple
11478	1	Cover nut	75072	1	High pressure hose
11661	1	Air coupler nipple	81319	1	Truck assembly
38062	1	Grommet	81387	1	Universal swivel
45761	1	Control valve hanger	82377	1	Hose & control valve
45969	1	Air motor cover	83513	1	Bare pump assembly
48331	1	Cover cap washer	92729	1	Sleeve
50018	2	Bolt	360128	2	Clamp
50060	2	Bolt	360649	1	Pump support channel

RETAIN THIS INFORMATION FOR FUTURE REFERENCE

When ordering replacement parts, list: Part Number, Description, Model Number, and Series Letter.

LINCOLN provides a Distributor Network that stocks equipment and replacement parts.