


## Model No. 1709 PUMP HOIST Series "A"

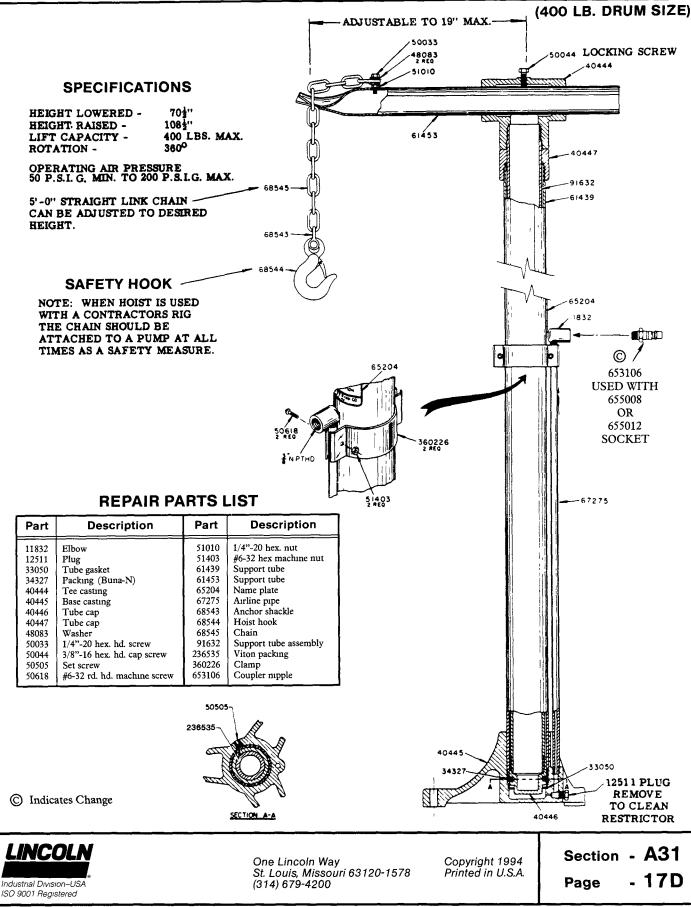


**OCT-94** 

## INSTALLATION

Base casting can be used as a template for location of anchor bolts. Position of pump hoist in respect to drum location for contractor's rigs.

Arm must be adjusted for side opening drums,

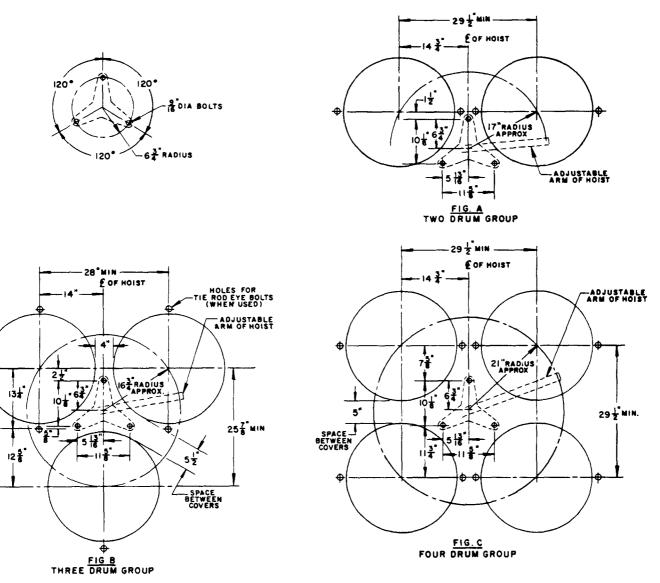

## **OPERATION**

Attach socket of air supply to plug.

(Operating air pressure 50 P.S.I.G. min. to 200 P.S.I.G. Max.) Restrictor in base of air inlet prevents pump hoist from lifting too rapidly.

IMPORTANT: Socket must remain connected to hold hoist in the raised position. Remove socket to lower hoist. Restrictor in the base of air inlet permits the hoist to lower slowly. The plug located in the base casting can be removed for cleaning the air restrictor.

## — RETAIN THIS INFORMATION FOR FUTURE REFERENCE

When ordering replacement parts, list: Part Number, Description, Model Number, and Series Letter.

LINCOLN provides a Distributor Network that stocks equipment and replacement parts.