

Model Nos. 930, 931 UNDERCOATING PUMP

14:1 RATIO

AIR OPERATED 83802 83804 83803 84158 83594 79120 67195 10130 241561 10049 83737 68982 TURN-CLEAN 241567 NOZZLE 10049 83803 10772 11348 68982-27 ORIFICE KIT 66100 46007 67195 600004 50415 11659 50113 815 79120 50060 45880 TRUCK BASE 66060 11123 50016 80895 48238 45880 360266 66060 4 REQ

MODEL 930 PORTABLE 120 LB. DRUM (SLEEVELESS)

- 1. Insert end of Pump Tube through hole in Drum Cover. Line up holes in Drum Cover with holes in cover-bottom and Pump Outlet Body. Use four hex. head screws, tighten securely.
- 2. Assemble the four casters to the Base.
- 3. Place fresh Material Drum centrally on Base between the four Base Clamps.
 - a. Adjust Clamp position to fit Drum and tighten securely to Base.
 - b. Tighten the four Studs in the Clamps to hold Drum rigidly to the Base.
- 4. Guide end of Pump Tube into Drum (until Drum Cover rests on top head of Drum).

Assemble the three Adjusting Screws into the side openings in the Drum Cover and tighten Screws to hold Pump rigidly to Drum.

- 5. Assemble the Air Controls to the Pump air inlet. Connections must be leak-proof.
- 6. Assemble Delivery Hose into Pump Outlet. Connections must be leak-proof.

CAUTION


TO PREVENT ACCIDENTS, ROTATE SAFETY LATCH TO THE "OFF" POSITION AFTER EACH USE.



One Lincoln Way St Louis, Missouri 63120-1578 (314) 679-4200 Customer Service, (314) 679-4300

Copyright 1989 Printed in U.S.A. Section-A5 Page

83803 TURN-KLEEN SPRAY NOZZLE

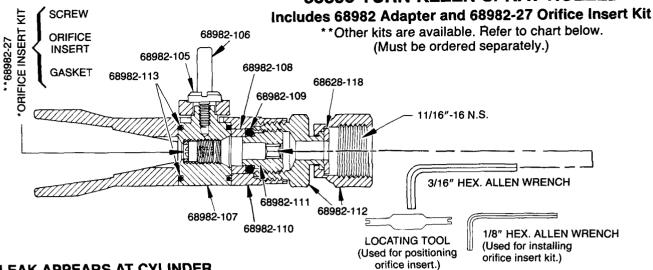


IF LEAK APPEARS AT CYLINDER

- 1. Rotate control valve safety latch to "Off" position.
- 2. Remove Turn-Kleen nozzle from control valve.
- 3. Rotate handle to "Clean-out" position.
- 4. Use 3/16" allen wrench to tighten adjusting screw to seat packing against cylinder.
- 5. Inspect 68982-113 O-rings. O-rings may be worn or damaged. Replace if necessary.

TO REPLACE ORIFICE KIT

- 1. Rotate control valve safety latch to "Off" position.
- 2. Remove Turn-Kleen nozzle from control valve.
- 3. Rotate handle to "Clean-out" position.
- 4. Remove lock screw from cylinder.
- 5. Insert wrench into back end of cylinder. Push or tap out orifice insert and gasket from cylinder.
- 6. Assemble new gasket and orifice insert into cylinder, replace lock screw.
- 7. Rotate handle back to "Spray" position.

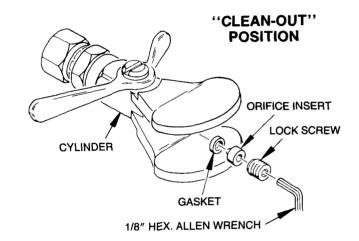


OPERATION

Recommended operating air pressure will vary in certain localities due to temperature conditions.

- 1. Shut off the air regulator and attach the air supply hose to the air inlet nipple of the pump.
- 2. Open air regulator slowly to start pump operation. Rotate safety latch to "ON" position. Depress

POSITION OF HANDLE

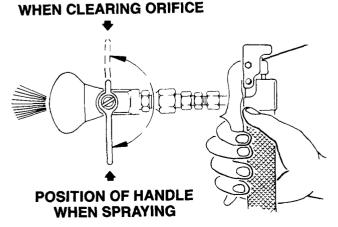

control valve handle and increase air pressure until a good spray pattern is obtained.

3. Decrease air pressure to reduce overspray.


TO SPRAY

- a. Depress control valve handle completely.
- b. Hold spray nozzle 10" to 12" away from work surface for most efficient coverage pattern.

IF SPRAY NOZZLE ORIFICE BEGINS **TO CLOG**

- a. Release control valve handle.
- b. Rotate spray nozzle handle 180.º
- c. Spray briefly to flush clogging particles, release control valve handle.
- d. Rotate spray nozzle handle back to "spray" position.

If orifice becomes clogged with dried material, clean in solvent. DO NOT USE WIRE OR PIN TO CLEAN OPENING OF ORIFICE—Use air pressure.

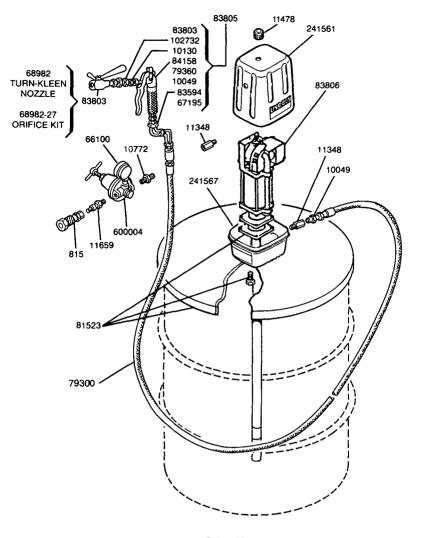

MODEL 931 STATIONARY 400 LB. DRUM (SLEEVELESS)

- 1. Insert end of Pump Tube through hole in Drum Cover. Line up holes in Drum Cover with holes in Cover-Bottom and Pump Outlet Body. Use four hex. head screws, tighten securely.
- 2. Assemble the Air Controls to the Pump air inlet. Connections must be leak-proof.
- 3. Assemble Delivery Hose into Pump Outlet. Connections must be leak-proof.



RETAIN THIS INFORMATION FOR FUTURE REFERENCE

When ordering replacement parts, list: Part Number, Description, Model Number, and Series Letter.

LINCOLN provides a Distributor Network that stocks equipment and replacement parts.

TURN-KLEEN ORIFICE KITS (For use with Turn-Kleen nozzle.) **EQUIVALENT ORIFICE DIAMETER WIDTH SPRAY ANGLE OF SPRAY WORK SURFACE 10" TO 12" **NYLON ORIFICE GASKET** INSERT **SCREW** 68982-99 Use 68982-98 Gasket (thin) with orifice insert kit (-A thru -N). Use 68982-97 Gasket (thick) with orifice insert kit (-O thru -Z). **ORIFICE INSERT KIT**

Orifice Insert Kit	Tip Stenciled	Equivalent Orifice Diameter	Spray Angle	Approx. Width of Spray at 1600 PSI, 1' Distance
68982-13 68982-15 68982-8	2-F 2-G 2-H	.011" .013" .015"	15° 15° 15°	5" 5" 5-1/2"
68982-17 68982-14 68982-16	3-D 3-F 3-G	.007" .011" .013"	25° 25° 25°	5-1/2" 6" 6"
68982-18 68982-25 68982-26 68982-27 68982-28 68982-30 68982-31	4-E 4-K 4-J 4-L 4-H 4-M 4-N	.009" .021" .018" .026" .015" .031"	40° 40° 40° 40° 40° 40°	7" 11" 10" 12" 8-1/2" 12"
68982-10 68982-12 68982-7 68982-6 68982-22 68982-19 68982-20 68982-23 68982-24	6-F 6-G 6-H 6-J 6-K 6-N 6-O 6-R 6-T	.011" .013" .015" .018" .021" .036" .043" .062"	65° 65° 65° 65° 65° 65° 65° 65°	10" 10-1/2" 11" 13" 15" 16" 16" 16"
68982-5	8-J	.018″	80°	15"

Spray pattern width is based on a material with a viscosity of 20 seconds #4 Zahn cup spraying at 1600 psi. Coverages with other materials will vary but coverages of the various tips will be proportional to width tabulated.

COMPONENT PARTS

Part	Qty.	Description	Part	Qty.	Description
815	1	Air coupler	68982-107	1	Cylinder
10049	1 1	Adapter	68982-108	1 1	Teflon packing
10130	1	Nipple	68982-109	1	O-ring
10772	1	Nipple	68982-110	1	Cylinder body
11123	4	Screw	68982-111	1	Adjusting screw
11348	2	Adapter	68982-112	1	Cap assembly
11478	1	Cover nut	68982-113	2	O-ring
11659	1	Air nipple	79120	1	Hose (10 ft.)
241561	1	Cover—top	79300	1	Hose (25 ft.)
241567	1	Cover-bottom	80895	1	Truck assembly
45880	1	Truck plate	81523	1	Drum cover assembly
46007	1	Drum cover	83594	1	Universal swivel
48238	4	Washer	83737	1	Pump assembly
50016	4	Screw	83802	1	Hose, control valve &
50060	4	Screw		ļ	nozzle assembly
50113	2	Screw	83803	1	Turnkleen tip adapter &
50415	3	Screw			orifice kit
50754	2	Nut	83804	1	Hose & control valve assembly
66060	4	Caster	83805	1	Hose, control valve &
66100	1	Pressure gauge	83803		nozzle assembly
67195	1	Pipe coupling	83806	1	Pump assembly
68628-118	1	Nylon tip gasket	84158	1	Low pressure control
68982	1	Turnkleen tip adapter		•	valve
		assembly	92171	1	Nozzle hanger
68982-27	1	Orifice insert kit	102732	1	Reducing bushing
68982-105	1	Screw	360266	1	Clamp
68982-106	1	Handle	600004	1	Air regulator