


OWNERS MANUAL

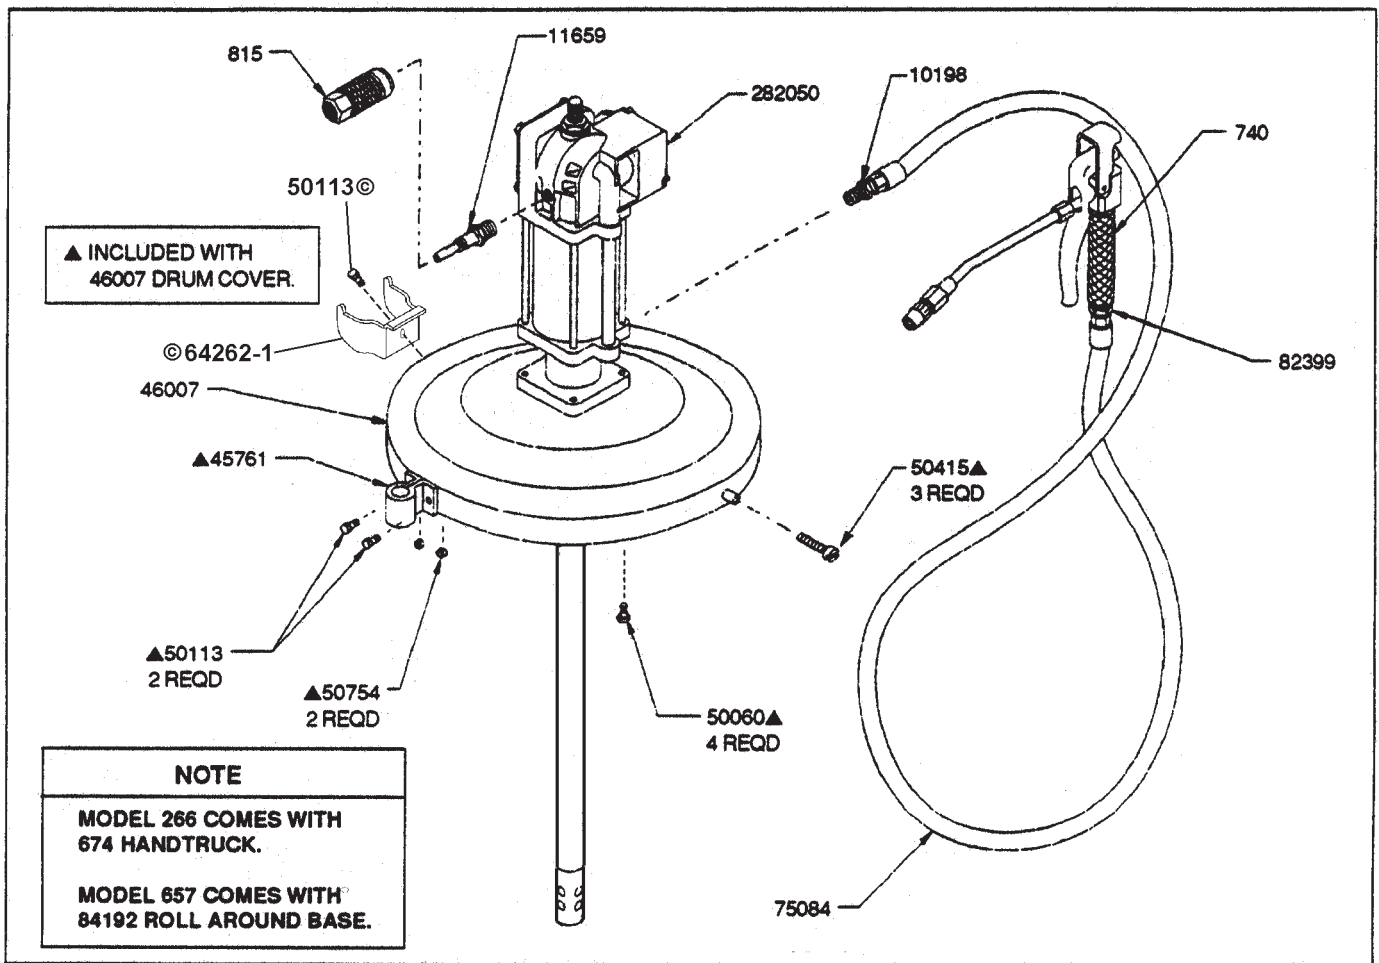

SERVICE PARTS AND OPTIONAL ACCESSORIES

PARTS	QTY	DESCRIPTION
740	1	Control valve
815	1	Air coupler
10198	1	Adapter nipple
11659	1	Air nipple
45761	1	Control valve hanger
46007	1	Drum cover kit
50060	4	Hex head cap screw
50113	3	Hex head cap screw
50415	3	Slotted head screw
50754	3	Hex nut
64262-1	1	Bracket (266 only)
75084	1	High pressure hose
82399	1	Swivel
282050	1	Pump
OPTIONS	QTY	DESCRIPTION
81387	1	Universal swivel
84780	1	Follower, for viscous materials

REFER TO SEPARATE INSTRUCTIONS FOR:

674 Handtruck	Section B3 Page 24 Series
740 Control valve	Section F3, Page 2 Series
815 Coupler	Section G9 Page 2 Series
82399 Swivel	Section F1 Page 2 Series
282050 Pump	Section A5, Page 70 Series

© Indicates change

ASSEMBLY

Assemble control valve hanger (45761) to drum cover as shown.

Assemble pump to drum cover top with four screws as shown.

If pumping a heavy grease that requires a follower, place an optional follower into the grease in the open 120 pound drum.

Place drum cover assembly onto drum. Screw in the three thumb screws to secure drum cover to drum.

Place pump through drum cover and through follower if used.

Assemble delivery hose, swivel and control valve as shown. Connections must be tight and leak proof.

Screw air nipple into air motor and attach air coupler to air delivery hose.

Unit is operational when air delivery hose is connected to pump.



WARNING

READ ALL SAFETY INSTRUCTIONS INCLUDED IN 740 CONTROL VALVE AND 282050 PUMP OWNERS MANUALS. THIS PUMP CREATES PRESSURES UP TO 7,500 P.S.I.