
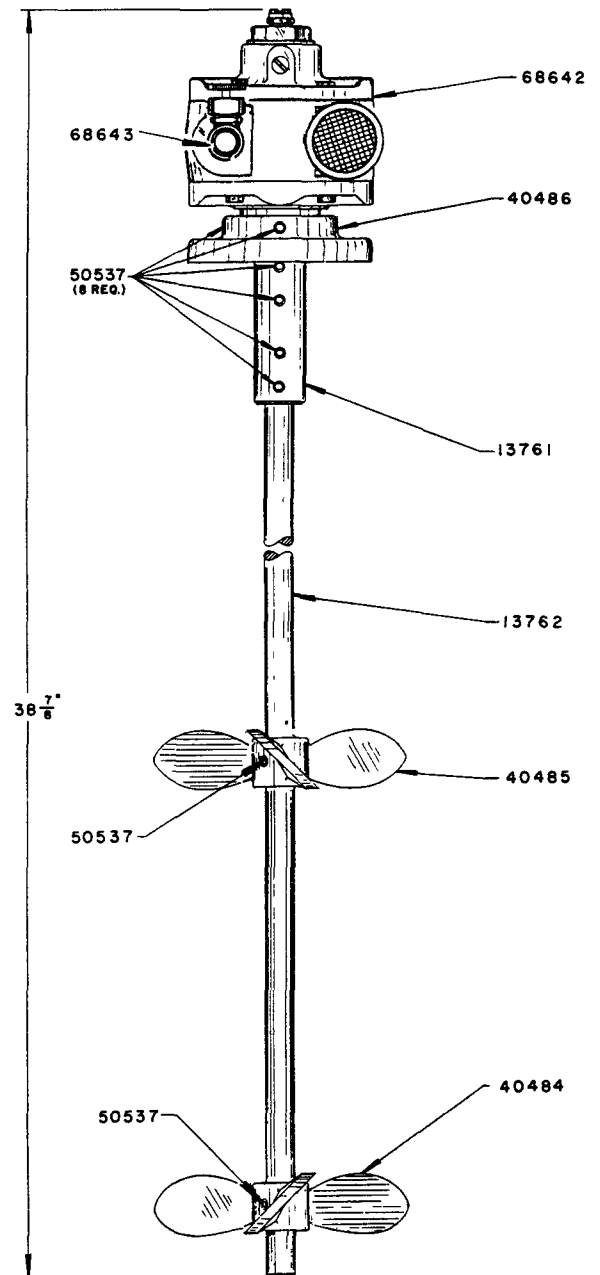


FOR OPEN TOP DRUMS
ILLUSTRATED ON REAR SIDE

(55 GAL. DRUM SIZE)

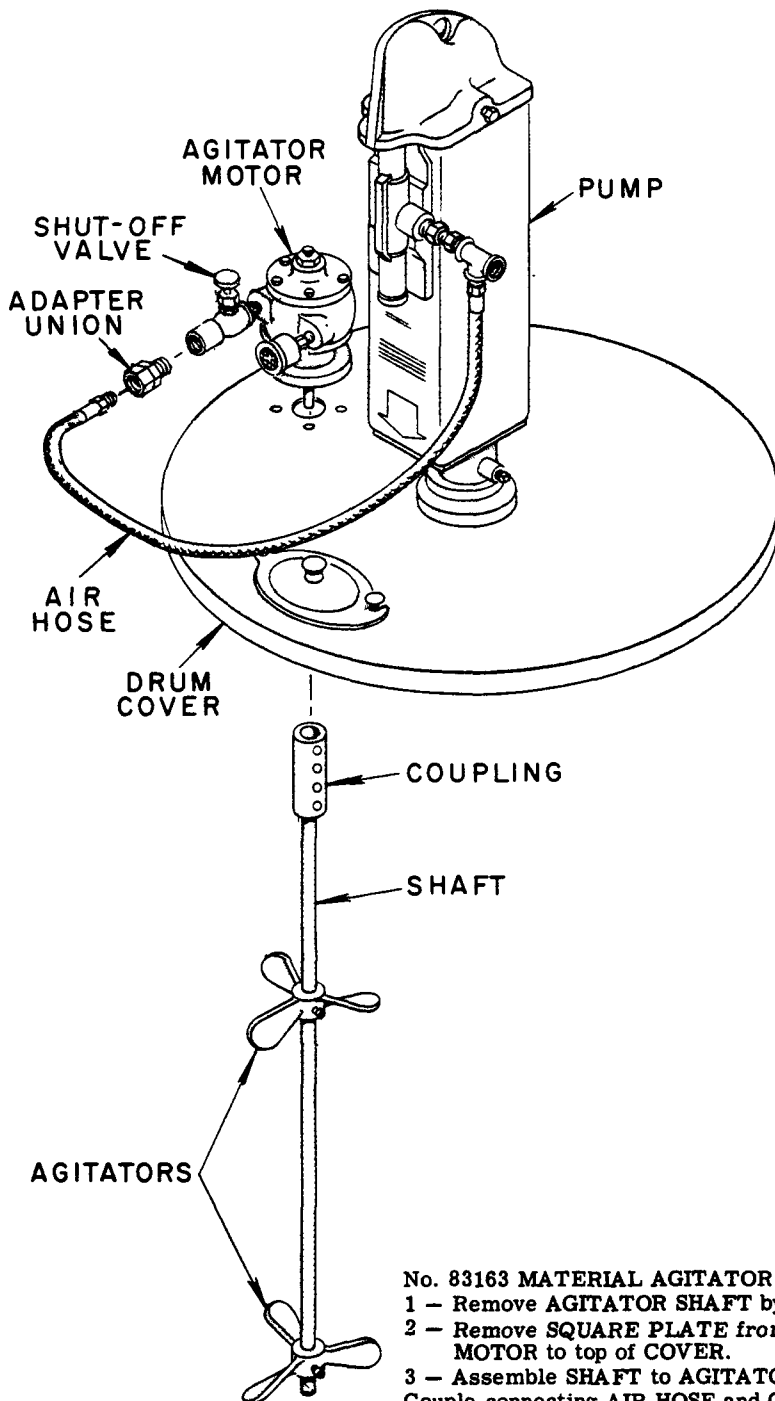

No. 83163 MATERIAL AGITATOR to be assembled to DRUM COVER.


- 1 - Remove AGITATOR SHAFT by loosening SCREWS in COUPLING.
 - 2 - Remove SQUARE PLATE from bottom side of DRUM COVER and attach AGITATOR MOTOR to top of COVER.
 - 3 - Assemble SHAFT to AGITATOR MOTOR.
- Couple connecting AIR HOSE and COMPONENT PARTS from the PUMP AIR INLET to the AGITATOR.

OPERATION

With SHUT-OFF VALVE open, the AGITATOR will operate the instant air is applied to the PUMP.


AGITATOR operating prevents emulsions from separating, and keep solids in suspension. With PUMP in operation, AGITATOR operation is controlled by opening or closing the SHUT-OFF VALVE as desired.

83173 AGITATOR For Use With Open Top 55 Gal. Drums

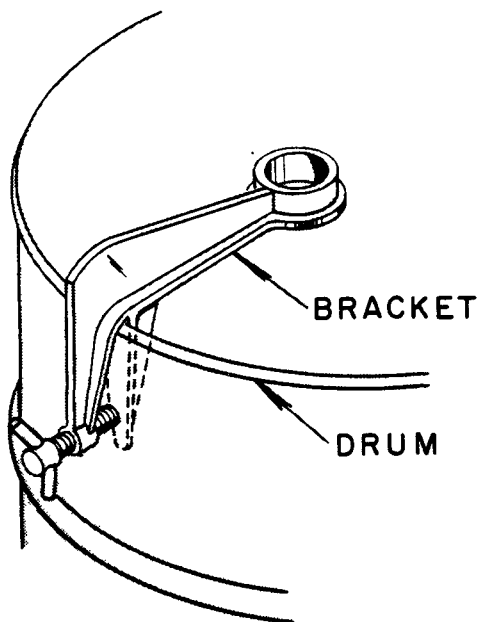

ASSEMBLE BRACKET TO DRUM

Installation and operation is identical with 83163 shown on front side.

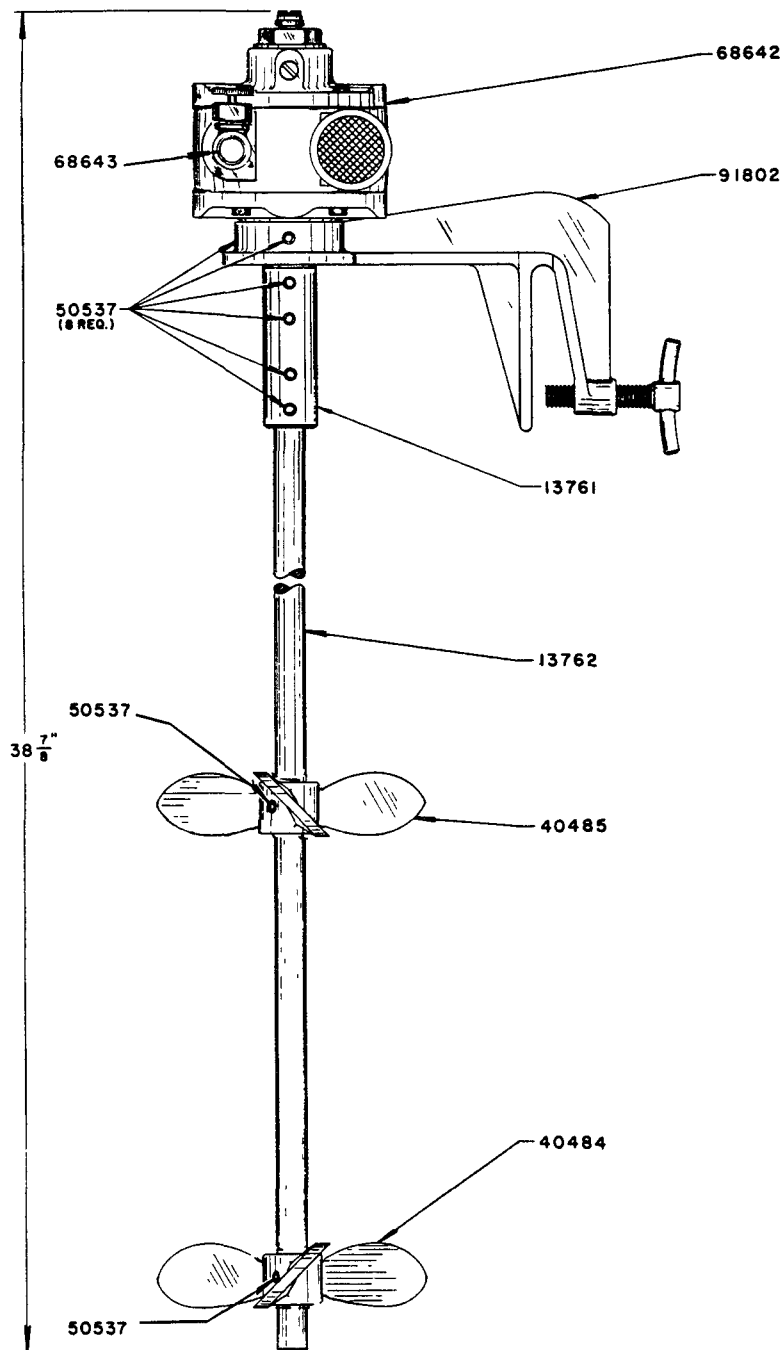

REPAIR PARTS LIST

Part No.	Description	Part No.	Description
13761	Sleeve Coupling	50537	Set Screw
13762	Shaft	68642	Rotary Airmotor Assembly
40484	Propeller (R.H.)	68643	Needle Valve
40485	Propeller (L.H.)	91802	Drum Rim Bracket
40486	Drum Cover Bushing		

RETAIN THIS INFORMATION FOR FUTURE REFERENCE

When ordering replacement parts, list: Part Number, Description, Model Number, and Series Letter.

LINCOLN provides a Distributor Network that stocks equipment and replacement parts.