 


# ELEVATOR ASSEMBLY (FOR 120 LB. DRUM)




Model 83447

Series A

**NOTE:**

ELEVATOR BRACKET MUST BE ANCHORED SECURELY TO FLOOR BEFORE ELEVATOR CAN BE OPERATED. (REFER TO INSTALLATION OF ELEVATOR)

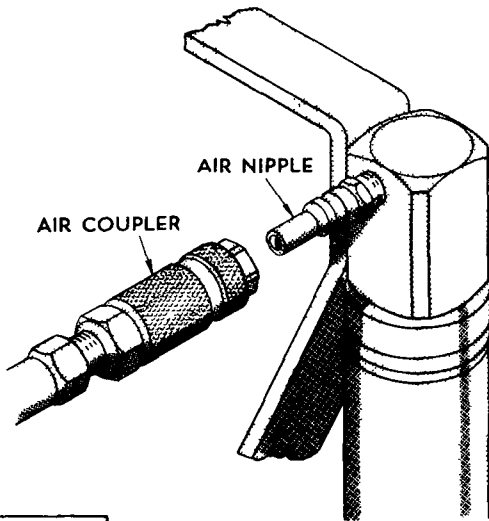

OF LUBRIGUN

- 11660
- 92052
- 92051

- 38 1/2" MINIMUM HEIGHT
- 66 3/4" ELEVATED HEIGHT

**OPERATION - TO LIFT LUBRIGUN**

AIR COUPLER is removed from LUBRIGUN and attached to the AIR NIPPLE of the ELEVATOR.

Restrictor in base of Air inlet prevents ELEVATOR from lifting too rapidly.


**IMPORTANT:**

AIR COUPLER MUST REMAIN CONNECTED TO HOLD ELEVATOR IN THE RAISED POSITION.

Remove AIR COUPLER to lower LUBRIGUN. The restrictor permits the ELEVATOR to lower slowly.

**OPERATING AIR PRESSURE**

50 P.S.I. MINIMUM  
200 P.S.I. MAXIMUM

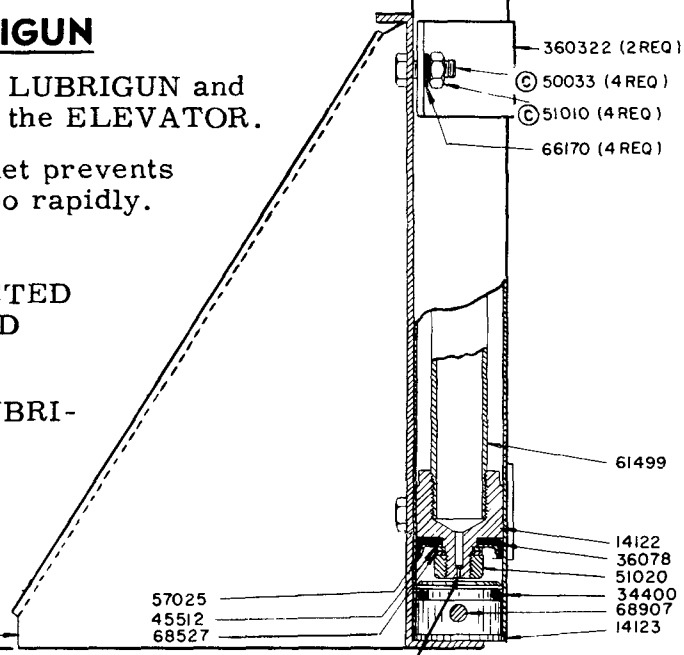

- 360322 (2 REQ)
- © 50033 (4 REQ)
- © 51010 (4 REQ)
- 66170 (4 REQ)
- 61499
- 14122
- 36078
- 51020
- 34400
- 68907
- 14123

- 57025
- 45512
- 68527

360126

RESTRICTOR


© INDICATES CHANGE

**LINCOLN ST. LOUIS**  
4010 GOODFELLOW BLVD - ST. LOUIS MO 63120 - (314) 383 5900



SECTION - **A6**  
PAGE - **42B**

## INSTALLATION OF ELEVATOR

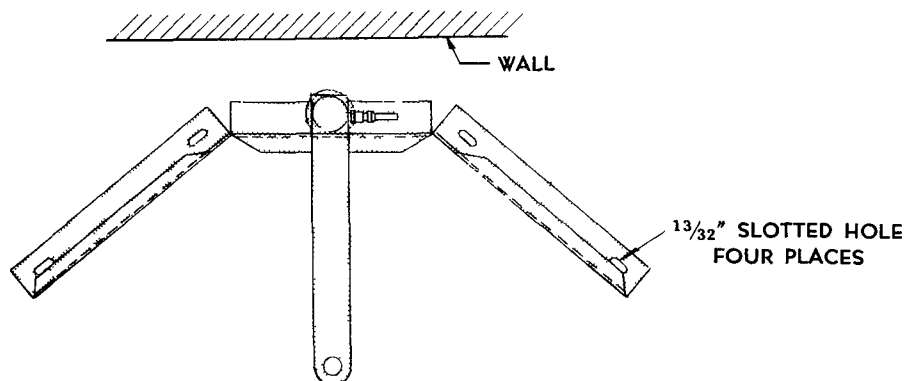

Distance from wall should be sufficient to clear ELEVATOR. Provide a minimum of 30" clearance above PUMPS to permit the vertical lifting of ELEVATOR, for changing drums.

Use Mounting Bracket as a template to mark floor location of anchor screws.

Mounting Bracket must be rigidly secured to floor.

### REPAIR PARTS LIST

PART NO.	DESCRIPTION	PART NO.	DESCRIPTION
11660	Air Coupler Nipple	57025	Leather Spreader
14122	Piston	61499	Tube
14123	Cylinder End	66170	Lockwasher
34400	"O" Ring	68527	Lockwasher
36078	Cup Leather	68907	1/4" Dia. Groove Pin
45512	Washer	92051	Tube and Guide Assem.
50033	Rd. Hd. Machine Screw	92052	Support Bracket Assem.
51010	Stove Bolt Nut	360126	Elevator Bracket
51020	7/16" - 20 Hex. Nut	360322	Bracket Clamp

#### RETAIN THIS INFORMATION FOR FUTURE REFERENCE

When ordering Replacement Parts, List Part Numbers, Description, Model Number, and Series Letter.  
 LINCOLN ST. LOUIS Provides a Distributor network that stocks Equipment and Replacement Parts.  
 Repairs by Authorized Service Depts. List furnished upon request.