


FILLER PUMP

400 LB. DRUM

Model 508

Series "B"

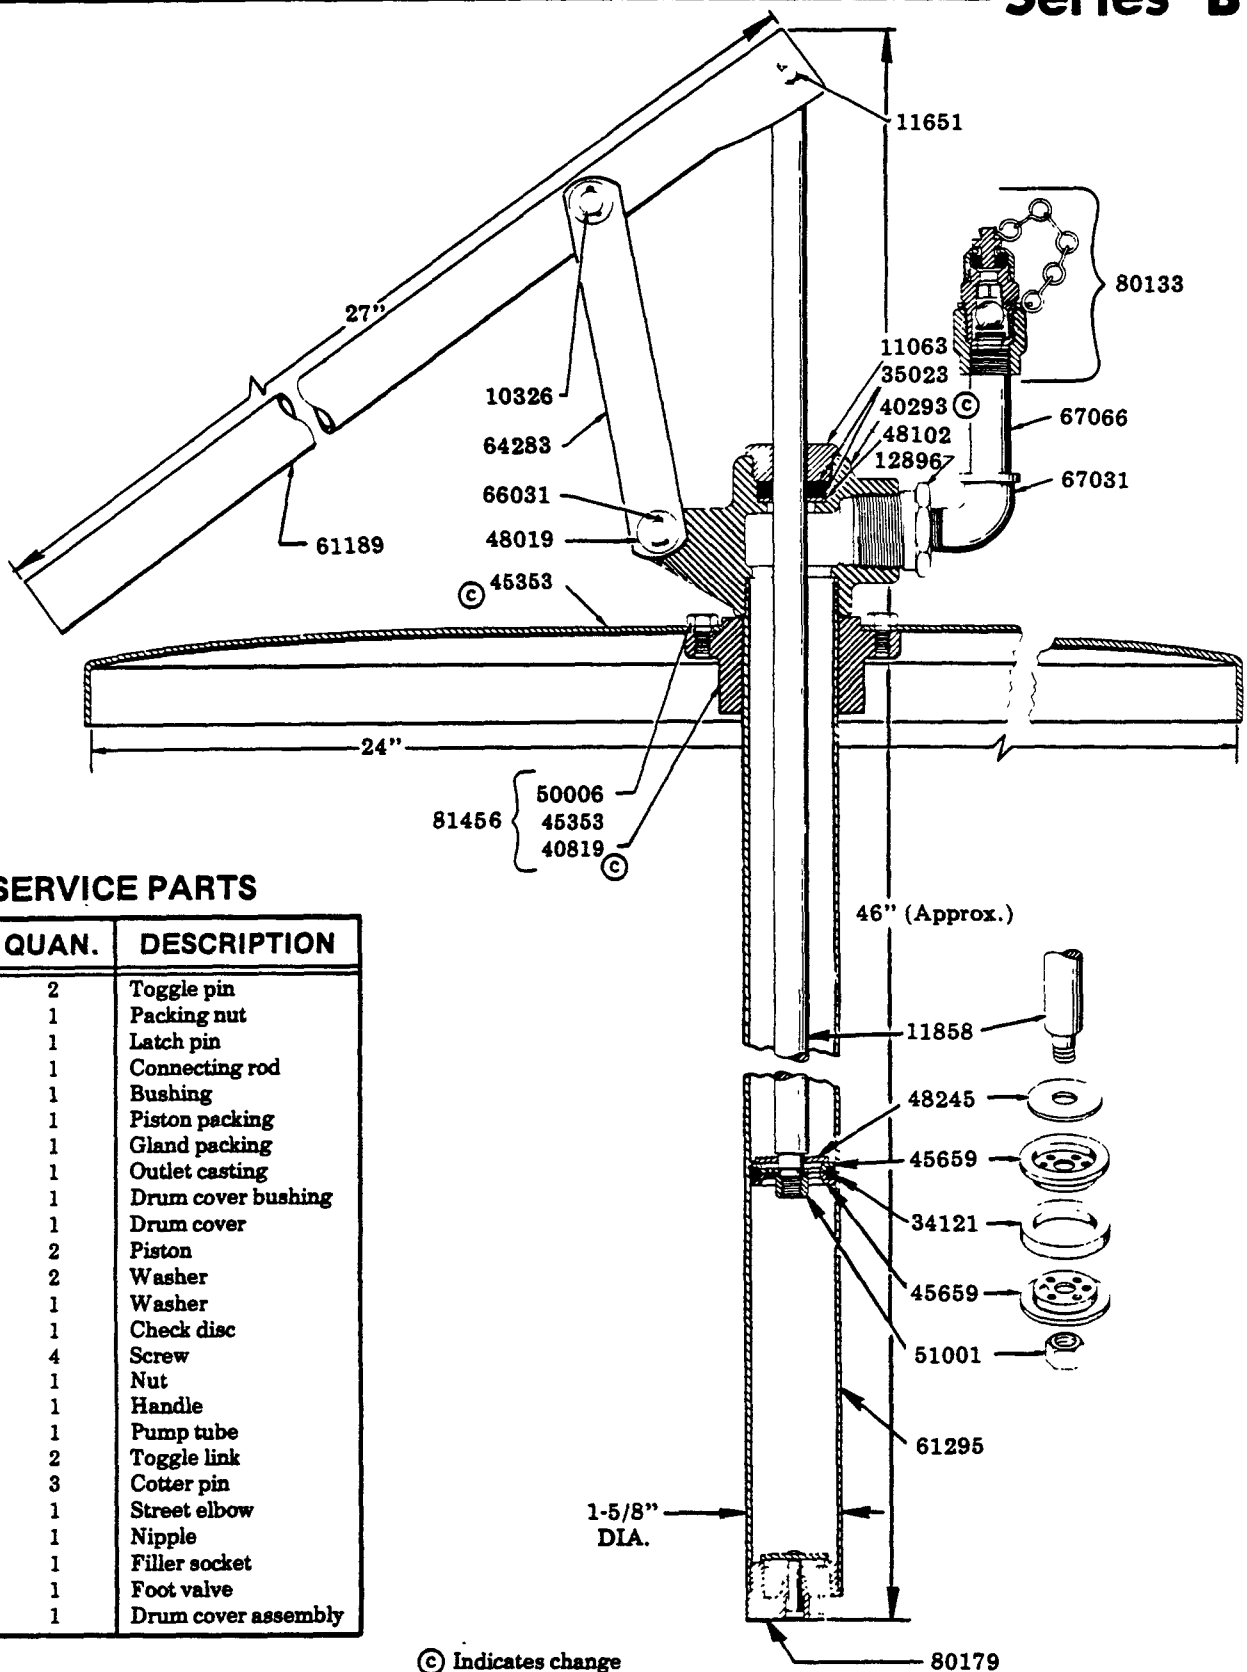

SERVICE PARTS

PART	QUAN.	DESCRIPTION
10326	2	Toggle pin
11063	1	Packing nut
11651	1	Latch pin
11858	1	Connecting rod
12896	1	Bushing
34121	1	Piston packing
35023	1	Gland packing
40293	1	Outlet casting
40819	1	Drum cover bushing
45353	1	Drum cover
45659	2	Piston
48019	2	Washer
48102	1	Washer
48245	1	Check disc
50006	4	Screw
51001	1	Nut
61189	1	Handle
61295	1	Pump tube
64283	2	Toggle link
66031	3	Cotter pin
67031	1	Street elbow
67066	1	Nipple
80133	1	Filler socket
80179	1	Foot valve
81456	1	Drum cover assembly


© Indicates change

LINCOLN

LINCOLN, One Lincoln Way
 St. Louis, Missouri 63120-1578
 (314) 679-4200 Customer Service, (314) 679-4300

SECTION - **B 1**
 PAGE - **2C**

OPERATING INSTRUCTIONS

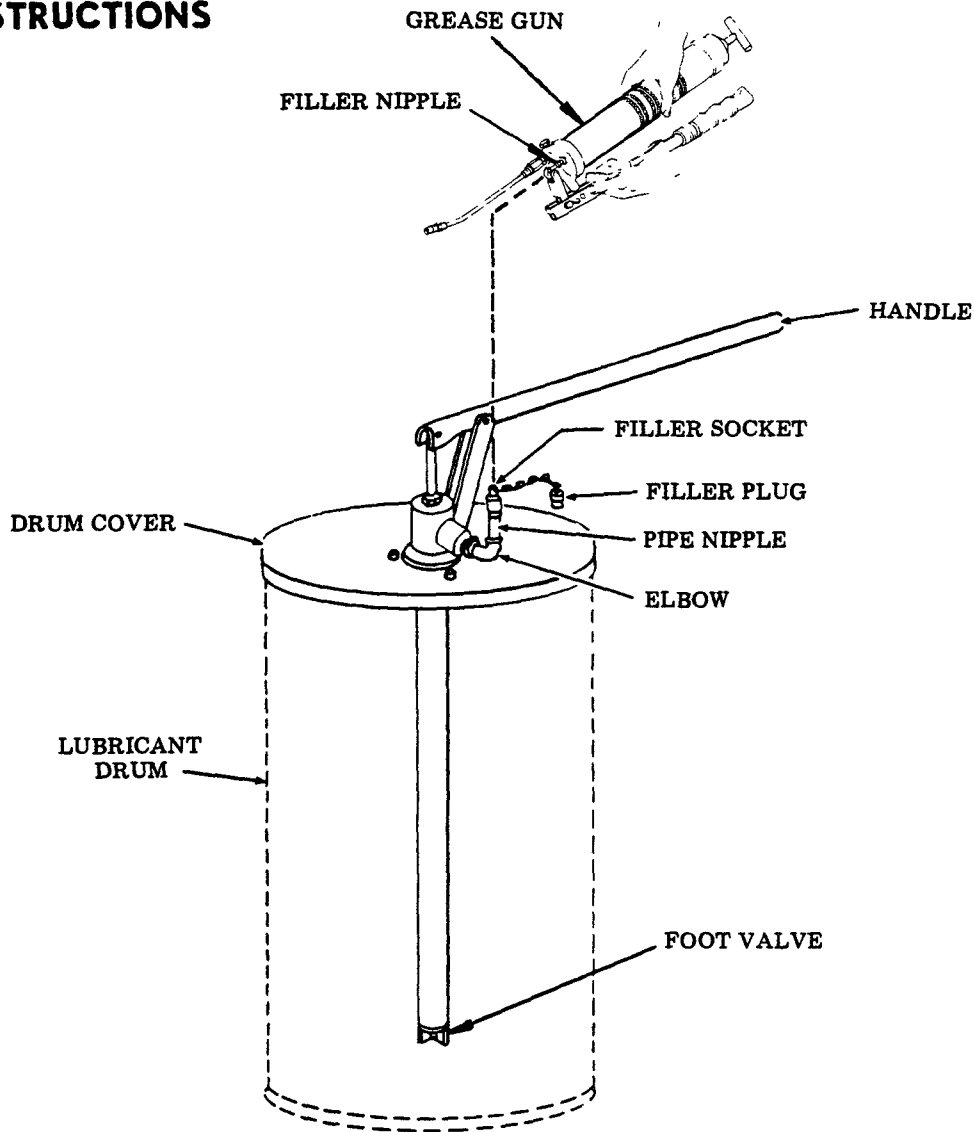

INITIAL PRIMING

It is necessary that the filler pump tube be filled completely with lubricant before attempting to fill a grease gun. To do this, remove the filler socket by unscrewing the pipe nipple from the elbow. Place the pump tube into a fresh drum of lubricant and operate the handle until the lubricant flows from the elbow. Replace the pipe nipple and filler socket.

After the filler pump is primed, the handle cannot be operated unless a filler nipple is inserted in the filler socket. When the filler pump loses its prime, the handle can be operated, which is an indication that the drum is empty. When changing the pump to a fresh drum of lubricant, it will seldom be necessary to reprime, as the pump tube will retain a sufficient volume of lubricant to prevent loss of prime.

The foot valve should be inspected and cleaned frequently, particularly when changing from one drum to another.

FILLER NIPPLE

Insert filler nipple into the filler socket permitting lubricant to enter the container of the grease gun on each down stroke of the pump handle.

CAUTION:

If the grease gun container to be filled is of the air-primed type, be sure to open the vent plug in the cover cap to permit the air to escape while loading.

RETAIN THIS INFORMATION FOR FUTURE REFERENCE

When ordering replacement parts, list: Part Number, Description, Model Number, and Series Letter.

LINCOLN ST. LOUIS provides a Distributor Network that stocks equipment and replacement parts.

A list of Authorized Service Departments will be furnished upon request.