

**82403
FILTER ASSEMBLY**

*** REFER TO SEPARATE INSTRUCTIONS**


| | | |
|-------|---|-------------|
| 82405 | 1 | Basic Pump |
| 2873 | 1 | Meter Ass'y |

SERVICE PARTS

| Part | Qty. | Description | Part | Qty. | Description |
|-------|------|-------------|--------|------|------------------------|
| 2873 | 1 | Meter Ass'y | 66060 | 4 | Caster |
| 11123 | 4 | Set screw | 80895 | 1 | Truck assembly |
| 45880 | 1 | Truck plate | 82403 | 1 | Filter assembly |
| 46007 | 1 | Drum cover | 82405 | 1 | Bare pump assembly |
| 48238 | 4 | Washer | 82409 | 1 | Nozzle & hose assembly |
| 50016 | 4 | Screw | 91265 | 1 | Hose assembly |
| 50018 | 2 | Screw | 93547 | 1 | Nozzle |
| 50037 | 3 | Screw | 360210 | 1 | Nozzle holder |
| 51010 | 2 | Nut | 360266 | 4 | Clamp |

TO ASSEMBLE DRUM COVER TO LUBRICANT DRUM

Position PUMP with DRUM COVER on Lubricant Drum. Be sure DRUM COVER is resting securely on bead of drum. ADJUSTING SCREWS are provided with Model. Thread SCREWS into TEE NUTS in DRUM COVER and tighten securely to Lubricant Drum.

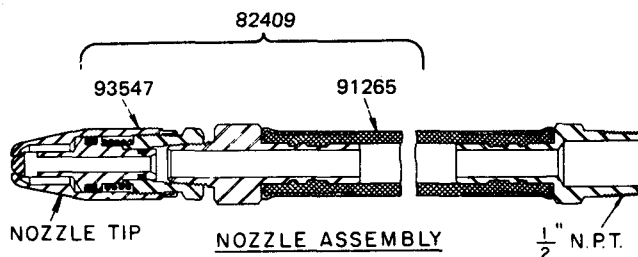

MODEL 82409 NON-DRIP NOZZLE ASSEMBLY

Before operating PUMP HANDLE first unscrew the NOZZLE TIP three or four full revolutions. Lubricant can then pass through the HOSE and NOZZLE ASSEMBLY when PUMP HANDLE is operated. When PUMP HANDLE is not in operation, a plunger in the NOZZLE TIP prevents the lubricant from draining out of the HOSE EXTENSION. The NOZZLE should always be closed when the PUMP is not being used. To close NOZZLE turn the NOZZLE TIP clockwise and tighten by hand.

If lubricant continues to flow from NOZZLE TIP after PUMP is not in operation the PLUNGER or SEAT for PLUNGER is worn, pitted or otherwise damaged. Tighten and retighten NOZZLE TIP two or three times with pliers to reseat PLUNGER.

————— RETAIN THIS INFORMATION FOR FUTURE REFERENCE —————

When ordering replacement parts, list: Part Number, Description, Model Number, and Series Letter.

LINCOLN provides a Distributor Network that stocks equipment and replacement parts.