


## Model No. 538 PORTABLE GEAR LUBE DISPENSER

MANUALLY OPERATED (120 LB. DRUM SIZE)

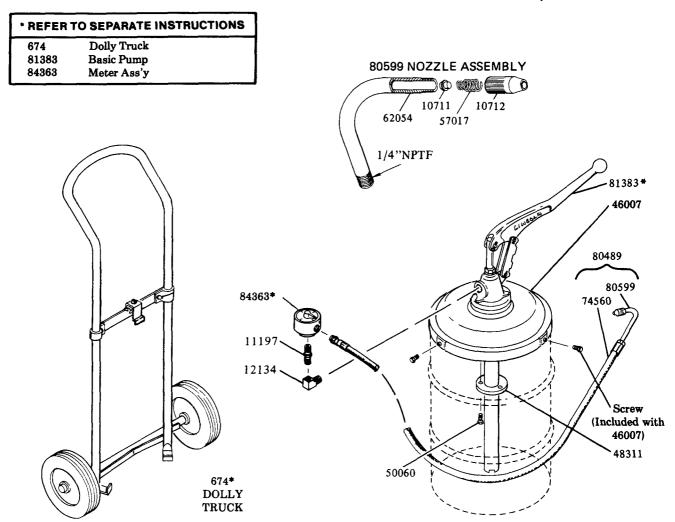


## **SERVICE PARTS**

Part	Qty.	Description
674	1	Dolly Truck
10711	1	Nozzle check
10712	1	Nozzle tip
11197	1	Adapter
12134	1	Elbow
46007	1	Drum cover
48311	1	Reinforcing washer
50060	3	Screw
57017	1	Spring
62054	1	Nozzle tube
74560	1	Hose
80489	1	Hose & nozzle assembly
80599	1	Nozzle assembly
81383	1	Bare pump assembly
84363	1	Meter Ass'y



One Lincoln Way St Louis, MO 63120-1578 (314) 679-4200

© Copyright 1991 Printed in USA SECTION - B3
PAGE - 20

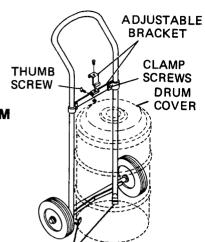

LŰGS

## **INSTRUCTIONS FOR CLAMPING DOLLY TRUCK DRUM**

- Set drum over lugs.
   Loosen clamp screws.
   Adjust bracket to clamp drum.
   Clamp adjustable bracket to angle clip on
- drum cover.
  5) Tighten clamp screws and thumb screw to hold drum.

When ordering replacement parts, list: Part Number, Description, Model Number, and Series Letter. LINCOLN provides a Distributor Network that stocks equipment and replacement parts.