


**SERVICE PARTS**

Part	Qty.	Description
10472	3	Toggle pin
10943	1	Piston seat cap
12883	1	Piston seat
13852	1	Connecting rod
34067	1	Packing
34166	1	O-ring
34228	1	Piston packing
40067	1	Handle
40501	1	Cylinder head
41208	1	Piston
45744	1	Toggle
48039	2	Washer
48140	1	Packing washer
55368	1	Piston spring
61410	1	Pump tube
62218	1	Air expeller tube
66031	3	Cotter pin
91819	1	Foot valve assembly

## SERVICE OF LOWER PUMP TUBE

### Loss of volume or pressure indicates:

- A. Foreign material lodged in FOOT VALVE or between PISTON and PISTON SEAT. To remedy remove and clean.
- B. PISTON PACKING or ROD PACKING worn or damaged. Before replacing PISTON PACKING examine inside of PUMP TUBE for rough surface. PISTON ROD surface contacting the 34166 O-RING must be smooth.

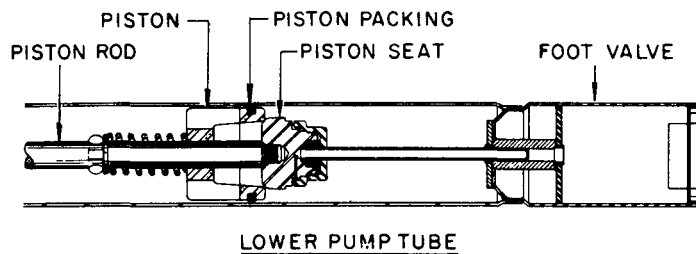

————— **RETAIN THIS INFORMATION FOR FUTURE REFERENCE** —————

When ordering replacement parts, list: Part Number, Description, Model Number, and Series Letter.

LINCOLN provides a Distributor Network that stocks equipment and replacement parts.