


PORTABLE - 120 LB. DRUM SIZE

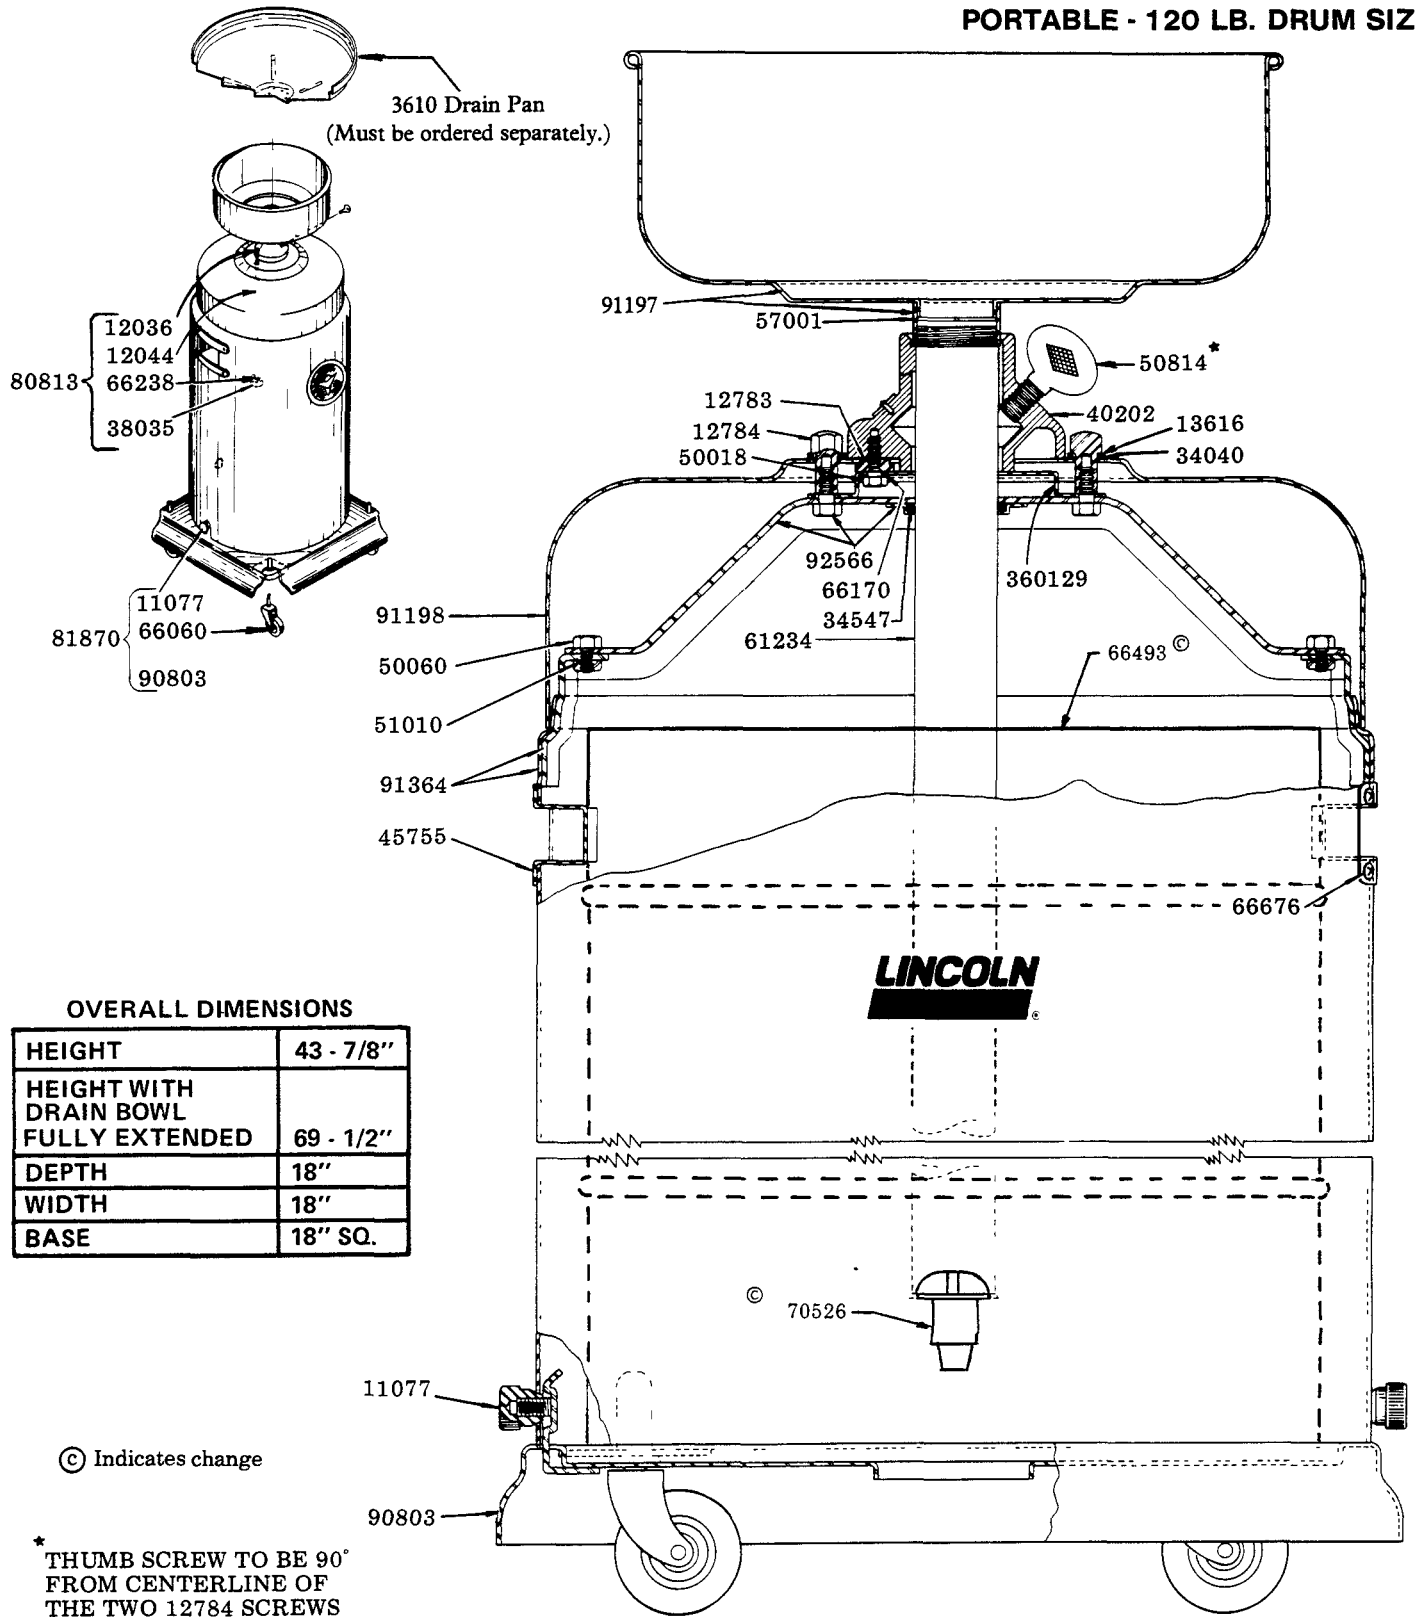


**OVERALL DIMENSIONS**

HEIGHT	43 - 7/8"
HEIGHT WITH DRAIN BOWL FULLY EXTENDED	69 - 1/2"
DEPTH	18"
WIDTH	18"
BASE	18" SQ.

© Indicates change

\* THUMB SCREW TO BE 90° FROM CENTERLINE OF THE TWO 12784 SCREWS

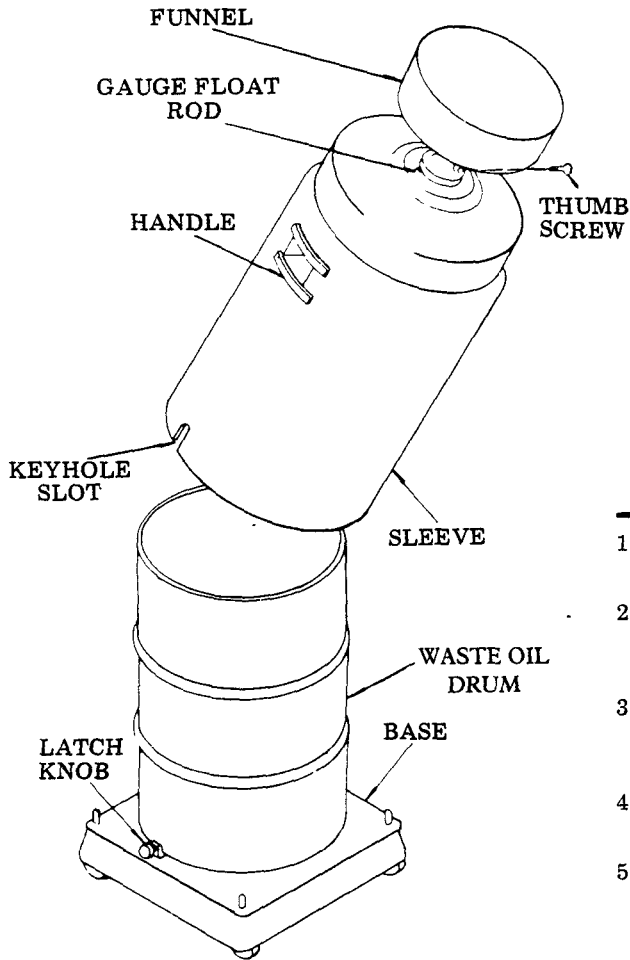

## GENERAL INSTRUCTIONS

FUNNEL CAN BE ADJUSTED TO HEIGHT REQUIRED AND IS HELD IN POSITION BY THE THUMB SCREW.

GAUGE FLOAT ROD RAISES WITH LEVEL OF OIL AND INDICATES WHEN DRUM IS FULL.

## TO CHANGE WASTE OIL DRUM

1. Loosen the two LATCH KNOBS at the BASE several turns to release the SLEEVE from BASE.
2. Lift SLEEVE from BASE raising it high enough to clear LUBRICANT DRUM. The two INDENTED HANDLES in SLEEVE provide a convenient means of lifting the SLEEVE.
3. Empty drum should then be placed centrally on the BASE. Avoid bumping LATCH KNOBS when placing LUBRICANT DRUM on BASE.
4. Replace the SLEEVE on the BASE being careful in guiding the KEYHOLE SLOTS on to the LATCH KNOBS.
5. Tighten LATCH KNOBS securely so that SLEEVE is clamped firmly to the BASE.

## SERVICE PARTS

PART	QUAN.	DESCRIPTION	PART	QUAN.	DESCRIPTION
11077	2	Knob	61234	1	Drain tube
12036	1	Gauge rod knob	66060	4	Caster
12044	1	Gauge rod	66170	4	Lockwasher
12783	4	Spacer	66238	2	Speed nut
12784	2	Cover cap nut	66493	1	15 Gallon drum
13616	2	Washer	66676	8	Self-tapping screw
34040	2	Gasket			
34547	1	O-ring	70526	1	Faucet assembly
38035	1	Gauge rod floater	80813	1	Gauge rod float ass'y.
40202	1	Guide casting	81870	1	Truck assembly
45755	2	Handle	90803	1	Base unit
50018	4	Screw	91197	1	Funnel
50060	2	Screw	91198	1	Sleeve cover
50814	1	Thumb screw	91364	1	Sleeve
51010	2	Nut	92566	1	Support channel ass'y.
57001	1	Catch spring	360129	1	Mounting bracket

### RETAIN THIS INFORMATION FOR FUTURE REFERENCE

When ordering replacement parts, list: Part Number, Description, Model Number, and Series Letter.

LINCOLN provides a Distributor Network that stocks equipment and replacement parts.