# SEMI-AUTOMATIC CONTROL ASSEMBLY



## Model 83847

#### DESCRIPTION

The Model 83847 Control Assembly is a semi-automatic, manually timed, automatically controlled pneumatic pump control incorporating a three-way valve and an adjustable pressure sensitive latching system. This control does not require electrical current for its operation and can be used in damp atmospheres where electrical controls could provide electrical shock to the operator or in a potentially explosive atmosphere because of the absence of electrical sparking. Application for the 83847 Control Assembly would be for a Centro-Matic Lubrication System or any system designed to pump lubricant to a given pressure (factory set between 2300 to 2700 PSIG) and then shut down the air supply to the pump. A typical application is illustrated below:

#### **OPERATION**

The Control Assembly is actuated by depressing the control valve knob to the down position until it latches in place. This closes the air exhaust port and opens the air inlet port, allowing air to pass through the control to operate the pump and close the vent valve. After lubrication cycle, lubricant pressure in system continues to build up until at the pre-set pressure, the plunger in the pressure control moves and trips the latch, allowing the control valve knob to return to the up position, thereby shutting off the air to the pump and opening the vent valve. Air in the valve exhausts through the air exhaust port.

NOTE: The pressure control is adjustable through a hydraulic range of 1500 to 3500 PSIG. Pressure adjustment is made by turning the 13462 housing clockwise to increase pressure or counterclockwise to decrease pressure.

The Model 83847 Control Assembly should not be operated at air pressure in excess of 150 PSIG.

### **SERVICE PARTS**

	PART	QUAN.	DESCRIPTION
	12360	1	Spacer
	12817	3	Packing spacer
	12818	2	Packing retainer
	13448	1	Spring guide
	13462	1	Housing
	13464	1	Pin
	13465	ī	Nut
	13474	î	Pin
	13499	î	Pressure control body
	14785	ī	Valve body
	14786	1	Valve stem
	14787	ī	Valve plunger
	14788	1	Adapter
į	34110	3	Plunger packing
	41200	1	Knob
	50131	3	Screw
	50524	1	Set screw
	50632	4	Screw
	55317	i	Spring
	56117	1	Spring
	57125	1	Torsion spring
	67054	ī	Street ell
i	67272	1	Nozzle tube
	67340	1	Pipe coupling
	90924-2	ī	Packing assembly
ļ	92489	1	Box assembly
1	360552	1	Latch
	360553	1	Panel box cover


CONTROL VALVE KNOB 83847 CONTROL ASSEMBLY AIR EXHAUST PORT AIR SUPPLY LUBRICANT LINE TO PRESSURE LINE UBRICANT SUPPLY LINE TO INJECTOR CIRCUIT AIR TO PUMP NOTE: This system requires a standard air-operated vent valve to vent lubricant pressure after lubrication cycles.

> LINCOLN ST. LOUIS 4010 GOODFELLOW BLVD. • ST LOUIS, MO. 63120 • (314) 383-5900



SECTION -C8

PAGE -137A

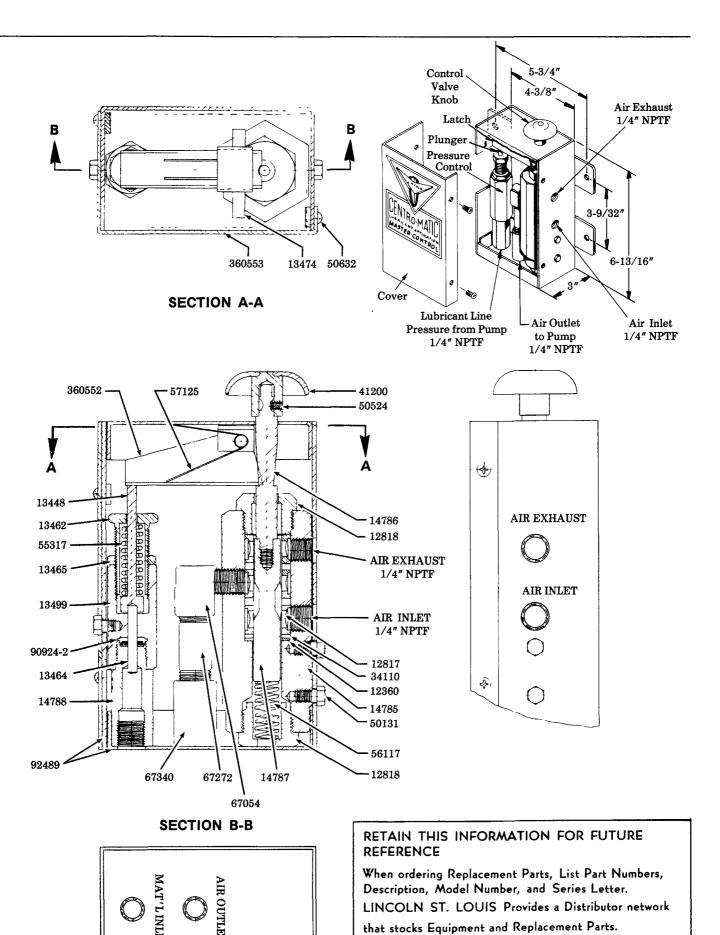

request.

Repairs by Authorized Service Depts. List furnished upon