


OUTPUT; Adjustable from .001 cu. in. to .003 cu. in.  
 OPERATING PRESSURE; 1200 psi to 3500 psi  
 RECHARGE PRESSURE; 200 psi  
 For dispensing oil or grease having a consistency not exceeding NLGI grade No. 1.

**STAINLESS STEEL  
 FOR SL-31 MANIFOLD**

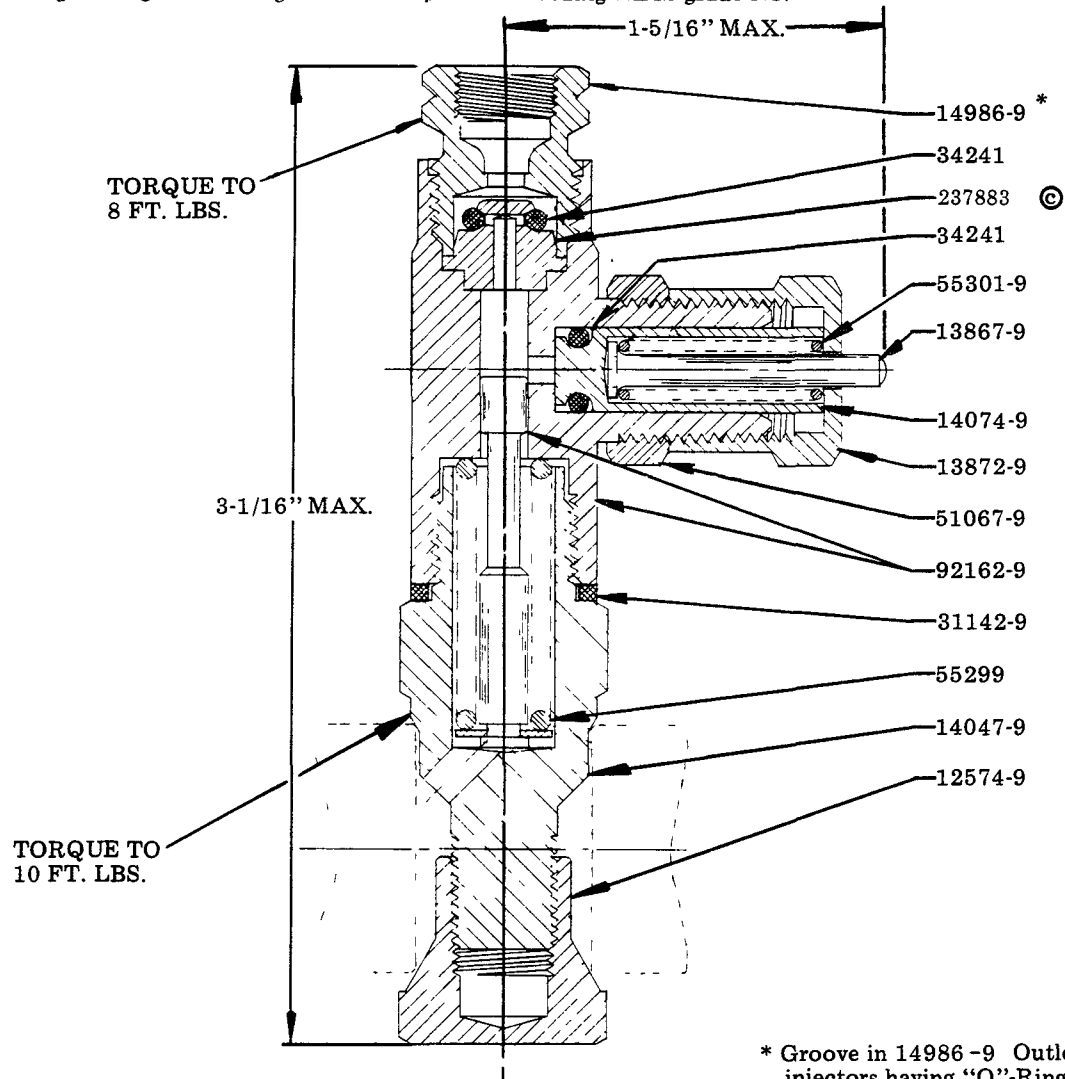


\* Groove in 14986-9 Outlet Body identifies injectors having "O"-Ring Outlet Check.

### SERVICE PARTS

Part	Description
12574-9	Manifold Nut
13867-9	Injector Indicator
13872-9	Injector Cap
14047-9	Injector Inlet Adapter
14074-9	Packing Retainer
14986-9	Outlet Body
237883	Check Seat
31142-9	Gasket
34241	"O" Ring
51067-9	Lock Nut
55299	Spring
55301-9	Spring
92162-9	Body & Plunger Assembly

© INDICATES CHANGE

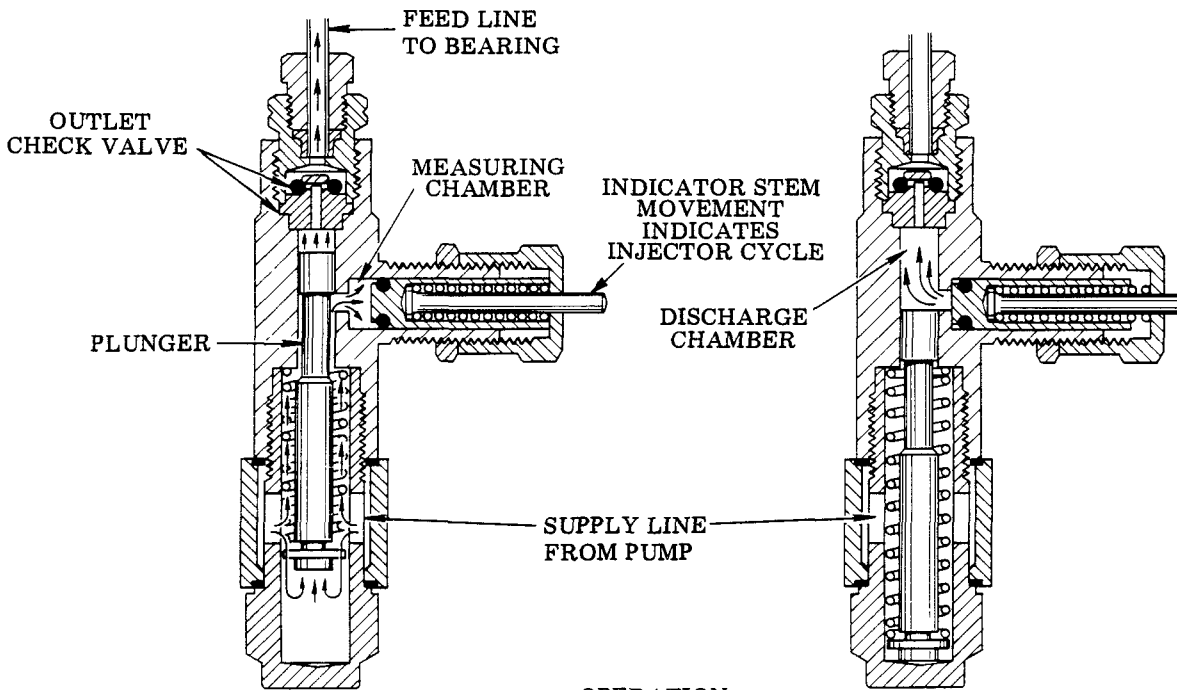

OPERATION

**SUPPLY LINE UNDER PRESSURE**

(Normal operating pressure 1500 P.S.I.G.)

Lubricant pressure moves plunger to force lubricant in the discharge chamber through the outlet check valve to the feed line.

Lubricant from supply line charges the measuring chamber.

**SUPPLY LINE VENTED**

(Vent pressure 200 P.S.I.G. maximum)

Plunger returns to normal position after supply line is vented, connecting measuring chamber to the discharge chamber. Flow from feed line is blocked by the outlet check valve.

Lubricant is automatically transferred from measuring chamber to discharge chamber.

**INJECTOR ADJUSTMENT**


Injector output is controlled by the position of the indicator cap which limits the travel of the packing retainer.

With the indicator cap hand tightened against its stop, the lubricant output is decreased to a minimum.

Retracting the indicator cap two full turns permits a maximum of .003 cu. in. to be dispensed.

Retracting the indicator cap beyond two full turns will not increase the lubricant output.

When the injector has been adjusted for the proper lubricant output, the lock nut is tightened against the face of the indicator cap.

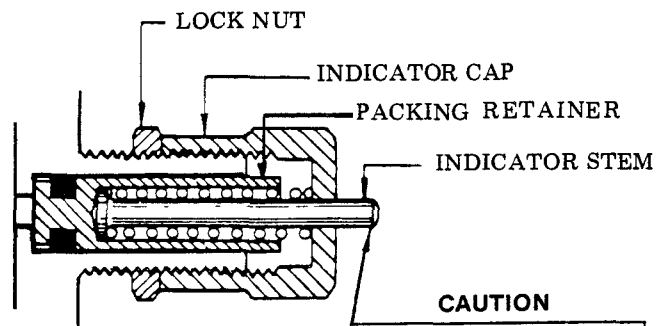

**CAUTION**

INDICATOR CAP MUST NOT EXTEND BEYOND RETRACTED POSITION OF INDICATOR STEM

**RETAIN THIS INFORMATION FOR FUTURE REFERENCE**

When ordering replacement parts, list: Part Number, Description, Model Number, and Series Letter.

LINCOLN provides a Distributor Network that stocks equipment and replacement parts.