


SPECIFICATIONS

OUTPUT:.....Adjustable from .001 cu. in. to .003 cu. in.
OPERATING PRESSURE:1200 psi to 3500 psi
† RECOMMENDED OPERATING PRESSURE:1500 psi
RECHARGE PRESSURE:200 psi
For dispensing oil or grease having a consistency not exceeding NLGI grade No. 2.
† 2500 psi when used in combination with series SL-1 Injectors.

STAINLESS STEEL


MANIFOLD CHART

Model	Description	Dimensions		Manifold
		A	B	
83715-1	1 Unit	1-1/8"	1-5/8"	91863-9
83715-2	2 Unit	1-7/8"	2-3/8"	91864-9
83715-3	3 Unit	2-5/8"	3-1/8"	91865-9
83715-4	4 Unit	3-3/8"	3-7/8"	14339-9
83715-6	6 Unit	4-7/8"	4-7/8"	14357-9
83715-7	7 Unit	5-5/8"	6-1/8"	14358-9

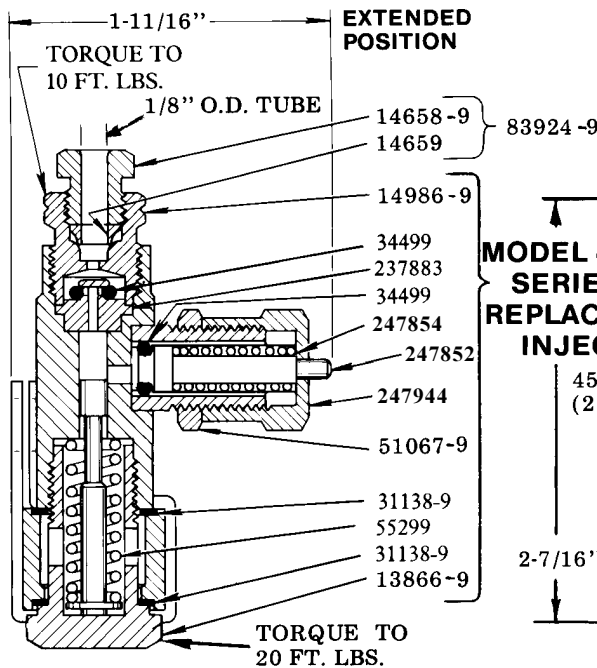


**MODEL 83314-9
SERIES "D"
REPLACEMENT
INJECTOR**

45924-9
(2 REQ'D.)

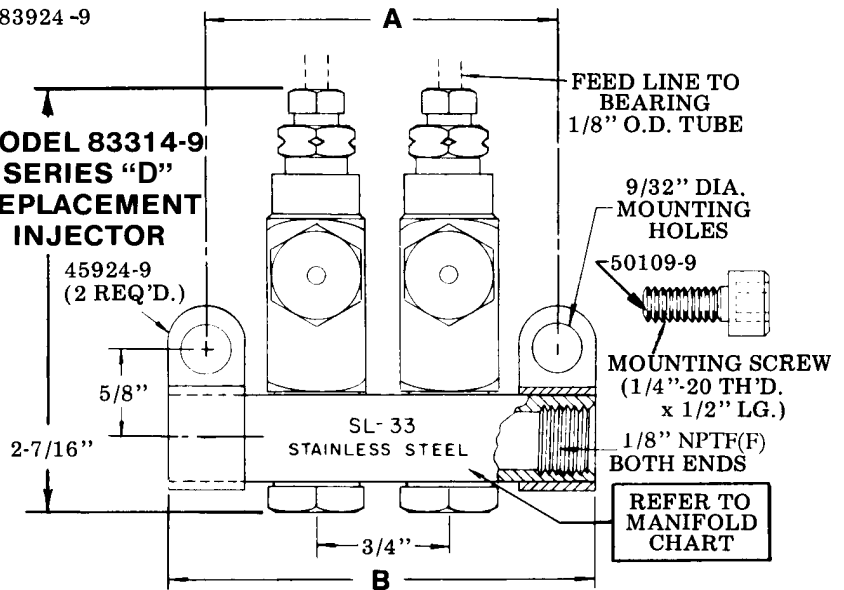

SERVICE PARTS

Model	Qty.	Description
13866-9	1	Adapter
14181-9	1	Injector inlet adapter
14658-9	1	Compression nut
14659	1	Ferrule
14986-9	1	Outlet body
+*31138-9	2	Gasket
+*31142-9	1	Gasket
+*34499	2	O-ring (Nitrile)
45924-9	2	Manifold mounting clip
50109-9	2	Mounting screw
51067-9	1	Locknut
+*55299	1	Spring
83924-9	1	Compression nut assembly
+*237883	1	Check seat
+ 247852	1	Piston
+*247854	1	Spring
+ 247944	1	Injector Cap

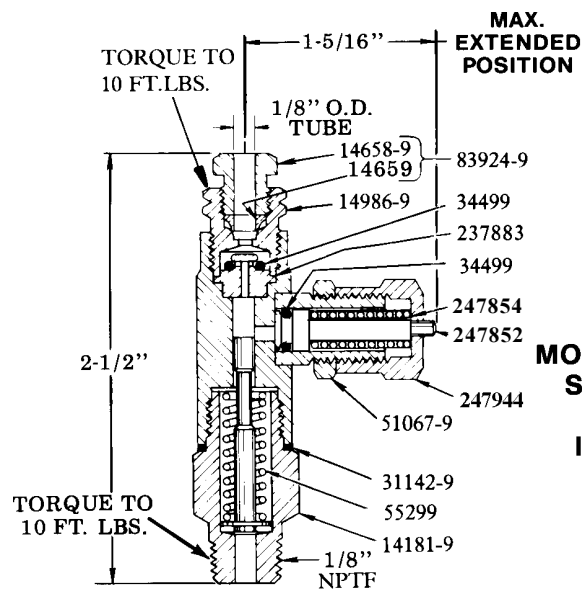


NOTE:
Injectors from previous series can be improved with stenciled cap and single piece piston by use of 247953 upgrade kit.

**MODEL 83900-9
SERIES "D"
SINGLE
INJECTOR**

* Included in 247960 Repair Kit

+ Included in 247953 Upgrade Kit

© Indicates Change

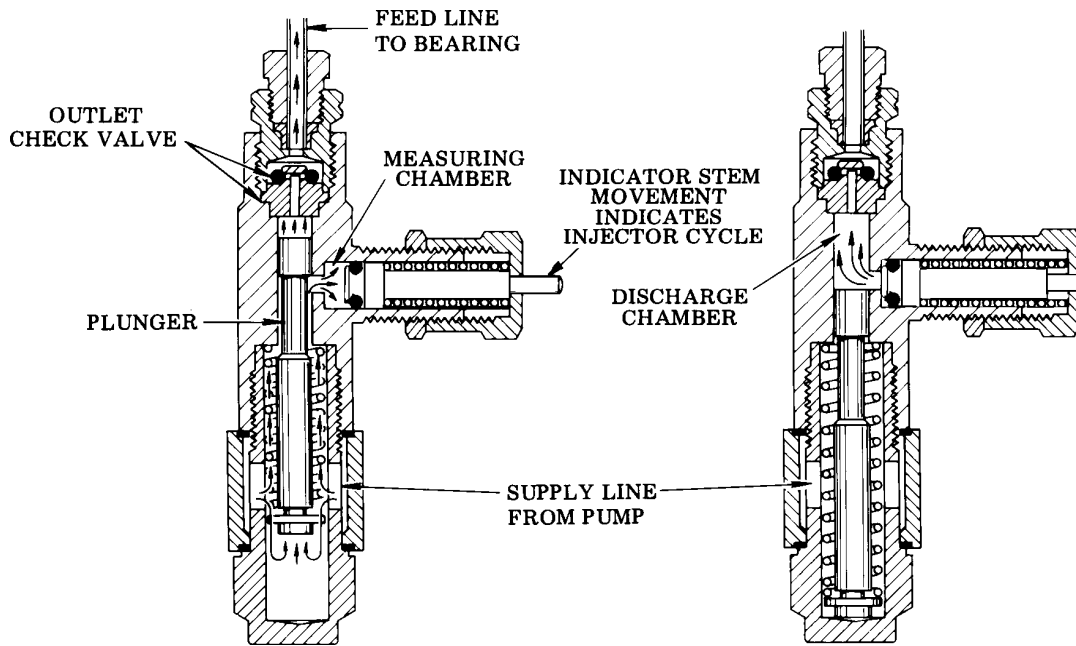

OPERATION

SUPPLY LINE UNDER PRESSURE

(Normal operating pressure 1500 psi)

Lubricant pressure moves plunger to force lubricant in the discharge chamber through the outlet check valve to the feed line.

Lubricant from supply line charges the measuring chamber.

SUPPLY LINE VENTED

(Vent pressure 200 psi maximum)

Plunger returns to normal position after supply line is vented, connecting measuring chamber to the discharge chamber. Flow from feed line is blocked by the outlet check valve.

Lubricant is automatically transferred from measuring chamber to discharge chamber.


INJECTOR ADJUSTMENT

Injector output is controlled by the position of the indicator cap which limits the travel of the indicator piston.

With the indicator cap hand tightened against its stop, the lubricant output is decreased to a minimum.

Retracting the indicator cap two full turns permits a maximum of .003 cu. in. to be dispensed. **Use the graduations on the cap as an aid in setting the indicator.**

When the injector has been adjusted for the proper lubricant output, the lock nut is tightened against the face of the indicator cap.

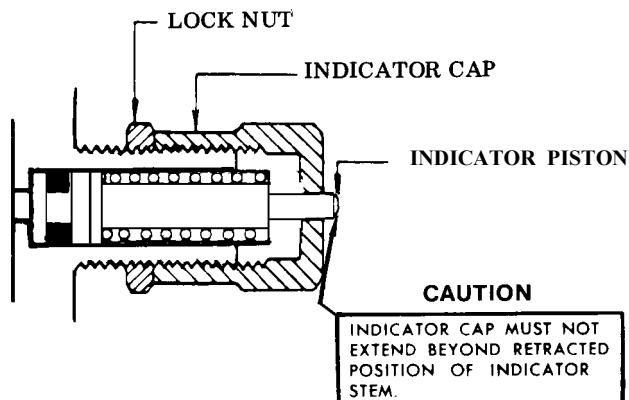

RETAIN THIS INFORMATION FOR FUTURE REFERENCE

When ordering replacement parts, list: Part Number, Description, Model Number and Series Letter. LINCOLN provides a Distributor Network that stocks equipment and replacement parts.