


Cabinet and Mounting Rails:
Refer to Service Manual, Section E35, Page 38 Series

MODEL 82674
Motor Oil, Gear Oil, A.T.F., Air

MODEL 82679
Chassis Lubricant

* Assemble with countersunk end toward latch side of reel.

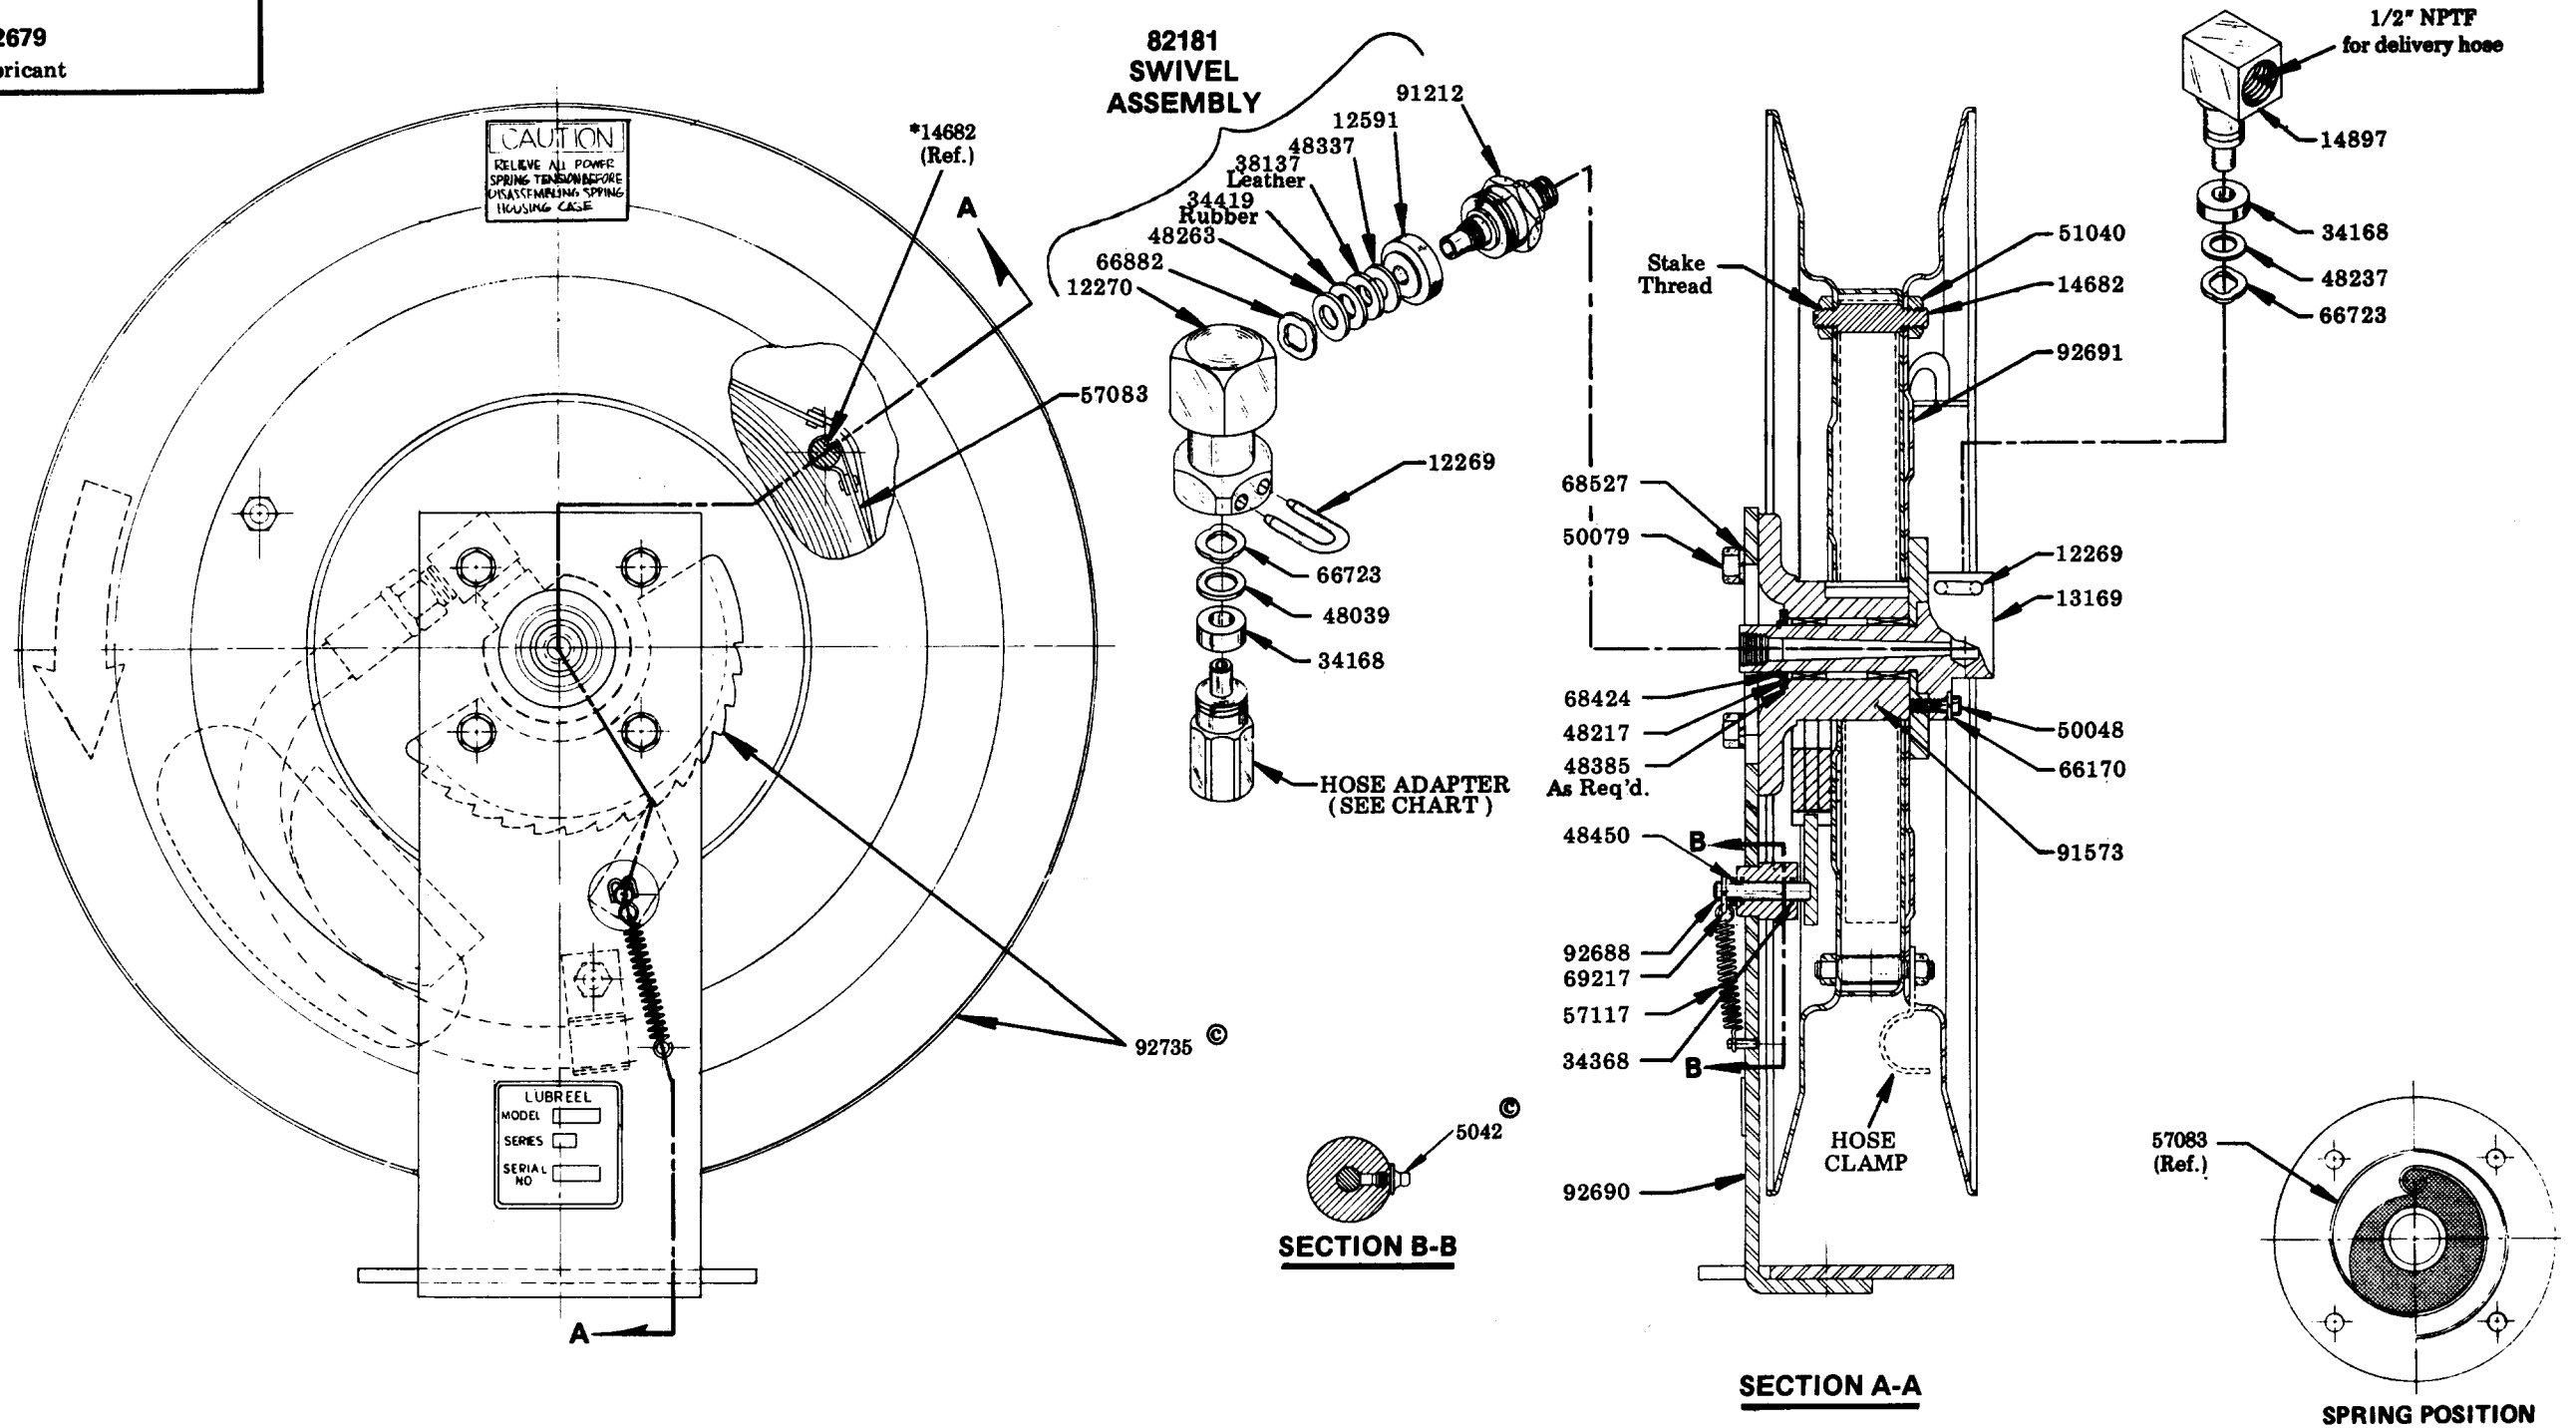

NOTE:
57083 Power Spring is banded for safety.


CAUTION

For added safety, when replacing spring or removing it for any reason from spring housing, the spring should be wired securely in at least three places.

© Indicates Change

BASIC LUBREEL	HOSE ADAPTER
82674	12271 1/2" NPTF FEMALE
82679	12498 1/2"-27 MALE

ADAPTERS FOR DELIVERY AND CONNECTING HOSES

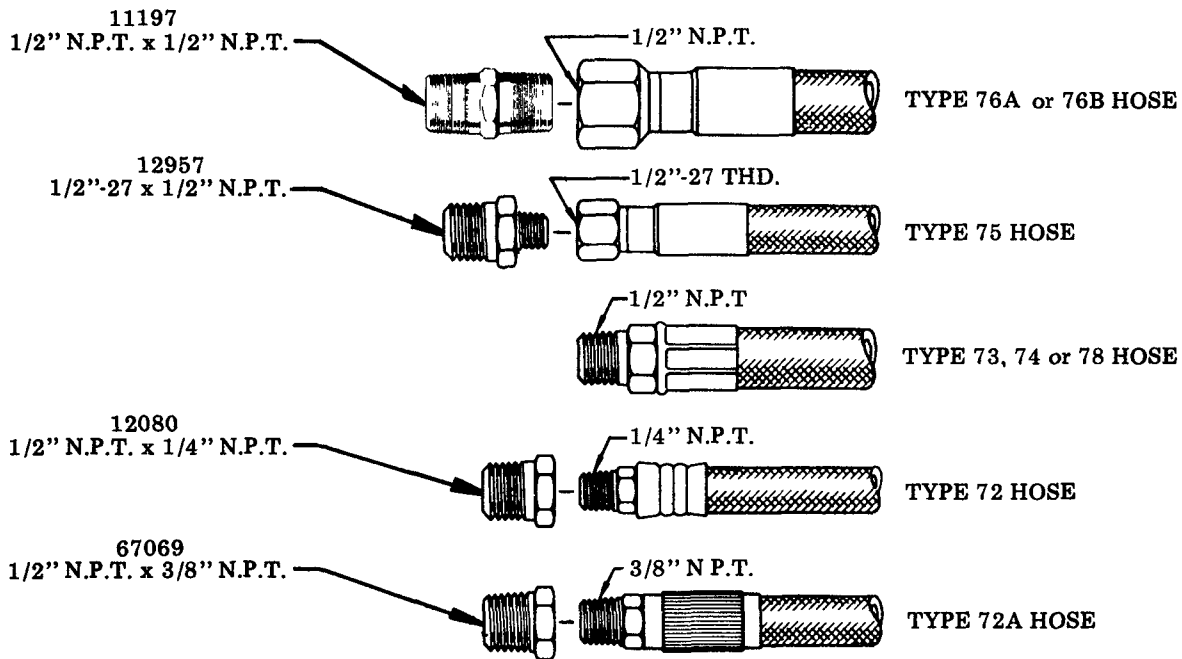

SERVICE PARTS

PART	QUAN.	DESCRIPTION	PART	QUAN.	DESCRIPTION
5042	1	Straight lubricant fitting	50048	3	Screw
12269	2	Keeper	50079	4	Screw
12270	1	Swivel body	51040	6	Nut
12591	1	Retainer	57083	1	Power spring
13169	1	Shaft	57117	1	Spring
14682	3	Stud	66170	3	Lockwasher
14897	1	Adapter	66723	2	Spring washer
34168	2	Packing	66882	1	Spring washer
34368	2	O-ring	68424	1	Retaining ring
34419	1	Packing (rubber)	68527	4	Lockwasher
38137	1	Packing (leather)	69217	1	Cotter pin
48039	1	Washer	82181	1	Swivel assembly
48217	1	Washer	91212	1	Swivel stud assembly
48237	1	Washer	91573	1	Arbor assembly
48263	1	Washer	92688	1	Pawl assembly
48337	1	Washer	92690	1	Support assembly
48385	4	Shim washer	92691	1	Sheave assembly
48450	1	Washer	92735	1	Sheave assembly

RETAIN THIS INFORMATION FOR FUTURE REFERENCE

When ordering replacement parts, list: Part Number, Description, Model Number, and Series Letter
 LINCOLN ST LOUIS provides a Distributor Network that stocks equipment and replacement parts
 A list of Authorized Service Departments will be furnished upon request