



IMPORTANT:
Before meter can be placed in service "after repair", meter must be tested and approved in accordance with U.S. Government's weights and measures standards.

MODEL	2870 (Pint)	2873 (Liter)
CHAMBER & PISTON ASSEMBLY	66871-25	66871-78
SHROUD	66871-85	70501-1
UPPER DRIVING PAWL SPINDLE & GEAR	66871-102	66871-105
DIAL	68314	66871-90

SERVICE PARTS

PART	QUAN.	DESCRIPTION
41204	1	Housing cap
50540	1	Set screw
66871-1	1	Set screw
66871-3	2	Reset knob roller retaining spring
66871-4	2	Reset knob clutch roller
66871-5	2	Shroud screw
66871-8	1	Reset knob plunger spring
66871-9	1	Reset knob plunger
66871-11	1	Housing
66871-12	1	Housing cap gasket
66871-23	1	Packing box gland nut
66871-33	1	Stuffing box assembly
66871-92	1	Filter screen
66871-95	1	Reset lock cam
66871-98	1	Clutch retainer sleeve
66871-128	1	Reset knob

————— **RETAIN THIS INFORMATION FOR FUTURE REFERENCE** —————

When ordering replacement parts, list: Part Number, Description, Model Number, and Series Letter.

LINCOLN ST. LOUIS provides a Distributor Network that stocks equipment and replacement parts.

A list of Authorized Service Departments will be furnished upon request.