



Model Nos. 81911, 81914 **HYDRO-MEASURE** & VALVE Series "H"

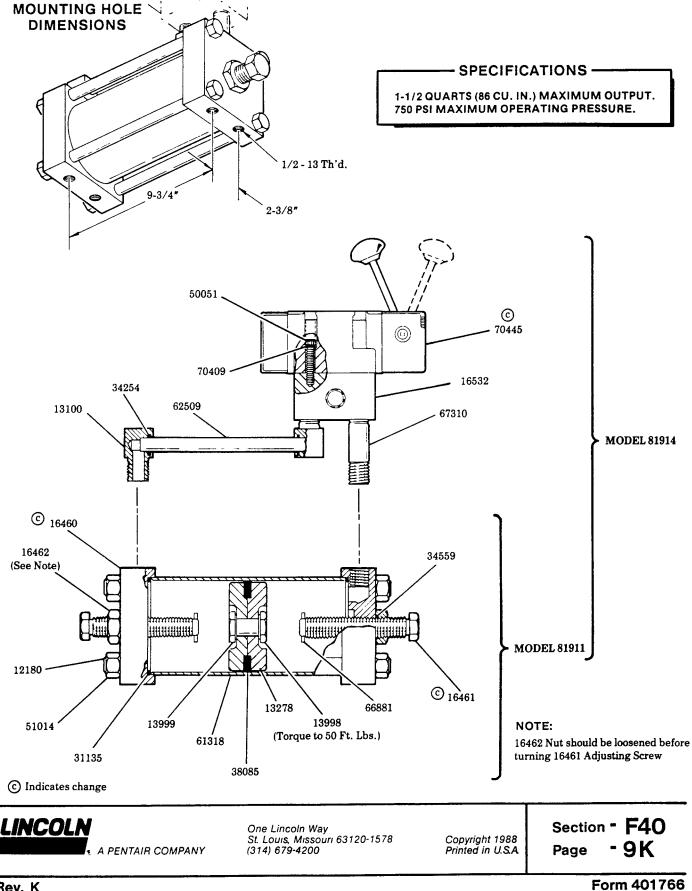

MEASURING CONTAINER (Diagrammatic View)

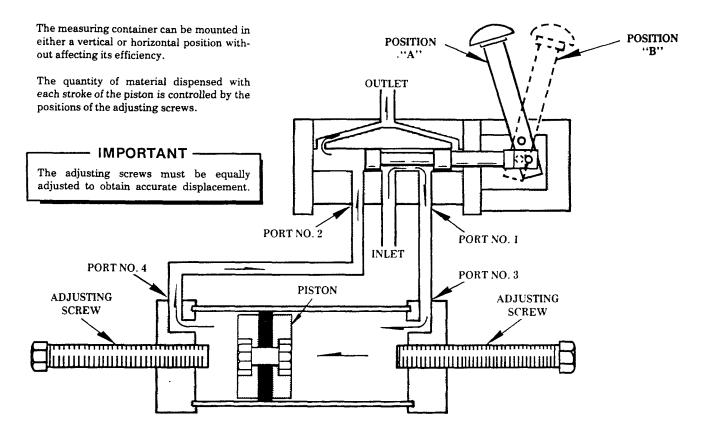

OPERATION

When handle is in position "A", a passage is opened between the inlet and port no. 1 of the four way valve, permitting the material to flow through the four way valve and into the right end of the measuring chamber through port no. 3. This forces the piston to the left end of the measuring chamber, discharging a measured amount of material through port no. 4 of the measuring chamber to port no. 2 of the four way valve and on through the valve outlet.

When handle is in position "B", a passage is opened between the inlet port and port no. 2 of the four way valve, permitting the material to flow from the pump through the four way valve to the left end of the measuring chamber through port no. 4. This forces the piston to the right end of the measuring chamber, discharging a measured amount of material through port no. 1 of the four way valve and on through the valve outlet.

| Part | Qty. | Description | Part | Qty. | Description |
|-------|------|------------------|-------|------|------------------------|
| 12180 | 4 | Tie rod | 34559 | 2 | O-ring |
| 13100 | 2 | Elbow | 38085 | 2 | Piston packing |
| 13278 | 2 | Piston washer | 50051 | 4 | Screw |
| 13998 | 1 | Follower screw | 51014 | 8 | Nut |
| 13999 | 1 | Nut | 61318 | 1 | Cylinder |
| 16460 | 2 | End plate | 62509 | 1 | Tube |
| 16461 | 2 | Adjustment screw | 66881 | 2 | Roll pin |
| 16462 | 2 | Nut | 67310 | 1 | Nipple |
| 16532 | 1 | Baseplate | 70409 | 4 | Lockwasher |
| 31135 | 2 | Gasket | 70445 | 1 | Four-way valve |
| 34254 | 2 | O-ring | 81911 | 1 | Hydro-measure assembly |

SERVICE PARTS

