






# Model Nos. 1273A, 1273C, 1273D BUCKET PUMP Series "G"

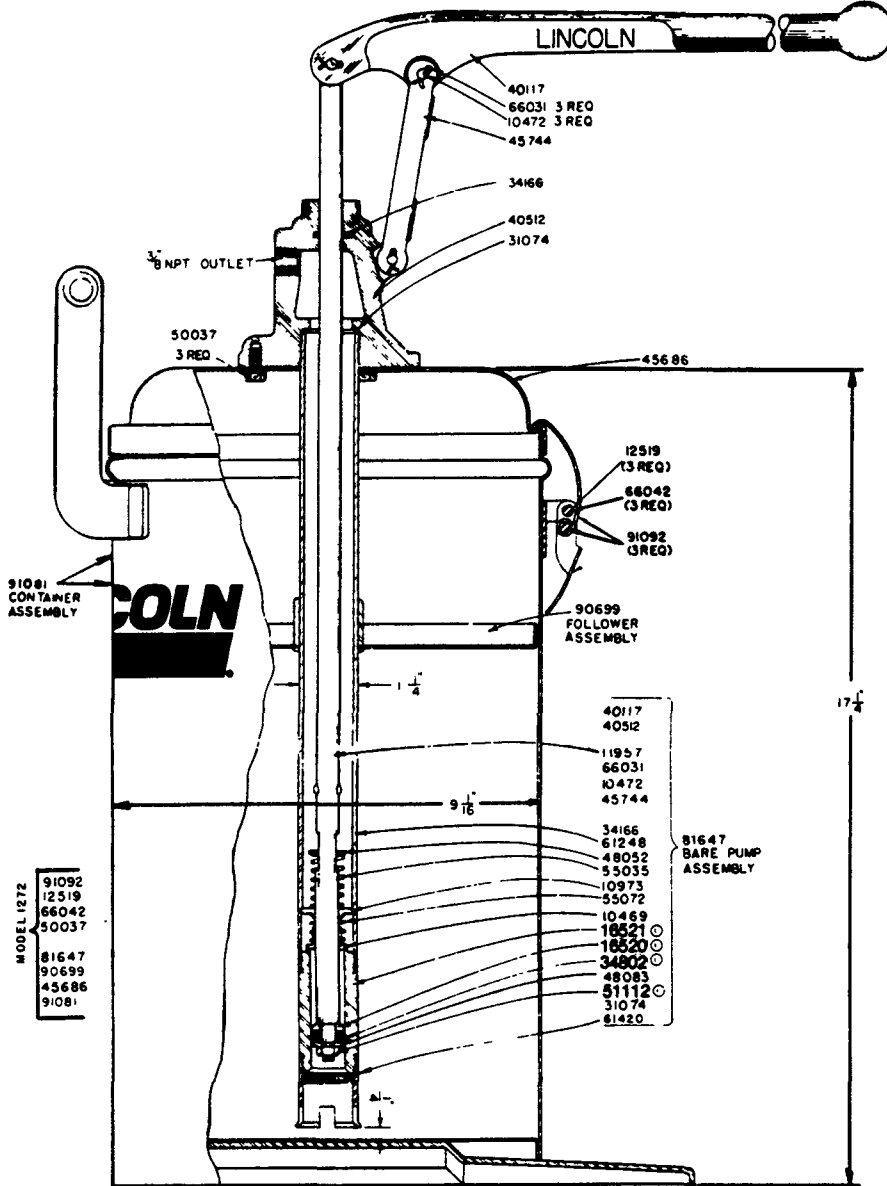


**HIGH PRESSURE  
(30 LB. LUBRICANT CAPACITY)**

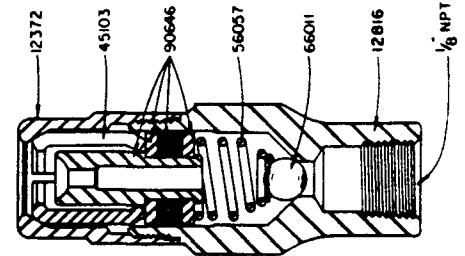


**5845  
HYDRAULIC COUPLER  
USED WITH MODELS 1273A, 1273D**

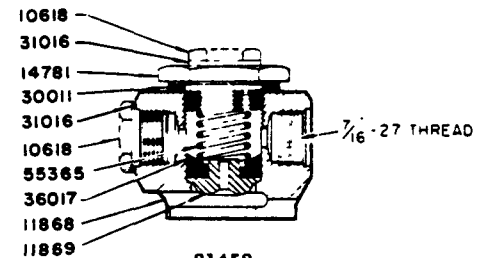

**81458  
BUTTONHEAD COUPLER  
USED WITH MODEL 1273C**

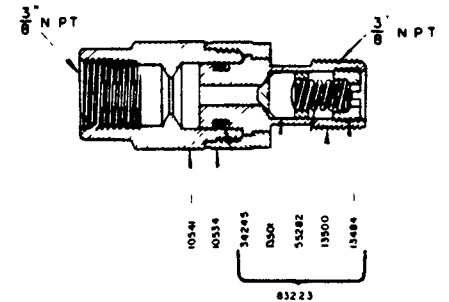


**80924  
CHECK AND SWIVEL**

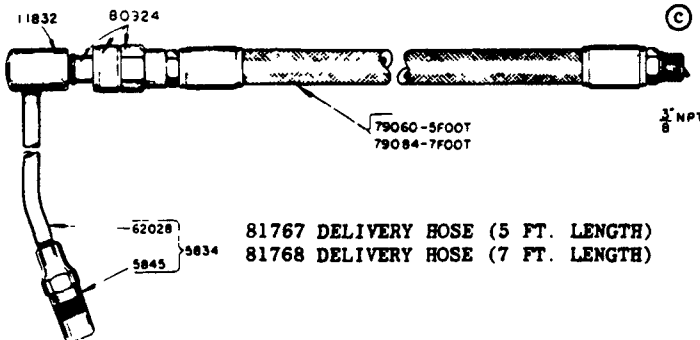

Ⓢ Indicates change

**MODEL 1273A INCLUDES MODEL 1272 AND 81767**  
**MODEL 1273C INCLUDES MODEL 1272 AND 81673**  
**MODEL 1273D INCLUDES MODEL 1272 AND 81768**

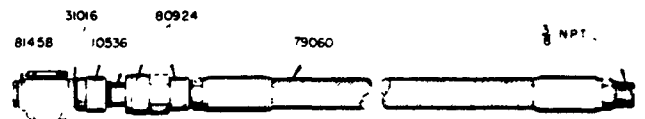

**81673 DELIVERY HOSE (5 FT. LENGTH)**



One Lincoln Way  
 St. Louis, Missouri 63120-1578  
 (314) 679-4200

Copyright 1987  
 Printed in U.S.A.

**SECTION - J12**  
**PAGE - 1N**

## OPERATING INSTRUCTIONS

### FILLING CONTAINER

Unfasten three clamps holding the container lid to the container. Entire lid assembly and pumping unit can then be removed from the container.

Pack lubricant carefully in container to avoid excessive air pockets. Clean inside of container before filling with lubricant. Foreign material may result in extensive damage, if inducted into lower pump mechanism.

### PUMPING (See Fig. 1.)

Raise pump handle until a slight resistance to the upward movement of the handle can be felt. (Position B). To insure maximum lubricant delivery, the full pumping range from the resistance point (Position B) to the bottom stop (Position C) should be used.

### AUTOMATIC PRESSURE RELEASE


As the pump handle is raised to position "B" a slight resistance will be noticed indicating the venting range. After lubricating bearing, but before disengaging coupler from the fitting, raise pump handle to the topmost position. (Position A). This will relieve the pressure in the hose, make it easy to remove coupler from the fitting, and prevent waste of lubricant after disengagement.

### TO INSURE TROUBLE FREE SERVICE

When lubrication is completed, hose should be coiled around container. Be sure the lubricant is kept free from dirt and contamination.

### GUN FILLER ATTACHMENT ACCESSORY (SEE FIG. 2)

The Model 81794 Gun Filler Attachment can be purchased as an additional accessory and provides a means of using the bucket pump to fill other guns, as illustrated. When filler nipple of lubrigun is inserted in filler nozzle, the swivel check automatically diverts lubricant through filler nipple to fill lubrigun. Filler nozzle automatically closes when filler nipple is withdrawn from filler nozzle.

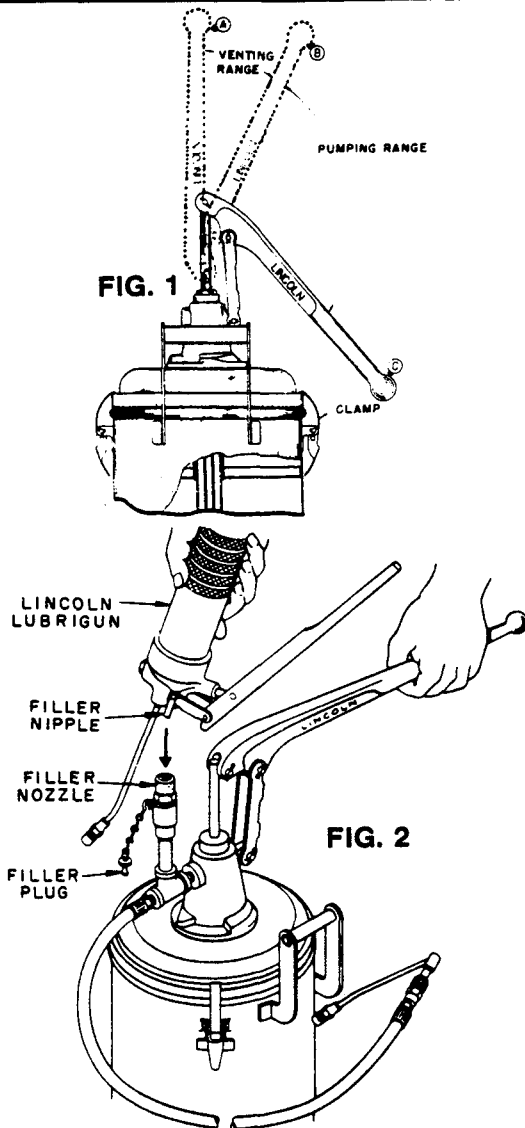

## SERVICE PARTS

Part	Description	Part	Description	Part	Description
5834	Hydraulic coupler & extension	16521	Pump cylinder	56057	Coupler spring
5845	Hydraulic coupler	30011	Check seat gasket	61248	Pump tube
10469	Pump check	31016	Gasket	61420	Cylinder tube
10472	Toggle pin	31074	Pump tube gasket	62028	Nozzle extension
10534	Swivel collar	34166	O-ring	66011	Steel ball
10536	Coupler adapter	34245	O-ring packing	66031	Cotter pin
10541	Coupling adapter	34802	Piston packing	66042	Cotter pin
10618	Plug	36017	Cup leather	79060	Hose
10973	Stop washer	40117	Handle	79084	Hose
11832	Elbow	40512	Outlet body	80924	Check & swivel
11868	Coupler body	45103	Jaw	81458	Buttonhead coupler
11869	Needle	45686	Container cover	81647	Bare pump assembly
11957	Connecting rod	45744	Toggle	81673	Delivery hose assembly
12372	Coupler cap	48052	Plunger packing washer	81767	Delivery hose assembly
12519	Fastener	48083	Piston washer (lower)	81768	Delivery hose assembly
12816	Coupler body	50037	Screw	83223	Swivel stud assembly
13484	Check seat	51112	Connecting rod nut	90646	Coupler stem assembly
13500	Swivel stud	55035	Spring	90699	Follower assembly
13501	Check	55072	Check spring	91081	Container assembly
14781	Body cap	55282	Check spring	91092	Fastener assembly
16520	Piston washer (upper)	55365	Spring		

### RETAIN THIS INFORMATION FOR FUTURE REFERENCE

When ordering replacement parts, list: Part Number, Description, Model Number, and Series Letter.

LINCOLN provides a Distributor Network that stocks equipment and replacement parts.