



OPERATING INSTRUCTIONS

The Centro-Matic Filler Pump is hand-operated, designed to lift viscous and semi-solid lubricants for loading the containers of Lincoln Centro-Matic Lubriguns. These Lubriguns come equipped with a Filler Fitting for connecting to the Coupler of the Filler Pump.

INITIAL PRIMING

It is essential that the Filler Pump Tube be filled before attempting to fill a Lubrigun. Operate the Pump Handle until lubricant flows from the Coupler.

Connect Coupler to Filler Fitting and fill Lubrigun container by operating Pump Handle.

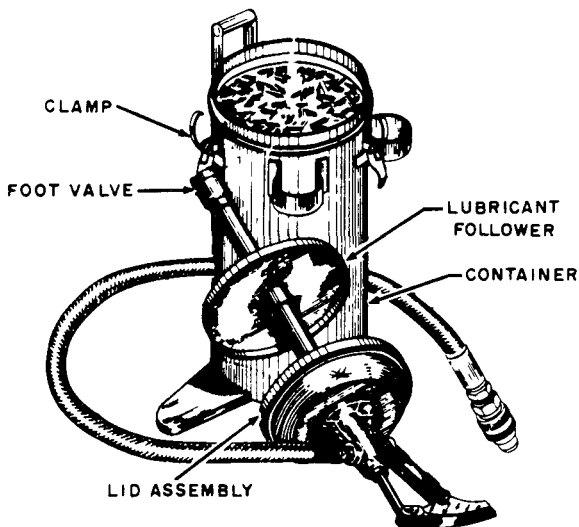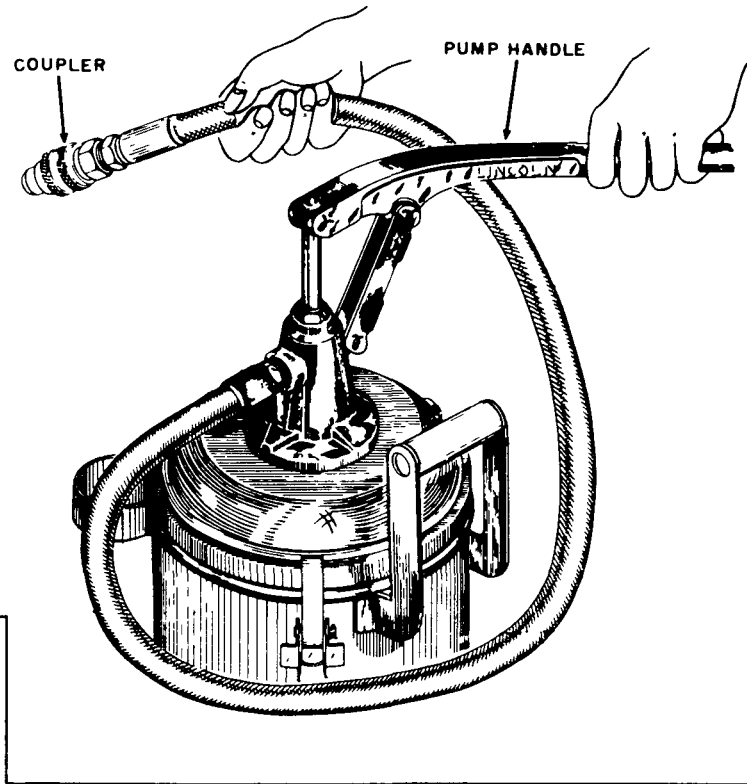

FILLING CONTAINER

Unfasten three clamps holding the container lid to the container. Entire lid assembly and pumping unit can then be removed from the container. Pack lubricant carefully in container to avoid excessive air pockets. Clean inside of container before filling with lubricant. Foreign material may result in extensive damage if inducted into lower pump mechanism.

Inspect foot valve of the pump for dirt or foreign particles before inserting pump into lubricant.

REPAIR PARTS LIST

Part	Description	Part	Description	Part	Description
* 10361	Piston Seat	45744	Toggle	68918-1	Stick-Cal
10472	Toggle Pin	48039	Washer	79084	Hose Assembly
12519	Fastener	50037	1/4" - 20 Hex. Hd. Screw	* 80179	Foot Valve Assembly
13898	Connecting Rod	51009	Connecting Rod Nut	81649	Bare Pump Assembly
* 32016	Piston Packing	61024	Adapter Tube	83922	Coupler Hose Assembly
* 34166	O-Ring	61230	Pump Tube	90699	Follower Assembly
40067	Pump Handle	66031	Cotter Pin	91092	Fastener Assembly
40512	Outlet Body	66042	Cotter Pin	91119	Container Assembly
* 41046	Piston	66170	Lockwasher	645006	Coupler
45686	Container Cover				

Parts marked with * should be kept on hand for replacement purposes.

RETAIN THIS INFORMATION FOR FUTURE REFERENCE

When ordering replacement parts, list: Part Number, Description, Model Number, and Series Letter.

LINCOLN provides a Distributor Network that stocks equipment and replacement parts.