



IMPORTANT: When replacing 45790 Valve Toggle, bend toggle so that 66729 Float & Spring Arm is in position as shown using dimension given.

SERVICE PARTS

PART	QUAN.	DESCRIPTION
12898	1	Valve body
13106	1	Adapter bushing
34256	1	O-ring
45776	1	Toggle bracket
45790	1	Valve toggle
61396	1	Valve tube
66725	1	Retaining ring
66727	1	Roll pin
66728	1	Steel ball
66729	1	Float & spring arm
82466	1	Low level cut-off

RETAIN THIS INFORMATION FOR FUTURE REFERENCE

When ordering replacement parts, list: Part Number, Description, Model Number, and Series Letter.

LINCOLN ST. LOUIS provides a Distributor Network that stocks equipment and replacement parts. A list of Authorized Service Departments will be furnished upon request.