


For use with PileDriver® and PowerMaster® pumps  
which do not exceed 3,000 psig maximum pressure.

**! WARNING**  
DO NOT EXCEED 3000 PSI  
WORKING PRESSURE.

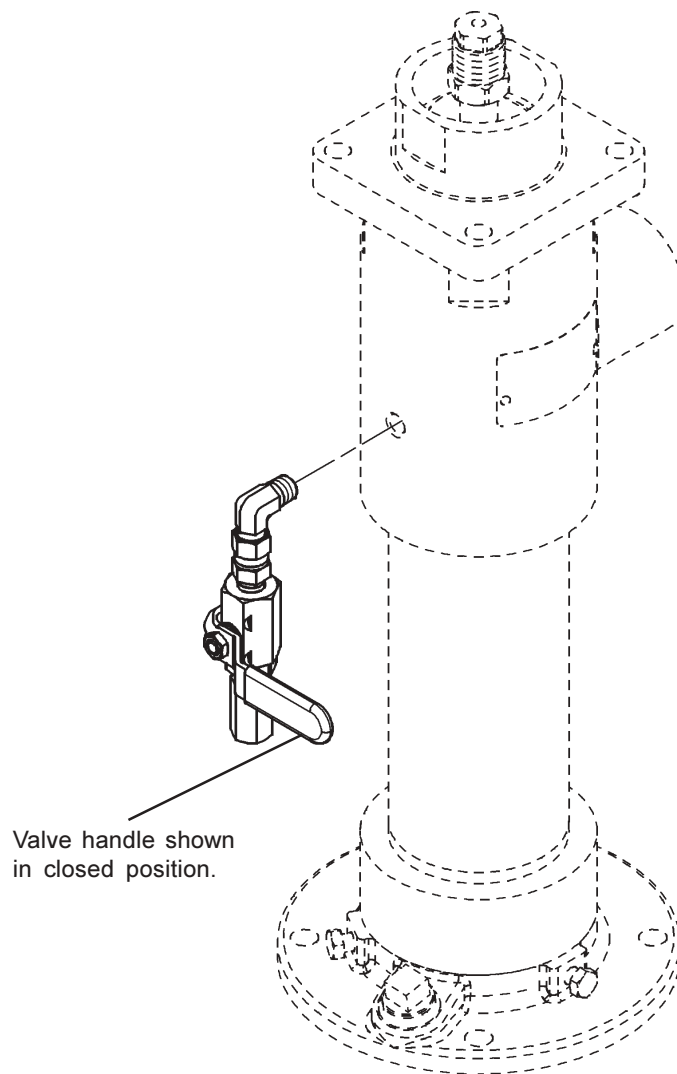

### Instructions

1. Remove existing priming valve or pipe plug from pump outlet body.
2. Install elbow into pump outlet body so that the outlet of the elbow will point downward.
3. Install priming valve and fittings onto elbow. Tighten securely.
4. The priming valve is closed when the handle is in a horizontal position (as shown in the illustration) and is fully open when the handle is in a vertical position.

Americas:  
One Lincoln Way  
St. Louis, MO 63120-1578  
USA  
Phone +1.314.679.4200  
Fax +1.800.424.5359

Europe/Africa:  
Heinrich-Hertz-Str 2-8  
D-69183 Walldorf  
Germany  
Phone +49.6227.33.0  
Fax +49.6227.33.259

Asia/Pacific:  
25 Int'l Business Park  
#01-65 German Centre  
Singapore 609916  
Phone +65.562.7960  
Fax +65.562.9967

© Copyright 2003  
Printed in USA

Web site:  
[www.lincolnindustrial.com](http://www.lincolnindustrial.com)