
## ROTARY DRIVE ADAPTATION

R.H. BOTTOM VERTICAL ROTARY WITH FILTER DRIVE CLOCKWISE ROTATION 30:1 RATIO

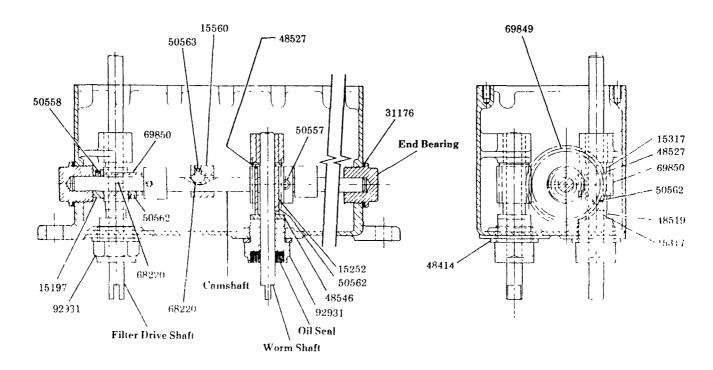



## **DISASSEMBLY INSTRUCTIONS**

- 1) Removal of pumps, filler assembly, cover plate and groove pin allows access to the lubricator drive.
- 2) Loosen set screws holding 15197 Step Collar, 15560 Cam Lobes, 69850 Gear and 69849 Worm Gear to camshaft. Move cam lobes clear of their woodruff keys and remove keys. Unscrew end bearings and remove 31176 Washers from reservoir. Withdraw camshaft from reservoir while removing stop collar, cam lobes, gear with woodruff key and worm gear with woodruff key.
- 3) Loosen 50562 Set Screw of 69850 Gear to filter drive shaft. Unscrew 92931 Stuffing Box Assembly and remove 48414. Washer from reservoir while removing gear with woodruff key.
- 4) Loosen 50562 Set Screw of 15252 Worm to worm shaft. Unscrew 92931 Stuffing Box Assembly and remove 48:14 Washer from reservoir. Withdraw worm shaft from reservoir while removing worm with woodruff key and 18527 Walbar.
- 5) To assemble, reverse disassembly instructions.

LUBRICATOR	FILTER DRIVE SHAFT	CAMSHAFT	WORM SHAFT	END BEARING (2 req'd.)	OIL SEAL (2 req'd.)
800090 800192 800234 8')0493	15517 15600 15609 15600	15515 15563 15515 15563	15516 15601 15601 15601	40716 40716 40716 40716 40716	69930 69930 69930 70048

69930 - Buna-N material 70048 - Viton material

SECTION -M3

PAGE



One Lincoln Way St. Louis, MO 63120-1578 (314) 679-4200

L-NOV-79 DISCARD FORM 9424 Printed in United States of America

**FORM 9424A** 

-16A

PART	QUAN.	DESCRIPTION
15197	1	Stop collar
15252	1	Worm
15317	2	Spacer
15560	+	Cam lobe
31176	2	Washer
48519	1	Spacer
48527	3	Washer
48546	1	Washer
48414	4	Washer
50557	1	Set screw
50558	1	Set screw
50562	3	Set screw
50563	*	Set screw
68220	4	#3 Woodruff key
68220	*	#3 Woodruff key
69849	1	Worm gear
69850	2	Gear
<b>9</b> 2931	2	Stuffing box

## **SERVICE PARTS**

\* 1 per pump station

۲

۰.

------ RETAIN THIS INFORMATION FOR FUTURE REFERENCE -----

When ordering replacement parts, list: Part Number, Description, Model Number, and Series Letter.

LINCOLN ST. LOUIS provides a Distributor Network that stocks equipment and replacement parts.