


MINIMUM INLET PRESSURE - 10 PSI
MAXIMUM INLET PRESSURE - 70 PSI

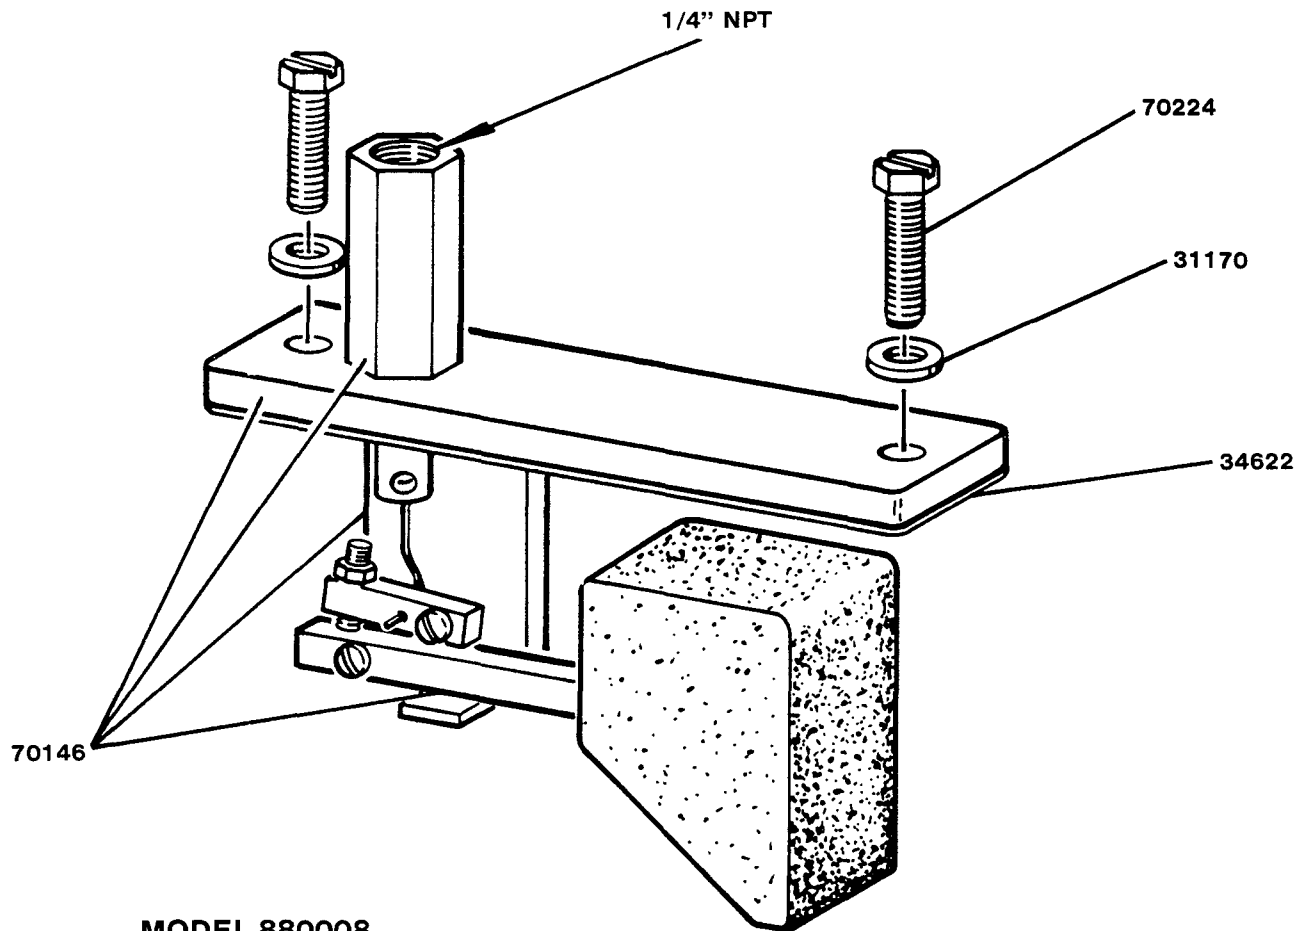

**MODEL 880008
WITHOUT GROUNDING TERMINAL**

SERVICE INSTRUCTIONS

- 1) If valve becomes leaky or no-flow condition occurs, foreign particles may be lodged in check seat of valve.
- 2) Remove oil control assembly and flush valve thoroughly.

SERVICE PARTS

| Part | Qty. | Description |
|-------|------|---------------|
| 31170 | 2 | Washer |
| 34622 | 1 | Gasket |
| 70146 | 1 | Level control |
| 70224 | 2 | Screw |

LINCOLN

A PENTAIR COMPANY


One Lincoln Way
St. Louis, Missouri 63120-1578
(314) 679-4200
Customer Service, (314) 679-4300

Copyright 1987
Printed in U.S.A.

Section - **M30**
Page - **19**

**MODEL 880092
WITH GROUNDING TERMINAL**

NOTE
Connect wire from controller terminal
to low tension terminal of magneto.

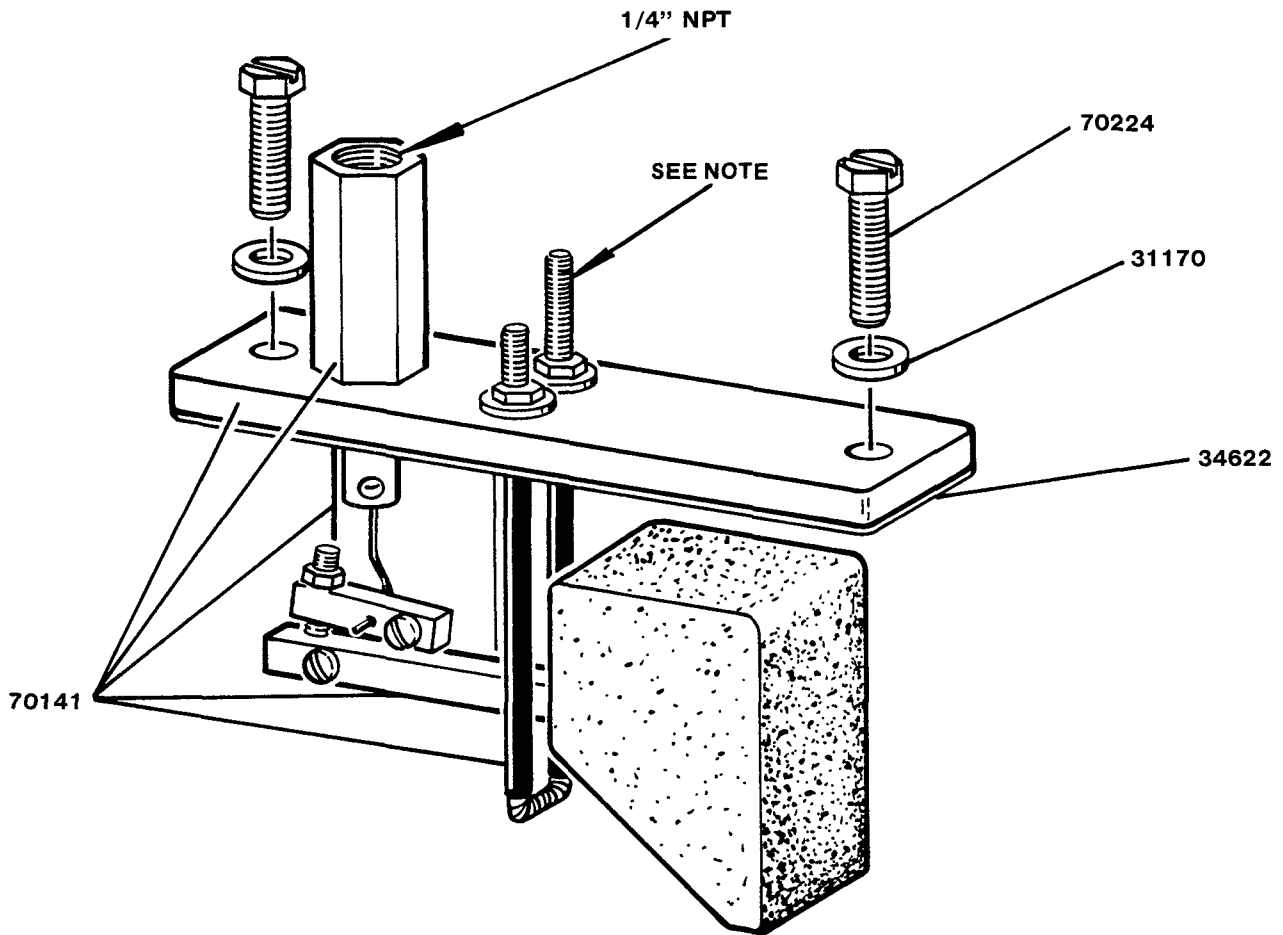

SERVICE PARTS

| Part | Qty. | Description |
|-------|------|---------------|
| 31170 | 2 | Washer |
| 34622 | 1 | Gasket |
| 70141 | 1 | Level control |
| 70224 | 2 | Screw |

RETAIN THIS INFORMATION FOR FUTURE REFERENCE

When ordering replacement parts, list: Part Number, Description, Model Number, and Series Letter.

LINCOLN provides a Distributor Network that stocks equipment and replacement parts.