



Model 94013 12 VDC HAMMER PASTE PUMP Series "A"

OWNER/OPERATOR MANUAL

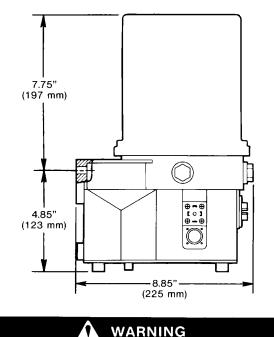

Do Not use pump without pressure relief valve.

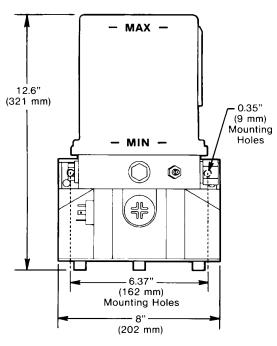

SPECIFICATIONS

Electrical Requirements						
Model 94013 12 VDC @ 3.5 amps						
Enclosure Rating IP 6K9K - Protected from water						
sprayed in all directions.						
Timer						
minutes "On" time.						
Pump Output						
Outlet Connection 1/8" NPT (female)						
Maximum Recommended						
Operating Pressure 3600 psi (248 bar)						
Reservoir Capacity 122 Cu. in. (2000 cc)						
LubricantGreases up to NLGI grade 2						
(depending on the operating						
temperature and type of						
lubricant)						
Temperature Range 13° F(-25° C) to +158° F(+70° C)						

Pressure Relief Valve 4000 psi +/- 250 psi (276 bars) +/- (17 bars)

DESCRIPTION

The chassis lube pump is electrically operated and used in a progressive type centralized lubrication system. The pump consists of a pump housing, electric gear motor, a timer and

a plastic reservoir with stirring paddle. The high operating pressure allows the pump to supply lubricant up to NLGI 2 grease. **NOTE:** Pump Element especially designed for Hammer Paste Lubricant.

MOUNTING THE PUMP:

Select an easily accessible place of installation which allows access to the timer and lubricant reservoir filler fitting. The pump must be mounted vertically on an even surface by means of two bolts.

TO FILL RESERVOIR

Fill the reservoir through the grease fitting located at the base of the reservoir, using a hand operated grease pump. Refill reservoir when grease reaches "MIN" mark located on the reservoir. Fill the reservoir up to the "MAX" mark located on the reservoir.

TO PRIME SYSTEM

Pump & Supply Line: After reservoir has been filled with recommended lubricant, loosen the supply line fitting. Operate the pump until lubricant flows from outlet, then tighten fitting.


Feed Lines: Pre-fill each feed line with lubricant before connecting to outlet of divider valve and bearing.



One Lincoln Way St. Louis, Missouri 63120-1578 (314) 679-4200 Copyright 2001 Printed in U.S.A. Section - Q3 Page - 104

JAN-01

FORM 403042

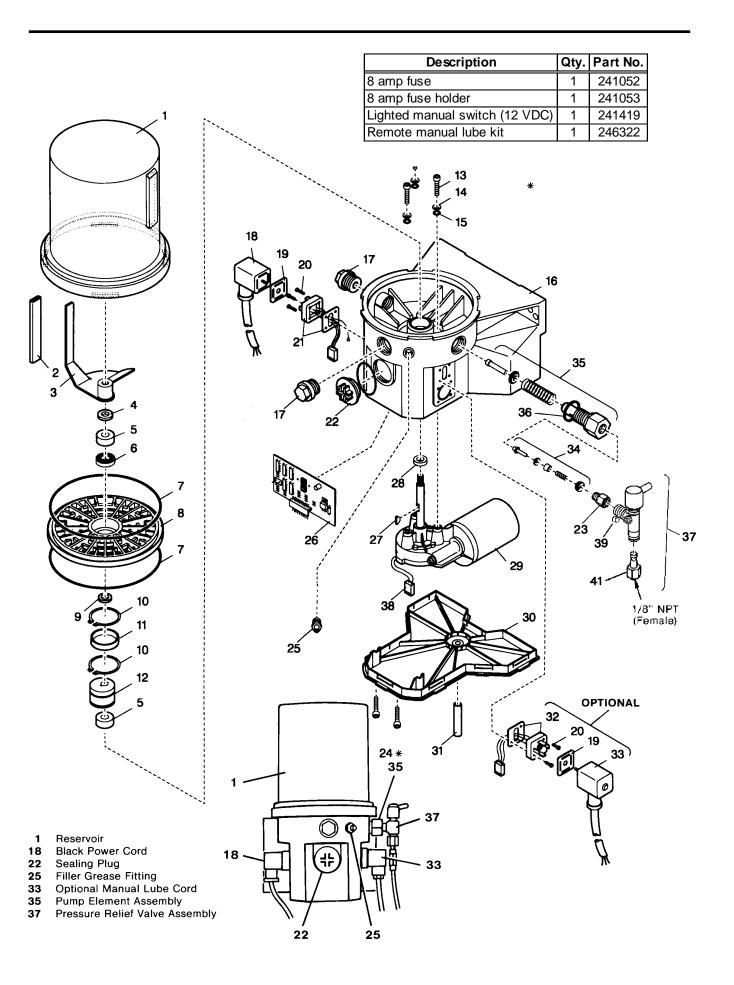


ELECTRICAL CONNECTIONS

Connect black power cord as follows:

Red wire connects to 8 amp fuse then to Battery (+).

White wire connects to Battery (-).

Blue wire connects to 8 amp fuse, to ignition switch, then to Battery (+).

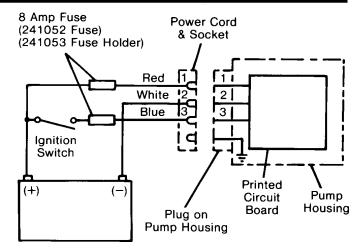

REMOTE MANUAL LUBE PUSHBUTTON

If a remote manual lube pushbutton is required, order a 246322 Manual Lube Kit (consisting of a 32 ft. cord and plug) and a 241419 Lighted Manual Lube Switch.

IMPORTANT:

When using a Model 94013 to replace an old style 103 pump with remote manual lube switch, only the 246322 Manual Lube Kit is required.

The wiring for the remote light used on the 103 pump must be changed for the new Model 94013. The existing wire that connects the light to the Battery (-) must be disconnected. Reconnect it to the Battery (+).

ITEM NO.	DESCRIPTION	QTY.	PART NUMBER /KIT NUMBER
1	Reservoir	1	part of Kit 246432
2	Hose	1	part of Kit 246433
3	Stirring paddle	1	part of Kit 246433
4	Washer	1	part of Kits 246433 & 246434
5	Bearing ring	2	part of Kit 246434
6	Bearing	1	part of Kit 246434
7	0-ring	2	246424, part of Kit 246432
8	Intermediate plate	1	246425
9	Shim	1	part of Kit 246434
10	Snap ring	2	part of Kit 246434
11	Inner ring	1	part of Kit 246434
12	Eccentric cam	1	246427
13	Screw	3	part of Kit 246435
14	Washer	3	part of Kit 246435
15	0-ring	3	part of Kits 246435 & 246437
16	Pump housing	1	246426
17	Closure plug	2	246422
18	Socket with cord	1	part of Kit 246429
19	Flat packing	1	part of Kits 246429, 246440,
00			246441 & 246431
20	Screws	4	part of Kits 246440 & 246441
21	Plug Saaling plug	1	part of Kit 246440
22	Sealing plug	1	246423
23 24	Nipple Screw	10	226141055 206137967
24 25	Grease fitting	1	5050
25	Printed circuit board	1	246420
20	Woodruff key	1	part of kit 246435
28	Radial seal	1	part of Kits 246435 & 246437
20	12 VDC motor	1	part of Kit 246435
30	Housing cover	1	246421
31	Hose	1	not sold
32	Plug	1	part of Kit 246441
33	Socket	1	part of Kit 246431
34	Check valve	1	part of Kit 600287501
35	Pump element	1	part of Kit 600287501
36	Gasket	1	part of Kit 600287501
37	Pressure relief ass'y.	1	270864©
38	Plug for motor	1	part of Kit 246435
39	Grease cap	1	242125
40	Grease fitting	1	249568
41	Adapter for relief assy.	1	249565
42	Seal	1	249569

TIMER OPERATION


The "Off" timer begins accumulating time when the ignition switch closes. When the "Off" timer reaches the preset value, the pump will turn on. The pump remains activated for the period of time that is preset on the "On" timer.

When the ignition switch opens, the "Off" timer will retain its accumulated time for a period of five days. When the ignition switch closes during the five day period, the "Off" timer will resume timing from the accumulated time it reached prior to the ignition switch opening. If ignition switch is not closed before the end of five day period, timer will begin with an "On" period.

Remove Sealing Plug (item 22) to access manual lube switch or to view the system LEDs.

Part No.	Qty.	Description	Item No.
249568	1	GreaseFitting	40
5050	1	GreaseFitting	25
242125	1	Greasecap	39
270864©	1	Pressurerelief assy.	37
246420	1	Printed drauit board	26
246421	1	Housing cover	30
246422	1	Closureplug	17
246423	1	Sealing plug	22
246424	1	O-Ring	7
246425	1	Intermediateplate	8
246426	1	Pump housing	16
246427	1	Eccentric cam	12
249565	1	Adapter for relief assy.	41
246429		Power Cord Kit contains:	
	1	Socket with cord	18
	1	Flat packing	19
		Optional Manual Lube Cord	
246431		Set contains:	
	1	Flat packing	19
	1	Socket with cord	33
246432		Reservoir Kit contains:	
	1	Reservoir	1
	1	O-Ring	7
246433		Paddle Kit contains:	
	1	Hose	2
	1	Stirring paddle	3
	1	Washer	4

SERVICE PARTS

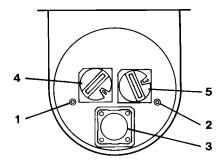

- 1. The LED marked "battery" lights when power is applied to the PC board.
- 2. The LED marked "motor" lights when pumping lubricant.
- 3. Depressing pushbutton for 2 seconds will initiate a manual lube event.
- 4. "Off" time rotary switch factory set to 3.75 minutes.

5. "On" time rotary switch factory set to 30 minutes.

NOTE: Do not change settings of "Off" or "On" time rotary switches.

Part No.	Qty.	Description	Item No.
246434		Bearing & Seal Kit contains:	
	1	Washer	4
	2	Bearing Ring	5
	1	Bearing	6
	1	Shim	9
	2	Snapring	10
	1	Inner Ring	11
249569	1	Sea	42
226141055	1	Nipple	23
206137967	10	Sarew	24
246435		12 VDC Motor kit contains:	
	3	Sarew	13
	3	Washer	14
	3	O-ring	15
	1	Woodruff Key	27
	1	Radialseal	28
	1	12 VDC motor	29
	1	Plug for motor	38
246437		Housing Seal kit contains:	
	3	O-Ring	15
	1	Radialseal	28
246440		Power Plug Kit contains:	
	1	Flat packing	19
	4	Screws	20
	1	Plug	21
		Optional Manual Lube Plug	
246441		Set contains:	
	1	Flat packing	19
	4	Screws	20
	1	Plug	32
		Pump Element Assembly	
600287501		contains:	
	1	Check valve	34
	1	Pump element	35
	1	Gasket	36

Americas: One Lincoln Way St. Louis, MO 63120-1578 USA Phone +1.314.679.4200 Fax +1.800.424.5359 Europe/Africa: Heinrich-Hertz-Str 2-8 D-69183 Walldorf Germany Phone +49.6227.33.0 Fax +49.6227.33.259

Asia/Pacific: 25 Int'l Business Park #01-65 German Centre Singapore 609916 Phone +65.562.7960 Fax +65.562.9967



© Copyright 1999 Printed in USA Web site: www.lincolnindustrial.com