


Models 94212, 94224 INDUSTRIALLUBE ELECTRIC GREASE PUMP Series "B"

OWNER/OPERATOR MANUAL

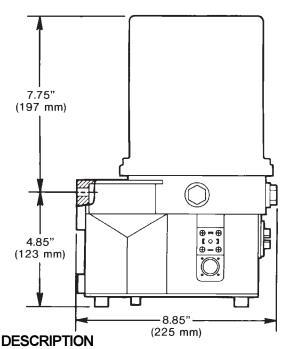

The lube pump is electrically operated and used in a progressive type centralized lubrication system. The pump consists of a pump housing, electric gear motor and a plastic reservoir with stirring paddle. The high operating pressure allows the pump to supply lubricant up to NLGI 2 grease.

When power is applied to the pump it will dispense lubricant.

MOUNTING THE PUMP

Select an easily accessible place of installation which allows access to the lubricant reservoir filler fitting. The pump must be mounted vertically on an even surface by means of two bolts.


TOFILL RESERVOIR

Fill the reservoir through the grease fitting located at the base of the reservoir, using a hand operated grease pump. Refill reservoir when grease reaches "MIN" mark located on the reservoir. Fill the reservoir up to the "MAX" mark located on the reservoir.

TO PRIME SYSTEM

Pump & Supply Line: After reservoir has been filled with recommended lubricant, loosen the supply line fitting. Operate the pump until lubricant flows from outlet, then tighten fitting.

Feed Lines: Pre-fill each feed line with lubricant before connecting to outlet of divider valve and bearing.

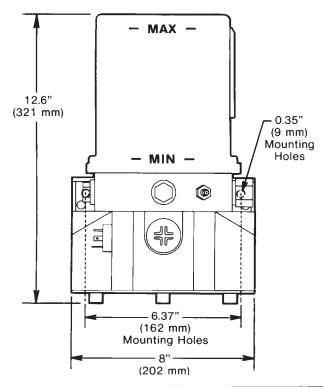



WARNING

Do Not use pump without pressure relief valve.

SPECIFICATIONS

Electrical Requirements

Model 94212	12 VDC @ 3.5 amps
Model 94224	24 VDC @ 2 amps
©Enclosure Rating	IP 6K9K - Protected fron
w	ater sprayed in all directions
Pump Output 0.146 cu.	in./min (2.4 cm/min)
OutletConnection	1/8" NPT (female)
Maximum Recommended	
Operating Pressure	3600 psi (248 bar)
Reservoir Capacity	122 cu. in. (2000 cc)
Lubricant Greases u	up to NLGI grade 2
(depending on the operating tem lubricant)	perature and type of
Temperature Range13° F (-25°C) to +158° F (+70°C)
Pressure Relief Valve	4000 psi +/- 250 psi
	(276 bars) +/- (17 bars

© Indicates Change




One Lincoln Way St. Louis, Missouri 63120-1578 (314) 679-4200

Copyright 1998 Printed in U.S.A. Section - Q3

Page - 4C

SYSTEM ACCESSORIES

Description	Qty.	Part No.
8 amp fuse	1	241052
8 amp fuse holder	1	241053

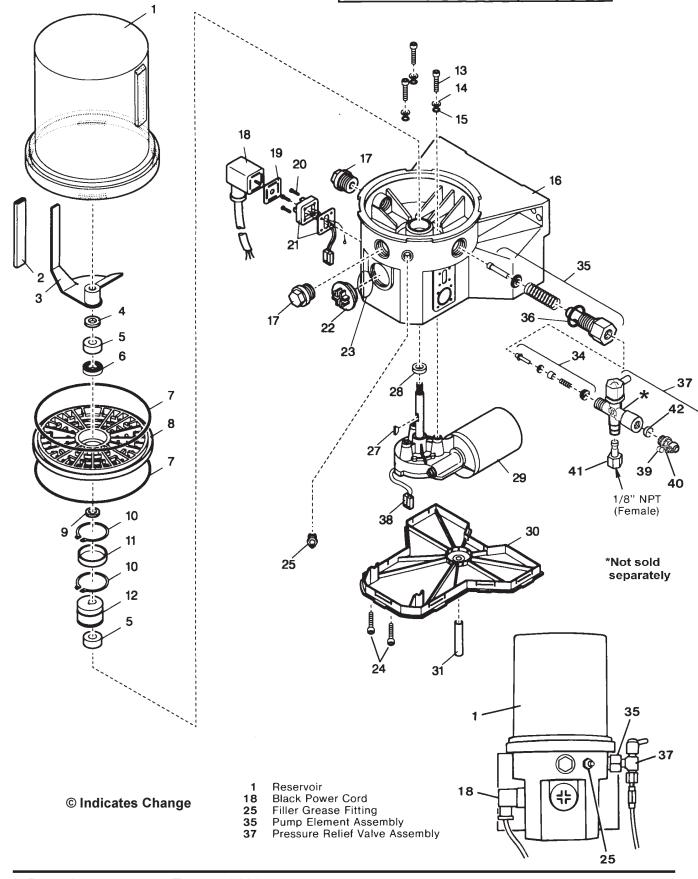


ELECTRICAL CONNECTIONS

Connect black power cord as follows:

Red wire connects to Off/On switch, to 8 amp fuse then to Battery (+).

White wire connects to Battery (-).

Green wire connects to grounding wire.

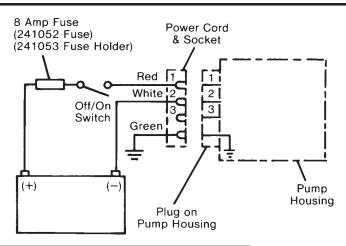

© Indicates Change

ITEM NO.	DESCRIPTION	QTY.	PART NUMBER /KIT NUMBER
1	Reservoir	1	part of Kit 246432
2	Hose		part of Kit 246433
3	Stirring paddle		part of Kit 246433
4	Washer	1	part of Kits 246433 & 246434
5	Bearing ring	2	part of Kit 246434
6	Bearing	1	part of Kit 246434
7	O-ring	2	246424, part of Kit 246432
8	Intermediate plate	1	246425
9	Shim	1	part of Kit 246434
10	Snap ring	2	part of Kit 246434
11	Inner ring	1	part of Kit 246434
12	Eccentric cam	1	246427
13	Screw	3	part of Kits 246435 & 246436
14	Washer	3	part of Kits 246435 & 246436
15	O-ring	3	part of Kits 246435, 246436 & 246437
16	Pump housing	1	246426
17	Closure plug	2	246422
18	Socket with cord	1	part of Kit 246430
19	Flat packing	1	part of Kits 246430, 246550
20	Screws	4	part of Kits 246550
21	Plug	1	part of Kit 246550
22	Sealing plug	1 1	246423
23	O-ring	1	219141382
24	Screw	10	206137967©
25	Grease fitting	1 1	5050
26	Printed circuit board	1 1	246420
27	Woodruff key	1	part of Kits 246435 & 246436
28	Radial seal	1 1	part of Kits 246435, 246436 & 246437
29	12 VDC motor		part of Kit 246435
29 30	24 VDC motor	1 1	part of Kit 246436 246421
31	Housing cover Hose		not sold
32	UNUSED NUMBER	'	HOL SOIU
33	UNUSED NUMBER		
34	Check valve	1	part of Kit 600268762
35	Pump element		part of Kit 600268762
36	Gasket		part of Kit 600268762
37	Pressure relief ass'y.		249567©
38	Plug for motor*		part of Kits 246435 & 246436
39	Grease cap	1 1	242125
40	Grease cap Grease fitting		249568©
41	Adapter for relief assy.		249565©
42	Seal		249569©

*Not required for Models 94212 & 94224

SERVICE PARTS/KITS

SERVICE PARTS/KITS						
Part No.	Qty.	Description	No.			
249568©	1	Grease fitting	40			
5050	1	Grease fitting	25			
242125	1	Grease cap	39			
249567©	1	Pressure relief assy.	37			
246422	1	Closure plug	17			
246423	1	Sealing plug	22			
246424	1	O-ring	7			
246425	1	Intermediate plate	8			
246426	1	Pump housing	16			
246427	1	Eccentric cam	12			
249565©	1	Adapter for relief assy.	4 1			
249569©	1	Seal	42			
246430	1	Power Cord Kit contains: Socket with cord	18			
	1	Flat packing	18			
246432	1	Reservoir Kit contains: Reservoir	1			
	1	O-ring	7			
246433	1	Paddle Kit contains: Hose	2			
	1 1	Stirring paddle Washer	3 4			
246434		Bearing & Seal Kit contains:				
	1 2	Washer Bearing ring	4 5			
	1 1	Bearing Shim	6 9			
	2	Snap ring	10			
246435	1	Inner ring 12 VDC Motor Kit contains:	11			
	3 3	S c r e w W a s h e r	13 14			
	3	O-ring	15			
	1 1	W oodruff key Radial seal	27 28			
	1	12 VDC motor	29			
246436	1	Plug for motor* 24 VDC Motor Kit contains:	38			
240430	3	Screw	13			
	3 3	Washer	1 4 1 5			
	1	O-ring W ood ruff key	27			
	1	Radial seal 24 VDC motor	28			
	1 1	24 VDC motor Plug for motor	29 38			
246437	3	Housing Seal Kit contains: O-ring	15			
	1	Radial seal	28			
246550	1	Power Plug Kit contains: Flat packing	19			
	4 1	S cre ws P lug	2 0 2 1			
206137967©	10	S cre w	24			
219141382	1	O-ring	23			
600268762		Pump Element Assy. contains:				
	1 1	Check valve Pump element	3 4 3 5			
	1	Gasket	36			
4.8	lot roo	uired for Medale 04242 8 04224	@ Indi			

*Not required for Models 94212 & 94224

© Indicates Change

RETAIN THIS INFORMATION FOR FUTURE REFERENCE

When ordering replacement parts, list: Part Number, Description, Model Number and Series Letter. LINCOLN provides a Distributor Network that stocks equipment and replacement parts.