

Keypad Overview

The keypad consists of an integral 40-column ticket printer, antenna for RF communications and a 16-button keypad to enter and authorize dispensing transactions. The keypad also houses the electronics that maintain the computed inventory levels via deliveries, dispenses and other manual transactions.

The keypad is powered by 120VAC and should be installed in a single building indoors as close to the RF meters (part number 915) it will communicate with as possible (Max 300 feet) but yet secured from abuse and environment issues. Reference the keypad installation instructions for a list of materials that may significantly impact RF range. Software in the keypad recognizes two levels of authority: Supervisor and Operator. The Supervisors Personal Identification Number (PIN) allows for system initialization, configuration, communication diagnostics and report generation. The operator pin authorizes and records all dispenses.

If RF Communications from the keypad to the RF meter are unavailable (temporary obstruction, damage to the keypad, power outage, etc) the meter may be programmed to dispense in the manual mode by entering a code via the buttons on the meter. In this mode, the meter will only dispense after verifying that it is unable to communicate with the keypad. All dispenses in this mode are recorded to memory and, in total, are communicated to the keypad once communications are reestablished. Inventory levels and consumption data are updated when communications are restored.

Keypad Installation

The keypad should be mounted upright with the antenna pointing upwards, near a 120VAC electrical outlet, to a structurally sound wall through the two holes on the top of the keypad casing. Height on the wall should be 5' to 6'. Care should be taken to avoid mounting behind any steel objects (tool storage cabinets and metal chain linked fences) that may block the RF communication signal. Care should also be taken to avoid direct, significant heat sources.

Menu Configuration

Software included in the RF keypad allows for tracking of all fluids under its control. However all tanks need to be defined and entered into the keypad detailing the size, type of fluid, beginning balance, and any deliveries made by the oil company supplier. Once established, the software automatically tracks all dispenses and calculates the balances. The system recognizes two levels of authority: Supervisor initializes, configures, communicates and report generation and Operator dispenses fluids to work-orders.



KEYPAD

Meter/Keypad Programming.

After the keypad has been wall mounted, paper installed in the printer, and power supply activated, the unit will go through self-diagnosis. The unit is then ready to be initialized to the meters that you want it to communicate with.

FCC ID: GIF-RF KEYPAD
FCC CERTIFIED, PART 15, SUBPART C

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

NOTE: Any changes made by the user not approved by Lincoln may void the user's authority under FCC Regulations to operate the equipment.

Table of Contents

Keypad Overview.....	1
Specifications.....	2
Mounting Dimensions.....	2
Keypad Description.....	3
Default Screens.....	4
Supervisor.....	4 & 5
Initialization Screens (INI).....	5 thru 14
Configuration Screens (CNF).....	15 thru 21
Meter Reset Screens (MET).....	22
External Report Screens (REP).....	23 thru 29
Internal Printer Reports (190).....	30
Operator.....	31 thru 35
Error Messages.....	36

SPECIFICATIONS


Power Requirements:..... 120 VAC 50/60 Hz

RF Communications:..... 2-way 902-928 MHz Frequency
Hopping Spread Spectrum Per
FCC Part 15.247 Part 15.109

Operating Temperature:... 14° F to +140°F (-10° C to +60° C)

Internal Printer Paper:..... White thermal paper roll 2-1/4" x
85'. You must have paper in the
printer to dispense fluid

Serial External Printer:..... Use Lincoln Printer P/N 282889
For Reports and Printer Cable P/N 282912

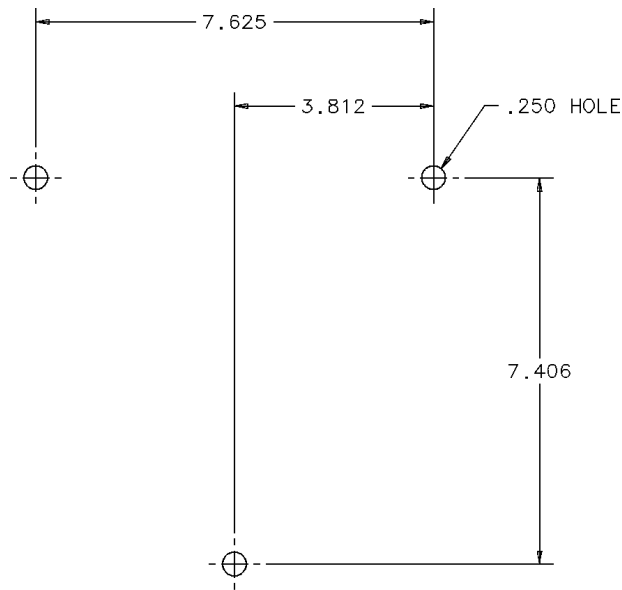

MOUNTING DIMENSIONS FOR KEYPAD
(Holes on keypad are threaded for a M6X1 Screw)

FCC ID: GIF-RFKEYPAD
 FCC CERTIFIED, PART 15, SUBPART C

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



Keyboard Description



Scroll Key: Used to select option on display



Home Key: Pressing this key will return display to the PIN Number and Time/Date screens



Backspace Key: Used to backspace when entering data



Enter Key: Used to enter data and move to next screens




Space Key: Used to enter a space character when entering data



Alphanumeric Keys: Used to enter data on display. Hold down key until the desired character is on display. Then release the key.

Default Screens:

- The Personal Identification Number (PIN) number is 4 numeric digits
- 1 supervisor account
- Maximum 50 operators account
- The supervisor account has access to the management process (initialization, configuration, communication, report, external printer and internal printer reports)
- The operator account only has access to the dispense order process




There is no active key: Active keys are the keys that will produce a result for a given screen.

This screen is displayed for user information

It is displayed during 1 seconds every 5 seconds. The 4 other seconds are reserved Enter Pin No. Screen.



Active keys:




Supervisor


Enter Supervisor PIN Number

4 Numeric digits: default is 0000 at initial power-up

Management Menu: The management menu displays after entering the supervisor PIN Number



Active keys:




Action:

- Choose which menu option is desired

Screens in INI are accessed only when the Dispense Order list is empty. If the supervisor wants to change one of these parameters whereas the list is not empty, a screen message will be displayed. The supervisor must clear all transaction records through the CNF menu prior to entering the INI (initialization) menu.

For screens with multiple choices, the selection is in **inverse** video. (i.e. The selection is green on black.)

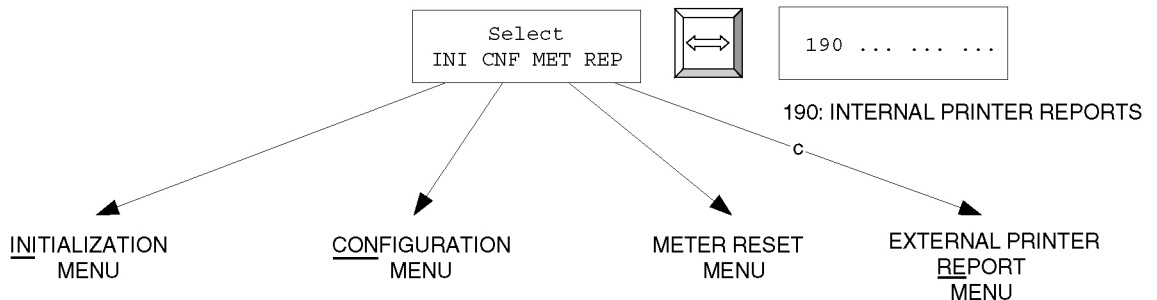

The scroll key is used to select an answer (Example Yes – No). The selection is in inverse video, it is validated with the ENTER key.

To go to the desired menu, move the scroll key to your choice and press the ENTER key

Initialization Menu Screens (INI)


- System date and time are initially blank
- System time is in military standard
- System date is in format DD/MMM/YYYY (in English)

- To change month, press  to increment month

Enter Time:



Active keys:




Numeric keys,

Action:


- Enter key with no entry → Jumps to TANK UNIT screen
- If the time/date are already entered into the system, press enter with no date to move to the next screens.

Enter time by using the numeric keys to set a 24-hour military time of day.

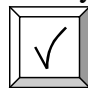


Press  when finished to move to the next initialization screen.

- Enter Date:



Active keys:




Numeric keys,


Action: Date is changed and tank unit screen is displayed.

Enter date by first entering the two digit day of the month. The cursor will

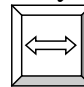


automatically jump to the month. Use  to select month, then enter a four-digit year.

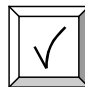

After date is set, press  to move to the next initialization screen.

PICTORAL DIAGRAM OF LFC 2000

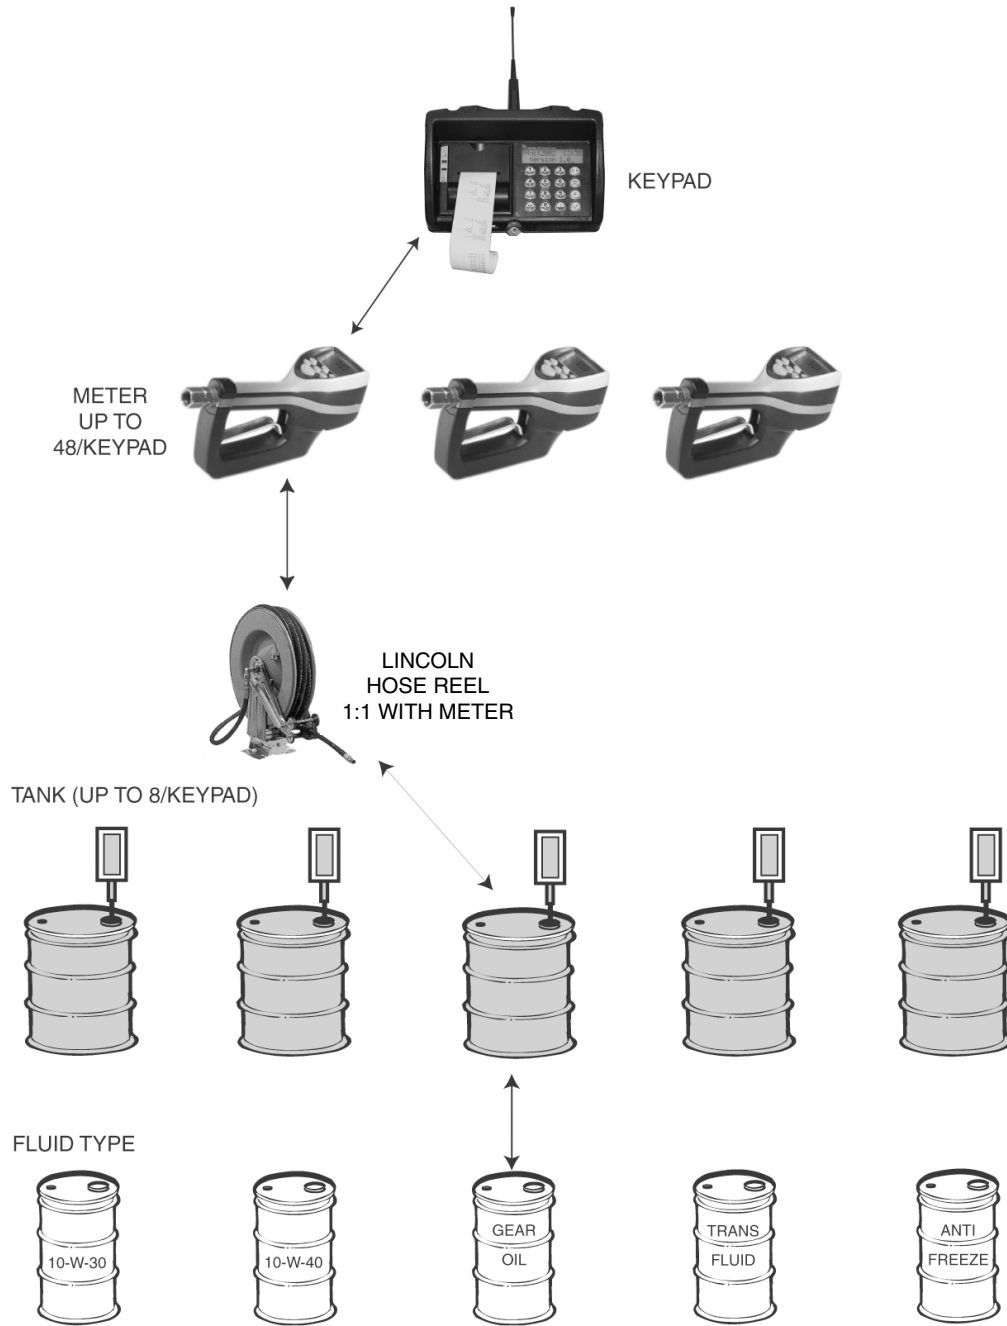

Steps:

- Identify and Name Fluid Types
- Identify and Name Fluid Tanks
- Associate Fluid Type to Tank Number
- Identify and Name Hose Reel
- Identify and Name Meter
- Associate Tank to Hose
- Associate Meter to Keypad

(NOTE: Hose and Meter are synonymous.)


Tank Initialization:

The tank screens are used to set up the tanks in the system. Each tank is assigned a number and a starting quantity level in the desired unit of measure. The following is the process for installing a tank:

- Maximum 8 Tanks
- The tank id ranges from 1 to 8
- Unit type can be quarts, liters, pints or gallons.
- By default, the unit type is liters. If you are dispensing in quarts, set tank unit type to quarts.
- Set the dispensing unit type to the proper value
- The tank quantity setting is updated after each dispense from the associated tank.
- The quantity setting is Format 5.3 digits (99999.999)
- The tank quantity will be printed out to the nearest whole number after each dispense on the ticket.
- The Supervisor may update the quantity setting at any time by entering these screens to change levels


Tank Unit
 Tank No -

Active keys:




Action:


- Enter key with no entry jumps to Fluids Screens

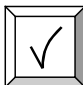
Enter a numeric value from 1 to 8 and press 


Tank Unit
 LITERS

Active keys:




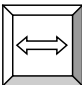Use  to select between LITERS, GALLONS, PINTS, QUARTS and REMOVE (REMOVE option will delete the tank from the system.)

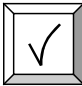
Press  to move to the next screen.



Active keys



Use the numeric keys to enter a stock level from 00000.000 to 99999.999.

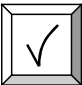
Press  to move to next screen.

Alphanumeric keys are validated only for some of the display menus. In these menus to enter a letter just hold the related key and the letters scroll. Then release the key when the letter you want is displayed.


Fluid Initialization:

This screen is used to set initial stock level or when ever supplier delivers fluid. The fluid screens allow the supervisor to set the fluid names used in the system. The parameters are:

- Maximum 8 Fluid types
- The fluid type id ranges from 1 to 8
- The fluid type name is a 16 alphanumeric string
- Initially, the fluid type name is blank




Active keys:




Action:

- Enter key with no entry → moves to Tank/Fluid relationship screen



Active keys:




Tank-Fluid Relationship Screens:

The relationship between tank id and fluid type id will be 1:1 (one tank assigned to one fluid type id). For example, the supervisor may associate tank #1 with fluid #1 or tank #1 with fluid #2. Each tank must be associated with one and only one fluid type.

Tank-Fluid Tank No -

Active keys:




Action:

- Enter key with no entry → moves to Create Hose screens

Tank-Fluid Fluid No -

Active keys:




The user must enter a valid number for a fluid in the system. Pressing enter after a valid fluid number will bring the Tank-Fluid Tank No-, screen.


Creating and Deleting RF Meters: (Meter and Hose are synonymous)

This set of screens allows the Supervisor to create or delete RF Meters from the system.


- The RF Meter number can be found on the RF Meter under the battery pack
- The RF Meter address format is 10 decimal digits (-.----.---.----)
- If necessary, use leading zeros to fill in spaces



- The RF Meters can be created and deleted
- Maximum 48 RF Meters
- A given keypad can exchange data only with RF Meters whose address is in this list.
- All RF Meters addresses and ids are unique
- The relationship between tank and RF Meter will be 1:n (one tank assigned to n RF Meters). Since there will be a relationship between tank and fluid type, the RF Meter will be assigned to one fluid type.
- Initially the RF Meter address list is empty




Active keys:



Action:

- After validated RF Meter address is entered the tank-hose screen is displayed
- Enter key with no entry → moves to Delete Hose screen
- If RF Meter address already used Hose Address Already Used Screen is displayed



Active keys:

There is no active key.


This screen is displayed if another RF Meter already uses the last three number of the RF Meter. If this screen displays check RF Meters in system to make some duplicate RF Meters do not exist, then check to see if this RF Meter has already been created in the system. It is displayed for 3 seconds and it comes back to create hose screen.

No Action

The relationship between tank and RF Meter will be 1:n (one tank assigned to n meters). Since there will be a relationship between tank and fluid type, the RF Meter will be assigned to one fluid type. Assign the RF Meter to the tank in which it is connected.

Tank-Hose
 Tank No -

Active keys:



Action: Create hose screen is displayed

Hose ID
 --

The system will automatically insert the created hose into the next available slot (1-48) in the system. The user has the option to change this hose number to any number (1-48) not currently in use.


Note: The Hose ID is the number used to create dispense orders for the meter by the operator.

The supervisor has the option to delete a hose/RF Meter through this screen. This is necessary when there is a change to the system; whereby, a RF Meter needs replacement for any reason.

The supervisor should delete from the keypad the removed RF Meter prior to creating the new RF Meter. This will put the new RF Meter in the same logical position with the keypad and the dispense order process will remain the same.

Delete Hose

Active keys:



Action:


- If a RF Meter is deleted, the Delete Hose screen is displayed
- Enter key with no entry → Create Operator screen is displayed

Creating and Deleting Operators:

- Only valid Operator PIN can dispense fluid
- Maximum 50 operators may be created
- The operator id format is 4 numeric digits
- The operator name format is 16 alphanumeric digits
- Initially, the operator list is empty

New operator

Active keys:




Action:

- If a new operator has been created, the Operator name screen is displayed
- Enter key with no entry → Delete Operator screen is displayed

Operator XXXX

Active keys:




Action: The New operator screen is displayed

Delete an operator by entering the four-digit id number for the operator to be deleted.

Delete operator


Active keys:



Initialization Menu: Flow Chart

⚡ The parameter changes will affect all data in memory (example: if we change the quantity unit from liters to gallons, the general quantity will be simply switched from liters to gallons (no conversion from the previous quantity unit to the new quantity unit)

⚡ No pending dispense order

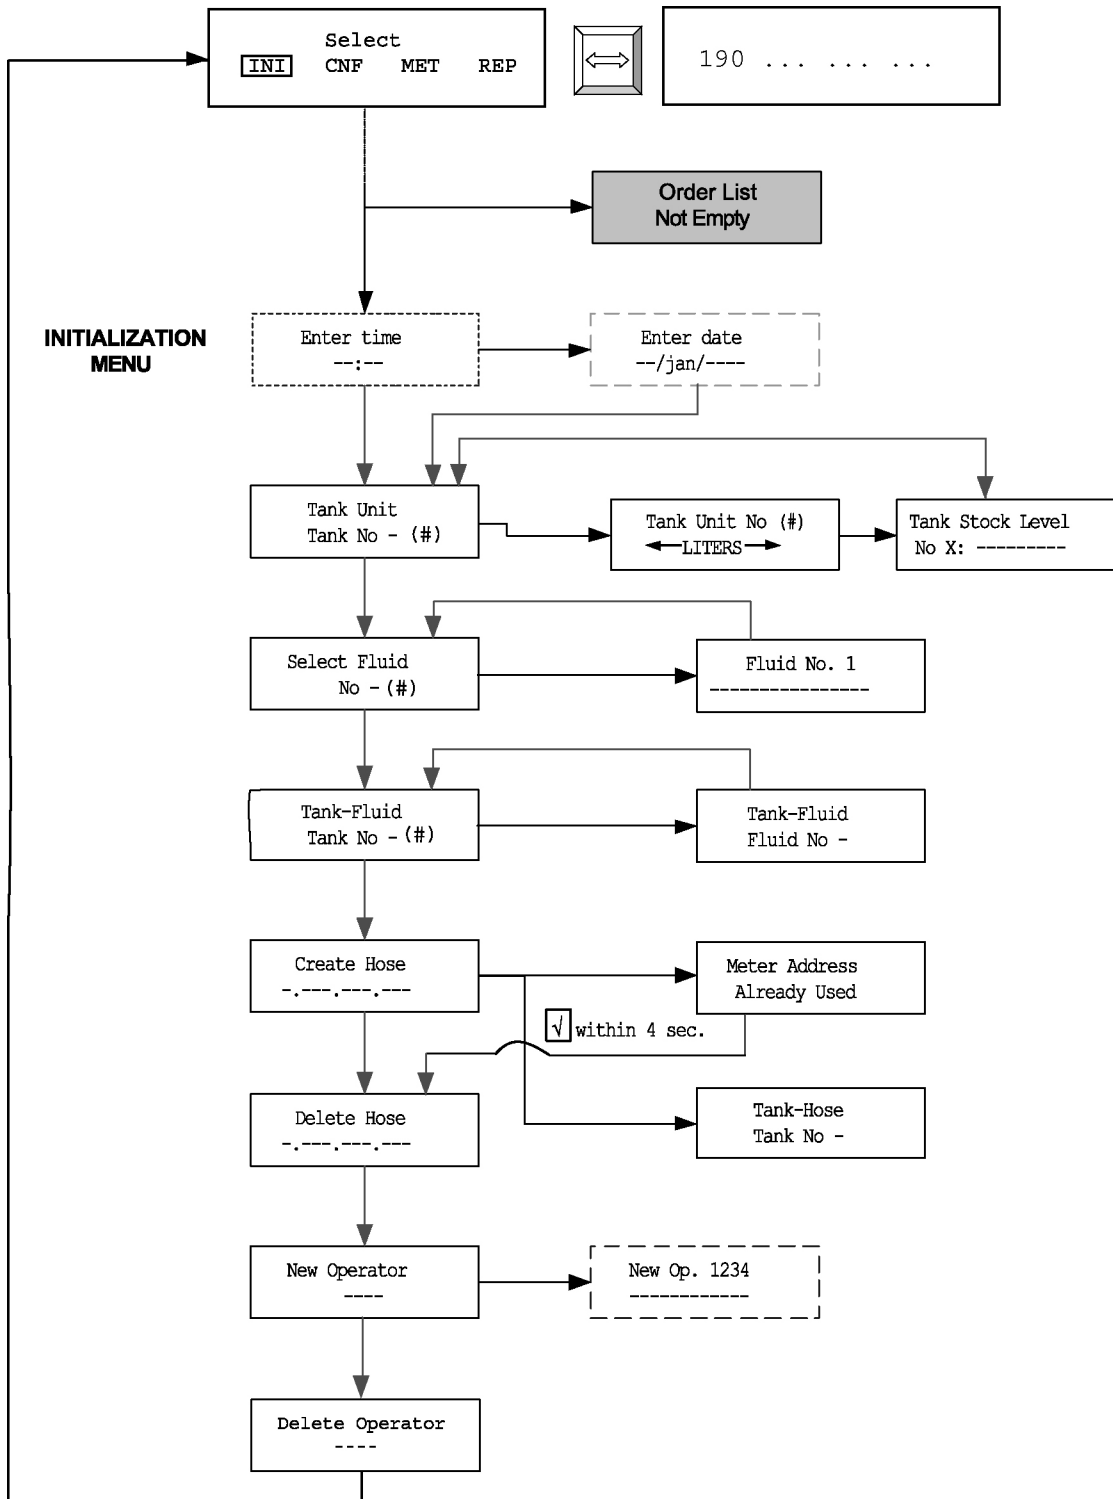


Configuration Menu: (CNF)

The Configuration Menu allows the supervisor to set-up all parameters for the Keypad. The Supervisor is the only user with access to these screens.


Clearing Transactions from Keypad Memory:

- Removes all transactions (Dispense Order) previously recorded in memory
- After an erase memory, it will not be possible to print them out further



Active keys:

The selection is in reverse video



Use the scroll key to select between YES/NO.

Action:

- If yes, the keypad automatically prints all transactions stored in the system if an external printer is attached to the keypad. If no printer is attached the user will be asked to confirm the clear.
- If no, keypad will display the System Reset screen.



No Active keys:


Action:

- Displayed during the printing



Active keys:


The selection is in reverse video



Action: The keypad will automatically return to the Clear Transacts screen on YES or NO confirmation


System Reset:

Allows the user to reset all the configuration parameters to default values:

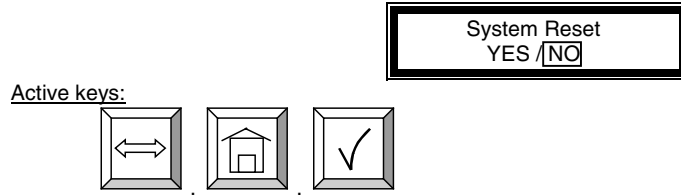

Action:

- If yes, the keypad asks the user to confirm
- If no, the keypad displays the mileage type screen

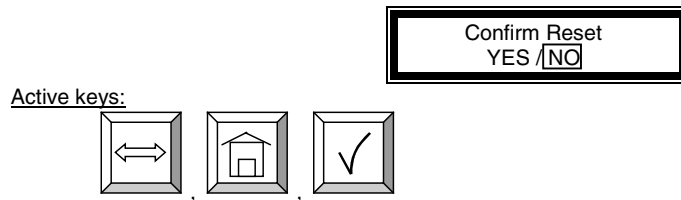


Action: The keypad returns to the System Reset screen

Mileage Type:

Allows the user to select how mileage is stored in the keypad

- KM/MILES
- The mileage type by default is KM.
- The mileage type is set for all RF Meters in the keypad

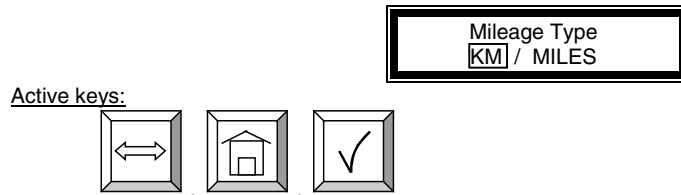


Action:

- Press enter key to move to Mileage Info screen


Mileage and Registration Information Option:

Allows the supervisor to select the storage of vehicle mileage and registration information for each dispense order.

- YES/NO to the option of entering the vehicle mileage information for each dispense order
- Mileage information by default is NO



Active keys:




Action: Use the scroll key to select YES/NO, press enter key to move to the Registration option screen

- YES/NO to the option of entering the vehicle registration information for each dispense order
- Registration information by default is NO





Active keys:



Action: Use the scroll key to select YES/NO, press enter key to move to the keypad timeout screen

Keypad Timeout Option:



- Timeout parameter corresponding to the time it takes to validate after all dispense order data has been entered. If the enter button is not pressed within the time allocated, the keypad display goes back to the initial menu, and the input data is erased.
- The keypad timeout is between 0 to 255 seconds (0 no timeout) and the default for this feature is **10** seconds

Active keys:Action:

- Press Enter key to move to Hose Inactive Timeout Option

Hose Inactive Timeout Option:


- Essentially, this is the time the user has to top-off the dispense and completing the automatic batch.
- Timeout parameter corresponding to the time that a RF Meter could stay inactive after the “Reset” key has been pressed on the meter.
- If the user has not pressed reset on the RF Meter within the timeout period, the RF Meter will transmit the dispense order quantity to the keypad and lockout the RF Meter.
- Meter inactive timeout is sent to the RF meter. It’s the meter (ER) that is responsible of tracking this timer.
- The meter inactive timeout is set for all RF Meters.
- The meter inactive timeout is between 0 to 65534 seconds (0 = no timeout) and the default value is 10 minutes.

Active keys:Action:


- Press Enter key to move to Display Timeout Option

Display Timeout Option: (Do Not Change)

- Timeout parameter corresponding to the time for displaying an information on the keypad LCD before it is refreshed with new information
- The display timeout is set at 2 seconds



Active keys:




Action:


- Press Enter key to move to Internal Printer Option

Internal Printer Option:

- YES / NO. Parameter indicating the existence of an internal printer (CUSTOM FT190).
- The internal printer value is set by default NO (⚡ The keypad will not detect the existence of a printer)



Active keys:



Action:


- Press Enter key to move to External Printer Option

External Printer Option:

- YES / NO. Parameter indicating the existence of an external printer (Use Lincoln printer 282889 and printer cable 282912).
- The external printer value is set by default NO



Active keys:



Action:

- Press Enter key to move to Supervisor Password Option

Supervisor Password Option:


The default supervisor password for protecting the modification of the supervisor id is 0000.

The Supervisor can change this password during the initial set-up of the system.

Maximum 1 Supervisor login



Active keys:




Action:

- Use numeric keys to enter the new password then press enter.
- Enter key with no entry → No change to password and displays buzzer option.




Active keys:




Action: reenter new password to confirm.

Buzzer Option:

This screen provides the user with the option to have a beep on every key entry. The default is YES.




Active keys:




Action: Select YES or NO by using the scroll key, then press Enter. The keypad will display the Supervisor Menu.

Configuration Menu Flowchart:

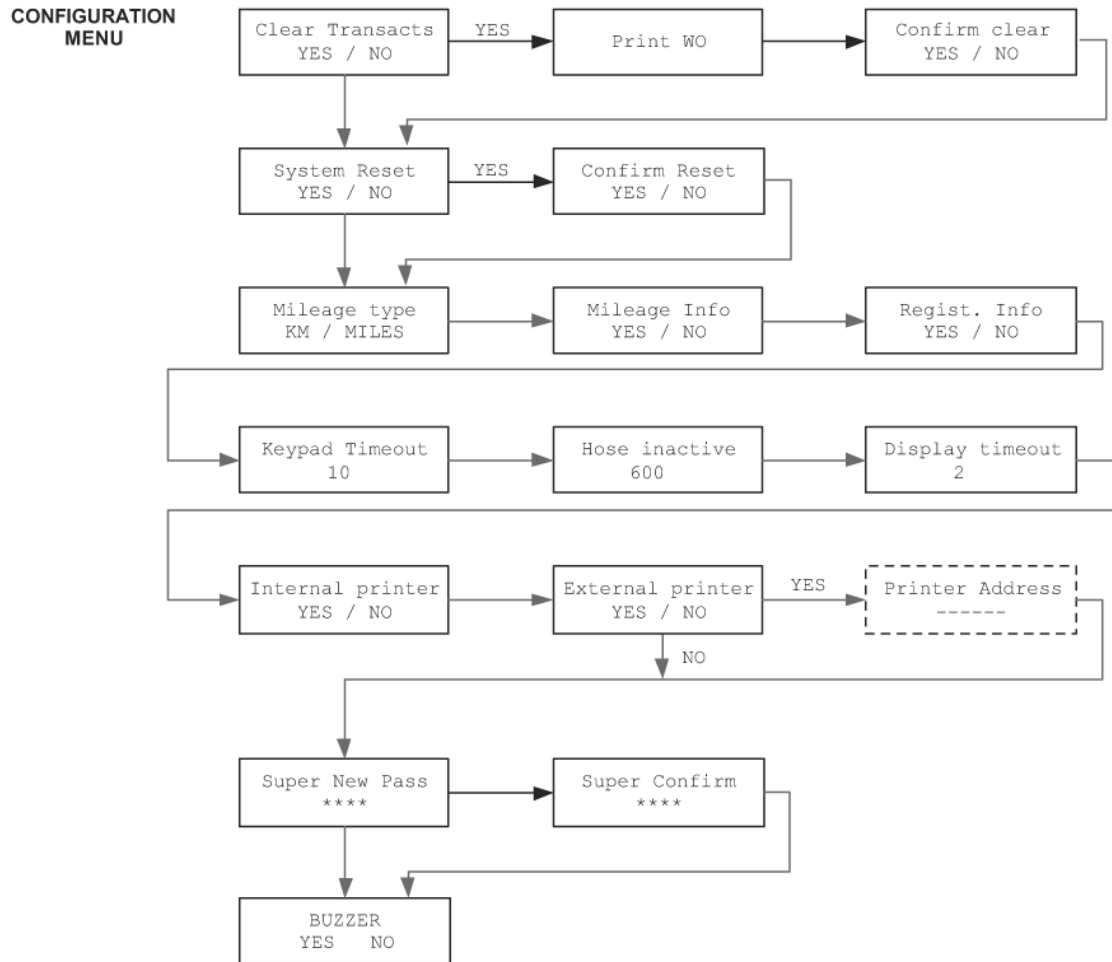

Meter Reset Menu (MET):

- Only the supervisor has access to this process.
- The supervisor may delete a dispense order in the keypad que for a single hose or all hoses in the system.
- If the supervisor selects all RF Meters, all dispense orders in the que will be deleted and all meters may be programmed for a dispense order.

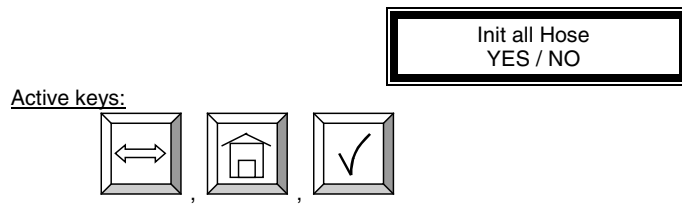

Action:

- If YES → Start (Hoses Init) is displayed
- If NO → User is prompted for a hose number to reset



- Press ENTER to reset the hose

Meter Reset Menu Flowchart:



Report Menu Screens: (REP)

The supervisor has the opportunity to print out a variety of reports, if there is an external printer connected to the keypad.

INI: Prints all parameters associated with the system initialization

CNF: Prints all parameters selected for the configuration of the keypad

MET: Prints the status of all hoses/meters

REP: Prints the dispense order history

The external printer has to be activated and connected.


✚ When the keypad is printing out a report or a receipt, the keypad keyboard will be locked for all new data entry (i.e. the operator will not be able to enter a new Dispense Order List while the keypad is printing).

✚ If the keypad detects an error on the internal printer or the external printer (not connected, out of paper or off line), the keypad keyboard will be locked for all new data entry and an error will displayed on the keypad LCD. The user should check the printers for off-line or out of paper conditions.

✚ If an error is detected while printing, the keypad will not purge the memory (especially in the case of the Dispense Order List report)

✚ After printing out the Dispense Order List report, the Dispense Order list memory is erased automatically

The dispense order receipt is automatically (after a user prompt message) printed out after the RF reception of the dispense order result

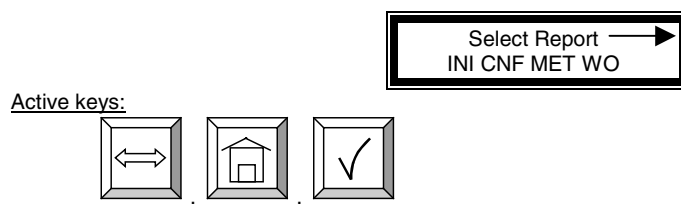

Action:

- Use the scroll key to select report option

Initialization Report:

DD/MMM/YYYY INITIALIZATION REPORT HH:MI			
TNK	PRODUCT	LEVEL	UNT
====	=====	=====	=====
1	Fluid 1 name	99999	LITERS
2	Fluid 2 name	99999	LITERS
(...)	(...)	(...)	(...)
7	Fluid 7 name	99999	LITERS
8	Fluid 8 name	99999	LITERS
ID	ADDR	TNK	
====	=====	====	
123	124456	1	
234	561444	2	
(...)	(...)	(...)	
ID	PIN	NAME	
====	=====	=====	
1	1234	John SMITH	
2	1235	Paul GREEN	
3	1236	Mike BROWN	
(...)	(...)	(...)	
ID	PRODUCT		
====	=====		
1	Fluid 1 name		
2	Fluid 2 name		
(...)	(...)		
7	Fluid 7 name		
8	Fluid 8 name		


DD/MMM/YYYY	Date of the printout
HH:MI	Time of the printout
TNK	Tank No
PRODUCT	Fluid type name
QTY	Quantity dispensed
UNT	Unit
ADDR	Meter RF address
ID	RF Meter Id (Last 3 address characters)
TNK	Tank No
PIN	User pin number
NAME	User name

Configuration Report:

DD/MMM/YYYY CONFIGURATION REPORT HH:MI	
Mileage Type	KM
Registration Info	NO
Mileage Info	NO
Internal printer	Yes
External printer	Yes
Address printer	
Buzzer	Yes
Approved PTB	NO
Supervisor pass	1234
Hose Inactive	600
Keypad Timeout	10
Display Timeout	2
On-Off sequence	999999




Active keys:




Action:

- Use scroll key to move to CNF and press Enter key



Active keys:



Action: After Report is completed the Select Report screen is displayed

Communications Report:


DD/MMM/YYYY	COMMUNICATION REPORT	HH:MI
ADDR	ID	STA
=====	=====	=====
0.000.000.101	1	inactive
0.000.000.137	2	inactive
0.000.000.111	3	inactive
0.000.000.126	4	inactive
0.000.000.127	5	inactive
0.000.000.109	6	inactive
0.000.000.100	7	inactive
0.000.000.135	8	inactive

DD/MMM/YYYY Date of the printout
 HH:MI Time of the printout
 ADDR Meter RF address
 ID RF Meter Id (Last 3 address characters)
 STA Status of the RF link:

- OK → RF link is established
- KO → RF link not established
- ? → RF link doubtful

Select Report →
 INI CNF COM WO

Active keys:




Action:

- Use scroll to move to COM and press Enter

Start
 COM report

Active keys:




Action: After printing Select Report Menu is displayed

Dispense Order Reports



Active keys:




Action:

- Scroll to WO and press Enter key



Active keys:



Action: Scroll to report to print and press the Enter key

There are four reports that may be printed associated with Dispense Orders:


- USR: Print dispense orders by Operator
- PRO: Print dispense orders by Fluid Type
- HOS: Print dispense orders by Hose/Meter
- TNK: Print dispense orders by Tank

User Report (USR):

DD/MMM/YYYY STATISTICAL REPORT BY USER HH:MI		
USER	PRODUCT	QTY
JOHN SMITH	FLUID TYPE 1	99999
	FLUID TYPE 2	99999
	FLUID TYPE 3	99999
	FLUID TYPE 4	99999
PAUL GREEN	FLUID TYPE 5	99999
	FLUID TYPE 6	99999
	FLUID TYPE 7	99999
	FLUID TYPE 8	99999
(...)		



Active keys:




Action: After printing the Select Report Screen is displayed

Product Report (PRO):

DD/MMM/YYYY STATISTICAL REPORT BY PRODUCT HH:MI		
PRODUCT	USER	QTY
=====	=====	=====
FLUID TYPE 1	JOHN SMITH	99999
	PAUL GREEN	99999
FLUID TYPE 2	JOHN SMITH	99999
	PAUL GREEN	99999
FLUID TYPE 3	JOHN SMITH	99999
	PAUL GREEN	99999
(...)		

Start Report

Active keys:




Action: After printing the Select Report Screen is displayed

Hose/Meter Report (HOS):

DD/MMM/YYYY STATISTICAL REPORT BY RF METER HH:MI			
ADDR	ID	USER	QTY
=====	====	=====	=====
123456	456	JOHN SMITH	99999
		PAUL GREEN	99999
234561	561	JOHN SMITH	99999
		PAUL GREEN	99999
(...)			

Start Report

Active keys:




Action: After printing the Select Report Screen is displayed

Tank Report (TNK):

DD/MMM/YYYY STATISTICAL REPORT TANK LEVEL HH:MI			
TNK	PRODUCT	LEVEL	UNT
1	5W30 OIL	123	LITERS
2	GEAR OIL	1111	LITERS
3	ATF 111	11111	GALLONS
4	HYDRAULIC FLUID	232	QUARTS
5	10W40 OIL	3466	PINTS
6	WASHER FLUID	1	LITERS
7	5W40 OIL	2344	LITERS
8	BEER	43234	PINTS


Start Report

Active keys:



Action: After printing the Select Report Screen is displayed

Report Menu Flowchart

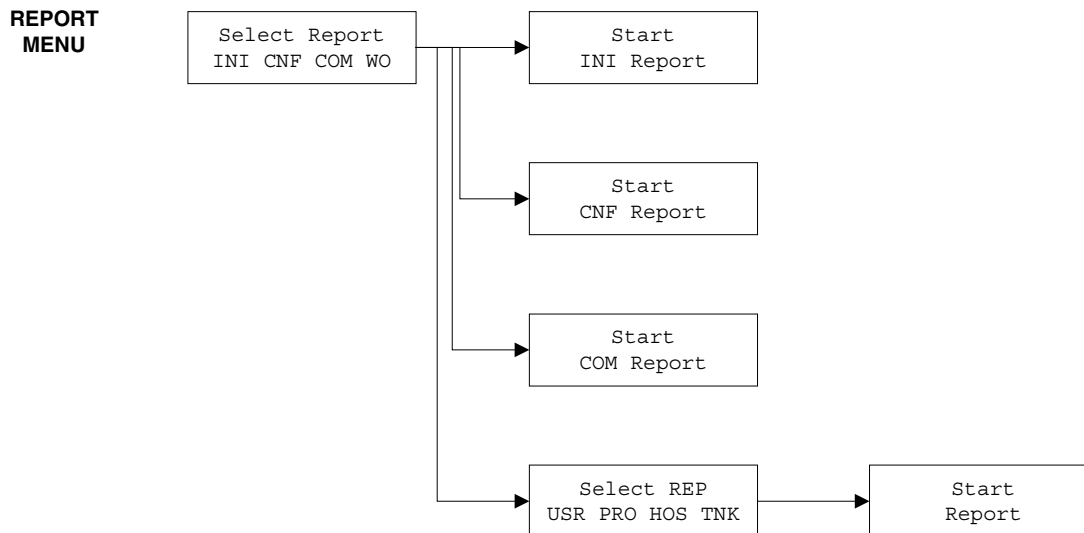

Internal Printer Reports (190)

- FLU:** Prints all fluids created in the system
- HDS:** Prints all hose numbers with meter serial numbers
- TNK:** Prints all tanks created in the system
- USE:** Prints all operators created in the system
- WO:** Prints all work orders pending
- PEN:** Prints the current meter status

“INACTIVE”: Hose is ready

“ACTIVE”: A dispense order is pending


“UNREACHABLE”: Hose is not ready

- Hit reset button on meter to begin communications test and reset meter.

PAR: Prints the current setting in configuration menu

MEM: Prints the memory configuration for system

NOTE: It is recommended that the supervisor print all internal reports and store hard copies after setting up the system.

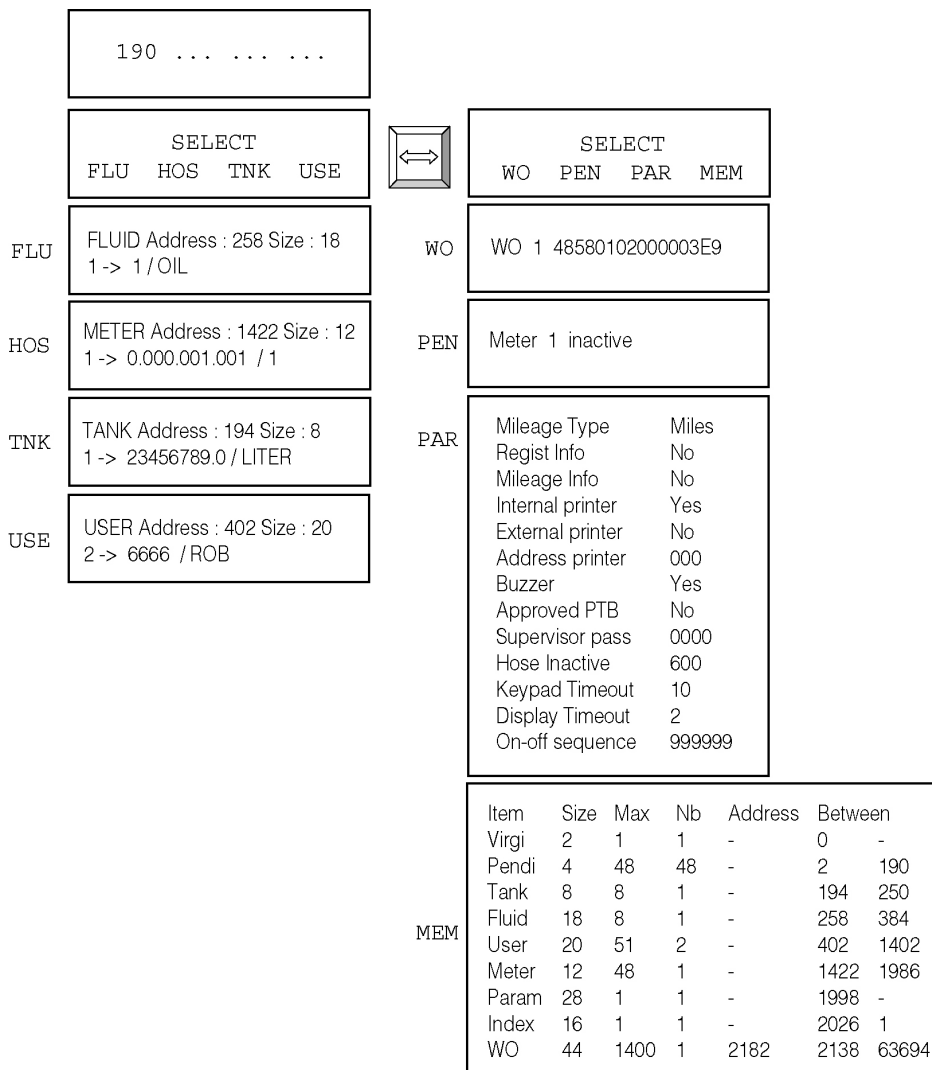

Operator:

The Operator only has access to the dispense order menus. At the main menu, enter one of the four-digit operator pin numbers.

- The pin number is 4 numeric characters
- Maximum 50 operators account
- The supervisor account has access to the management process
- The operator account has only access to the dispense order process


Dispense Order Process:

After a valid Operator pin number is entered, the following screens form the dispense order process:

Job No: Enter the job or work order number: This may be alphanumeric and up to 16 digits.

Enter Job No.

Active keys:



Action:


- Enter the 16-digit alphanumeric work order number and press Enter to move to next screen

The next two screens are only displayed if the settings for Registration and Mileage are set to YES in the Configuration Menu.

Registration Number: Enter the Registration or License Plate number of the vehicle.

Enter Reg. No.

Active keys:




Action: Enter the 10-digit Alphanumeric Registration number and press Enter to move to next screen

Mileage: Enter the current mileage on the vehicle.




Active keys:




Action: Enter the numeric current mileage of vehicle and press Enter to move to the next screen

Hose: Enter a valid Hose/Meter number for the dispense.

- This number will be from 1-48, and only valid Hose numbers will be accepted.
- If an undefined hose number is entered, the display will remain on this screen.
- **If there is an on going dispense already in process with the Hose, a new dispense order for that Hose will not be accepted.**




Active keys:



Action: Enter a Hose number that has been previously created through the initialization menu and press enter

Product: The keypad will automatically display the Fluid Type associated with the Hose previously selected. There is no data entry for this screen.




Active keys:

There is no active key.
This screen is displayed for user information
It is display during 3 seconds and it goes to quantity


No Action

Quantity: Enter the quantity to be dispensed through the Hose.

- Quantity may be from 0.0-99.9 and 100-999.
- There may be only one digit after the decimal point.
- Dispensed quantities from 100-999 will be in count down mode.
- A quantity of 0.0 will put the RF Meter in a free-dispense mode, the RF Meter will not latch and the user may display fluid as long as the trigger is manually held in the open position. The user must press RESET on the RF Meter to exit this dispense and communicate the dispense order to the Keypad.




Active keys:




Action: Select the quantity to be dispensed and press Enter

Dispense Confirmation: Press Enter to confirm a dispense is desired.



Active keys:



Action: Press the Enter Key to confirm the dispense. Press HOME to cancel order and return to the main screen.

Dispense Order Transaction Ticket: A ticket receipt is printed for every dispense after the completion of the dispense by the RF Meter.

TRANSACTION TICKET	
DD/MMM/YYYY HH:MI	
PRODUCT	FLUID TYPE 1
QUANTITY	2.1 LTS
OPERATOR	JOHN SMITH
RF METER ID	12
WO	1234567890123456
MILEAGE	-
REGISTRATION	-
TYPE	PRE-SET/MANUAL/OUT OF SEQUENCE
LEVEL	999999 LTS
ERROR1	1 (COMMUNICATION ERROR)
ERROR2	3 (LOW BATTERIES)
ERROR3	5 (COUNT ERROR)

- The Ticket is printed on the internal printer.
- **Product:** Fluid dispensed
- **Quantity:** Exact quantity of fluid dispensed by the Hose
- **Operator:** Operator who dispensed the fluid
- **RF Meter ID:** Hose number
- **WO:** Work Order number
- **Mileage:** Mileage of vehicle, only printed if configured to YES
- **Registration:** Registration or License number, only printed if configured to YES
- **Type:** The type of dispense:
 - **Pre-set:** Normal Dispense Process
 - **Manual:** Fluid dispensed while RF Meter was in a manual mode of operation. This is a degraded mode of operation.
 - **Out of Sequence:** Normal Dispense Process, but data not communicated from the Hose to the Keypad immediately after the dispense. Out of Sequence quantity is only communicated through the Supervisor Menu in COM mode. This is a degraded mode of operation.
- **Level:** The remaining amount of fluid in the tank used for the dispense
- **Error1...3:** Error Message for the dispense:
 - **Communication Error:** Difficulty in communications
 - **Low Batteries:** Change the batteries on the RF Meter/hose
 - **Count Error:** RF Meter had a count error, NOT AN APPROVED DISPENSE.

Dispense Order Flow Chart:


Operator:

The operator is a user that has only access to the dispense order process. After entering a dispense order, the operator activates the preset RF Meter for a fluid dispense.

Receipt:

On internal printer if or on external printer if connected. If both are connected, the internal one will be used. If no printer is connected, no receipt will be printed.

The dispense order process follows an operator PIN Number

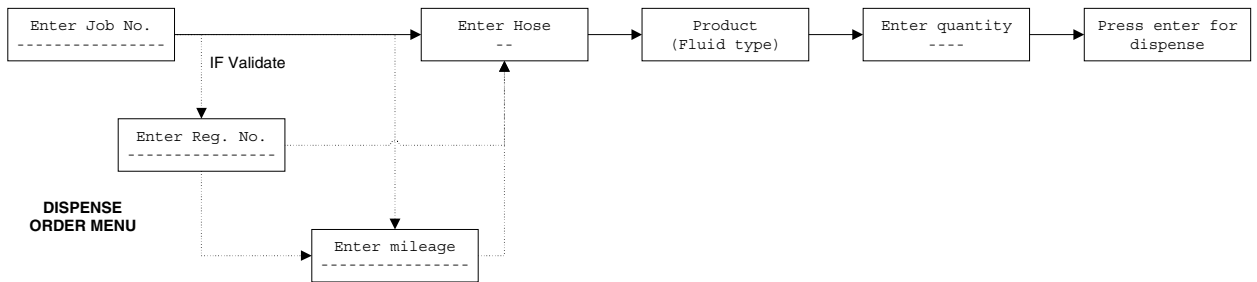

Registration and mileage are active only if they are select in the management process.

ERROR MESSAGES

The following are error messages that can be displayed by the keypad and the associated action that should occur to reset the system.

**“KEY HOSE INT
RESET ON HOSE”** A communications error occurred between the keypad and meter.

ACTION: Press RESET on the meter.

“KEYPAD ERROR” An error occurred in the keypad.

ACTION: Press RESET on the meter to recover data.

**“HOSE AFFECTED
HIT HOSE RESET”** The selected meter currently has a dispense order in process or waiting to be processed.

ACTION: The user should clear out the requested dispense by selecting MET in the Supervisor Menu.



Americas:
One Lincoln Way
St. Louis, MO 63120-1578
USA
Phone +1.314.679.4200
Fax +1.800.424.5359

Europe/Africa:
Heinrich-Hertz-Str 2-8
D-69183 Walldorf
Germany
Phone +49.6227.33.0
Fax +49.6227.33.259

Asia/Pacific:
25 Int'l Business Park
#01-65 German Centre
Singapore 609916
Phone +65.562.7960
Fax +65.562.9967

Form 403085
© Copyright 2003
Printed in USA

Web site:
www.lincolnindustrial.com