## INSTRUCTIONS FOR CHANGING HONEYCOMB FILTER TUBE

USE ONLY GENUINE HONEYCOMB FILTER TUBE 66537

LOOSEN 66537-1 COVER NUT UNTIL IT IS FREE OF CENTER POST.

LOWER 66537-9 TUBE GUIDE AND SHELL ASSEMBLY. THE 66537-10 BAFFLE DEFLECTOR AND 66537 HONEYCOMB FILTER TUBE WILL COME WITH IT.

REMOVE 66537-10 BAFFLE DEFLECTOR FROM TUBE GUIDE AND SHELL ASSEMBLY. WIPE CLEAN AND CAREFULLY SET ASIDE, IT IS FRAGILE.

REMOVE AND DISCARD USED 66537 FILTER TUBE AND 66537-6 SHELL GASKET, WIPE TUBE GUIDE AND SHELL ASSEMBLY CLEAN.

INSERT NEW 66537-6 SHELL GASKET IN GROOVE OF 66537-3 FILTER HEAD. BE SURE IT IS FIRMLY SEATED ALL AROUND. PLACE NEW 66537 HONEYCOMB FILTER TUBE IN SHELL AND PUSH DOWN FIRMLY UNTIL TOPOF FILTER TUBE IS LEVEL WITH TOP OF SHELL.

PLACE 66537-10 BAFFLE DEFLECTOR OVER NEW FILTER TUBE.


PUSH SHELL ASSEMBLY FIRMLY UP AGAINST 66537-3 FILTER HEAD. MAKE SURE UPPER EDGE OF SHELL ENTERS GASKET ALL AROUND AND DOES NOT RIDE ON EDGE.

BE SURE 66537-2 COVER NUT GASKET IS IN GOOD CONDITION AND IN PROPER LOCATION. ENGAGE 66537-1 COVER NUT WITH THREADED TOP OF CENTER POST AND TIGHTEN SECURELY.

BE SURE DRAIN COCK IS CLOSED.

FILTER IS NOW READY FOR USE.

NOTE: FILTER SHOULD BE DRAINED DAILY.

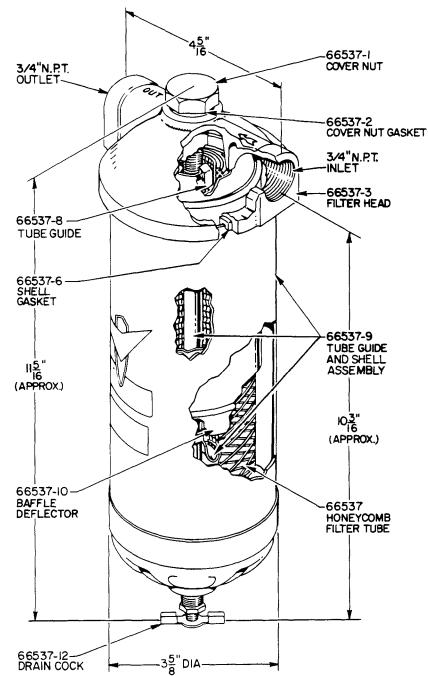

## REPAIR PARTS LIST

Part No.	Description	Part No.	Description
66537 66537-1 66537-2 66537-3 66537-6	Honeycomb Filter Tube Cover Nut Cover Nut Gasket Filter Head Shell Gasket	66537-8 66537-9 66537-10 66537-12	Tube Guide Tube Guide & Shell Assembly Baffle Deflector Drain Cock



One Lincoln Way St Louis, Missouri 63120-1578 (314) 679-4200 Telex 44881 SECTION - G10
PAGE - 10