


**PILEDRIVERIII
PUMP ASSEMBLY**

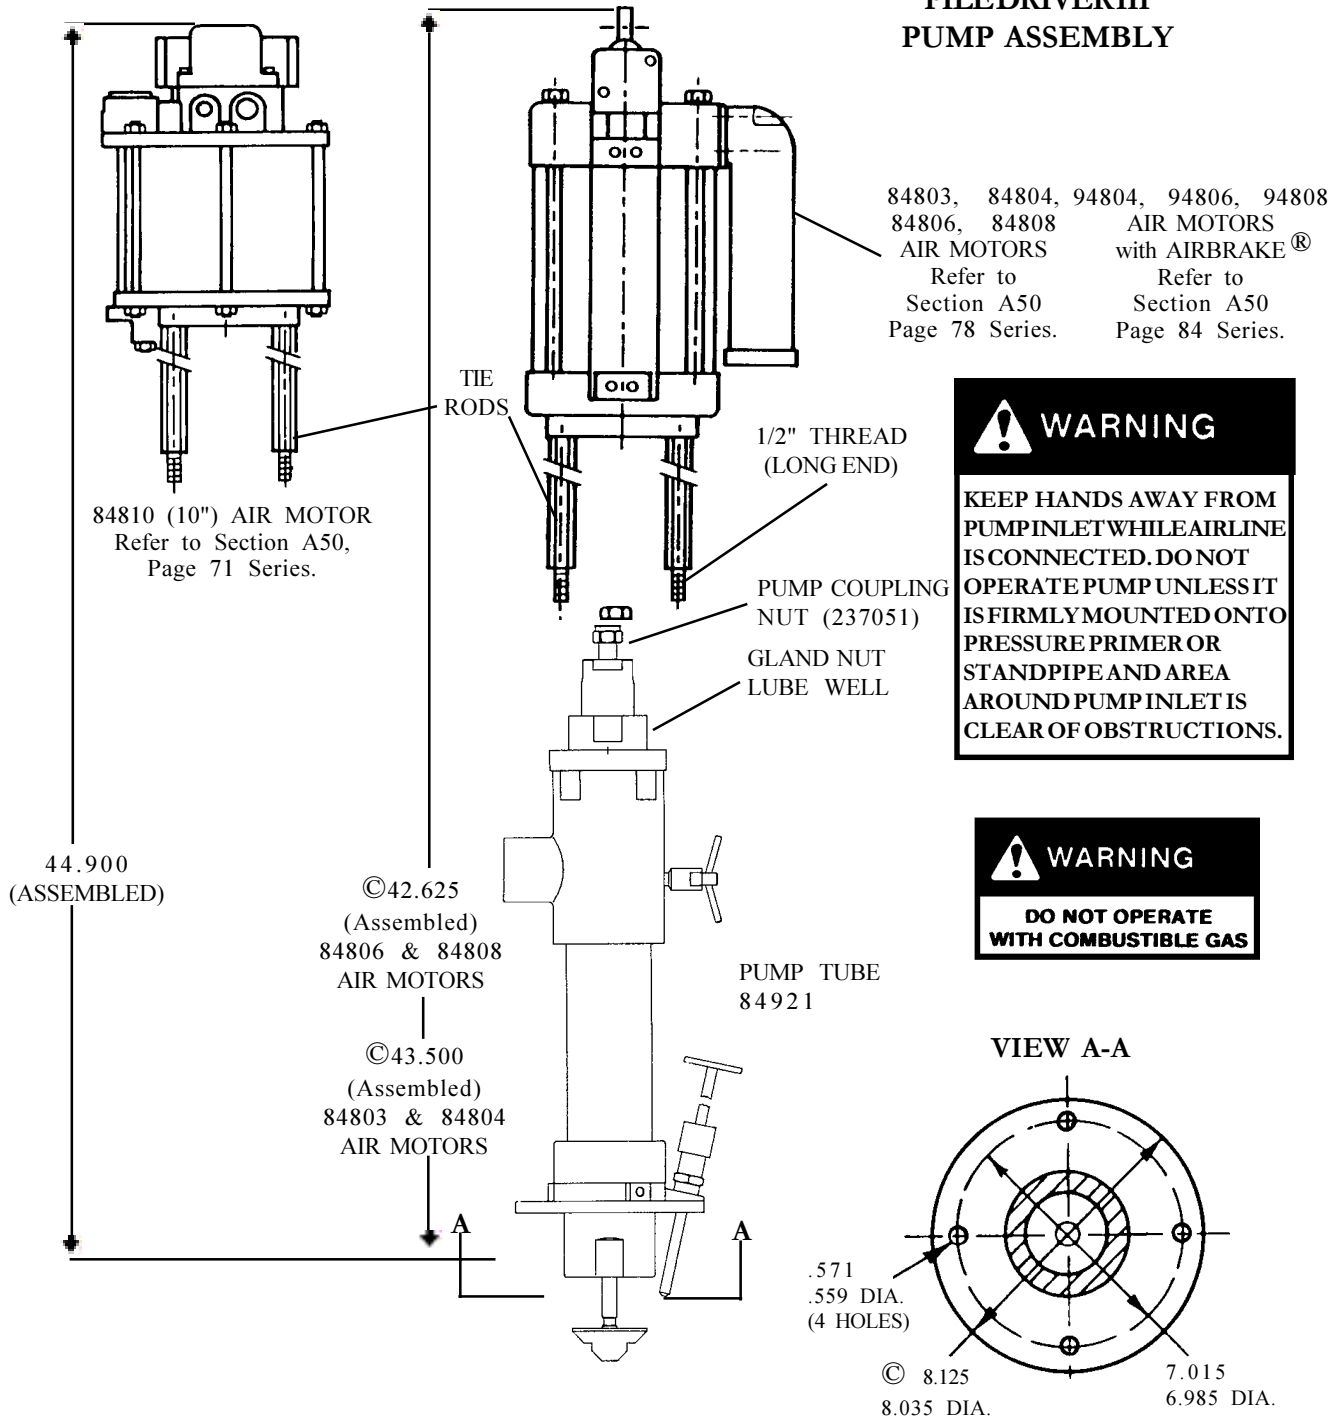

© Indicates Change

SPECIFICATIONS

Model	Ratio	Airmotor Size in. (mm)	Airmotor Model	Maximum Discharge Pressure PSIG (Bar)	Output Per Cycle cu. in. (cc)	Stroke Length in. (mm)	Minimum Air Supply Hose in. (mm)	Maximum Operating Air Pressure PSIG (Bar)	Operating Temperature F° (C°)
2320	20:1	10 (254)	84810	2,000 (138)	44 (721)	6 (152)	3/4 (20)	100 (7)	30° to 200° (-34° to +93°)
2326	13:1	8 (203)	84808	1,300 (90)					
2353	7:1	6 (152)	84806	700 (48)					
2368	3:1	4-1/4 (108)	84804	600 (41)					
2318	1.5:1	3 (76)	84803	300 (21)			1/2 (12)	200 (14)	

NOTE: Pump should be installed upright for operation. Use Model 83727 stand pipe for bulk material dispensing. Locate pump as close to tank as possible and use a minimum 3 inch (76mm) I.D. inlet hose or pipe.

ATTACHING AIRMOTOR TO PUMPTUBE*

1. Tightly attach tie rods to the airmotor (use short threaded end of the tie rods).
2. Mount airmotor on top of the pump-tube outlet and tightly connect Coupling Nut (237051) to airmotor piston rod.
3. Hand tighten tie rods to the outlet with four nuts supplied with airmotor.
4. Slowly cycle the pump several times, using just enough air pressure to operate the pump without stalling.
5. Stop the pump on an "up" stroke and tighten the four nuts to securely fasten the airmotor to the pumptube.

- Check continuity (a good static wire connection) with an ohmmeter. Place one probe on one hose fitting and the other probe on other hose fitting, continuity or proper grounding through hose is good when a reading is obtained on the ohmmeter.
- PREVENT FIRES. When pumping, flushing or recirculating volatile solvents, the area must be adequately ventilated.
- Keep solvents away from heat, sparks and open flames. Keep containers closed when not in use.

Secondly a special Protection Sleeve (239947) with concentric grooves creates a labyrinth path and reduces internal operational pressure and at the same time pressure fluctuation during a stroke changeover, limits gland seal exposure to pumped material.

A combination of the metal scraper and protection sleeve prolongs gland seal life and prevents leakage.

PUMP PRIMING

To start operating, the pump has to be primed with pumped material. The Pile Driver III pump is double acting (pumps material on "up" & "down" stroke) positive displacement reciprocating pump and as such intakes material only on "up" stroke.

To prime pump-open output line (material valve) and slowly open air supply valve until pump starts. Allow pump to cycle very slowly until all air is pushed out of lines and material fills out pump and lines. Close output line (material valve) - pump should stall against pressure.

If pump fails to prime properly open Bleeder Valve (84012) slightly to expel trapped air and at the sign of material coming out of the valve close it tightly.

Note: Pumps are factory tested with light oil and some of it is left in, to protect pump parts during storage and transportation. To prevent contamination of material to be pumped, flush pump before using.

OUTLET POSITION ADJUSTMENT

The position of the pump outlet may be adjusted by loosening the three set screws (246836) and rotating the pumptube outlet into the position desired. Retighten the set screws to 12 ft/lbs.



GLAND PACKING DESIGN*


Many industrial type materials (sealants, adhesives, inks, etc.) display a tendency to dry-out and to build-up on the pump rod (plunger). These hard dried out materials cause the gland packing to wear out rapidly, resulting in leakage and ultimate pump failure. The second problem is the gland seal exposure to high pressure and in particular, to pressure fluctuation during pump operation (stroke changeover).

The new gland packing design* of Pile Driver III pumps addresses both problems:


A special spring type Metal Wiper (239950), scrapes built up and dried out material from the pump rod (plunger). In order to help the metal wiper to work longer and more efficiently, the lube well of the pump should be filled with a fluid compatible with pumped material.

Do not fill lube well to full capacity, as the reciprocating movement of the pump may draw fluid into the airmotor.


* U.S. Patent No. 4,976,192

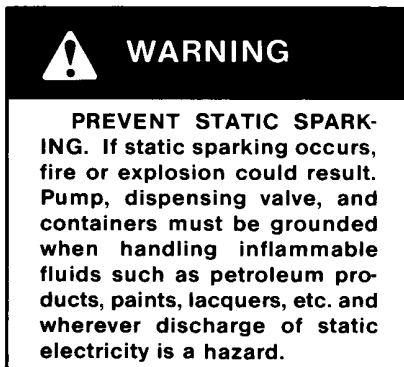

**PILEDRIVERIII
PUMP ASSEMBLY
8 4 9 2 1**

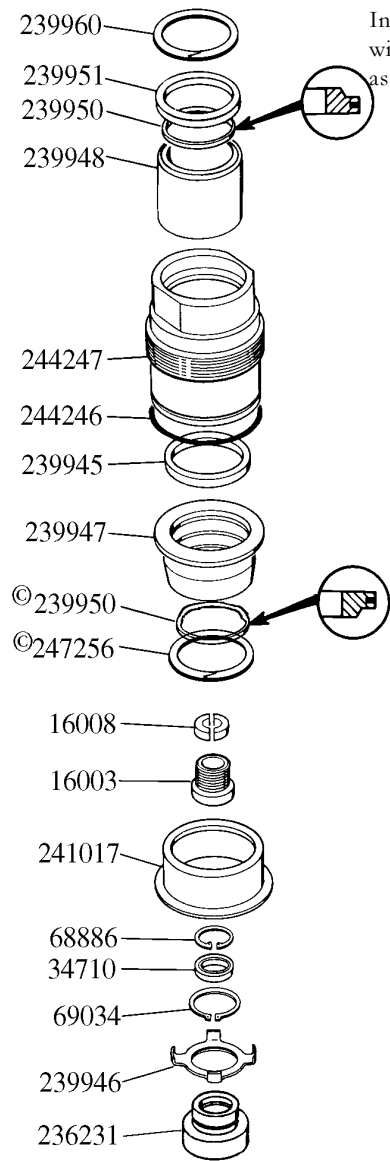

Install scraper ring with sharp edge up, as shown.

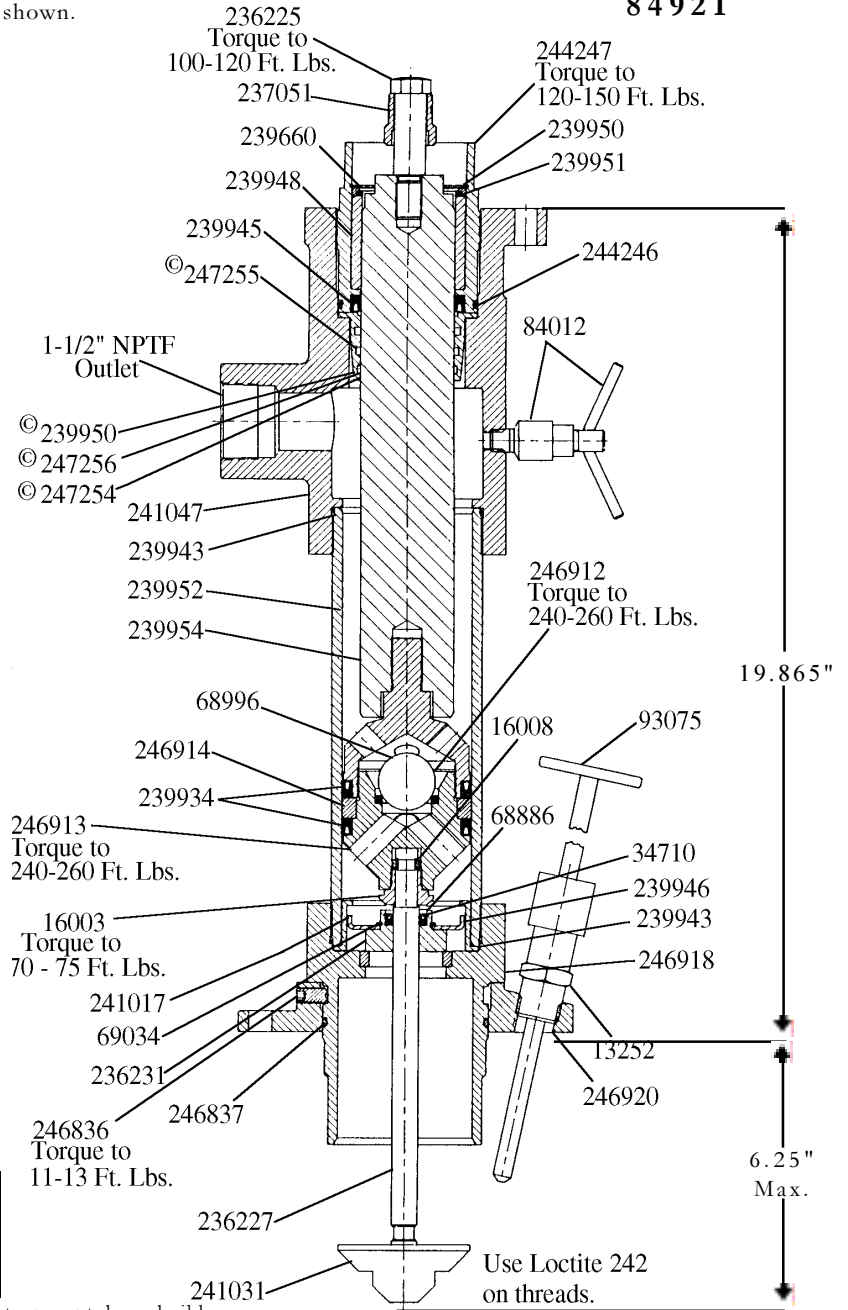

PUMPTUBESERVICE KITS

	Polyurethan	Teflon	Polyethylene
Repair Kit	241680		
Seal Kit	84927	84928	84929
Gland Seal Kit	85315	85325	85331

Repair Kit contains all parts needed for complete pumptube rebuild.

Polyurethane Seal Kit contains all soft seals.

Teflon and Polyethylene Seal Kits contain gland and piston u-cups only.

Gland Seal kits contain gland u-cup and o-ring only.

SERVICEPARTS

© Indicates Change

PART	QTY	DESCRIPTION	PART	QTY	DESCRIPTION	PART	QTY	DESCRIPTION
13252	1	Connector (1-1/8" hex)	*^239934	2	U-cup (polyurethane)	#*^244246	1	O-ring (polyurethane)
16003	1	Adapter (1-1/8" flats)	*^239943	2	O-ring (polyurethane)	244247	1	Gland nut (3-1/8" flats)
^16008	2	Keeper	#*^239945	1	U-Cup (polyurethane)	246836	3	Set screw (3/16" hex socket)
*^34710	1	U-cup (polyurethane)	^239946	1	Guide washer	*^246837	1	O-ring (nitrile)
^68886	1	Retaining ring	239948	1	Bushing	246912	1	Piston nut (2-3/4" flats)
68996	1	Check ball	^239950	1	Wiper	246913	1	Piston body (1-1/8" flats)
^69034	1	Retaining ring	239951	1	Spacer	246914	1	Piston collar
84012	1	Bleeder valve (3/4" flats)	239952	1	Pump tube	246918	1	Inlet bushing (3-3/4" flats)
93075	1	Priming plug	239954	1	Plunger (1-3/4" flats)	246920	1	Mounting flange
236225	1	Bolt connector (7/8" hex)	^239960	1	Retaining ring	247254	1	Retaining Ring©
236227	1	Priming rod (1/2" flats)	241017	1	Check stop	247255	1	Sleeve©
236231	1	Check	241031	1	Priming plunger nut (1-1/2" flats)	247256	1	Washer©
237051	1	Coupling nut (1-1/8" hex)	241047	1	Outlet body			

^ Included in 241680 Repair Kit

* Included in 84927 Seal Kit

Included in 85315 Gland Seal Kit

TROUBLESHOOTING

Problem	Possible Cause	Solution
Pump does not operate.	Restricted or inadequate air supply.	Check air supply pressure and air hose diameter (see specifications for minimum air supply hose diameter).
	Obstructed material output.	Check output line for restrictions.
Erratic or accelerated operation.	Pump is not primed.	Prime pump (see "pump priming instructions").
	Insufficient material supply.	Refill material supply.
	Material is too heavy for priming.	Lower output with material valve. Increase pressure to pressure primer (if in use). Check for inlet restrictions.
Pump operates on "down" stroke only (missing "up" stroke).	Worn or damaged piston packing (239934) or piston check (68993 & 246913).	Check and replace if needed.
Pump operates on "up" stroke only (missing "down" stroke).	Worn or damaged inlet check (236231) or priming rod packing (34710).	Check and replace if needed.
	Insufficient material supply, pump is not intaking enough material to dispense on both strokes.	Check inlet for restrictions. lower output with material valve.
Pump is operating but not dispensing material.	Inlet check (236231) is not seating or damaged.	Check and replace if needed.

DISASSEMBLYPROCEDURE

Tools Required (Used on Part #)

3/16" hex key	(246836)
1/2" wrench	(236227)
3/4" wrench	(84012)
7/8" wrench	(236225)
1-1/8" wrench	(16003, 237051 & 246913)
1-1/2" wrench	(241031)
1-3/4" wrench	(239954)
2-3/4" wrench	(246912)
3-1/8" wrench	(244247)
3-3/4" wrench	(246918)
3-5/8" dia. strap wrench	(239952)
Internal retaining ring pliers	(68886)
External retaining ring pliers	(69034)
Screwdriver	(239960 & 247254)

4. Remove Inlet Bushing 246918 from Pump Tube 239952.
 - a. Remove O-ring 246837 from Inlet Bushing 246918.
 - b. Remove O-ring 239943 from Inlet Bushing 246918.
 - c. Remove Check Guide 241017 and check assembly from Inlet Bushing 246918.
 - d. Remove Retaining Ring 69034 and Guide Washer 239946 from Check 236231.
 - e. Remove Retaining Ring 68886 and U-cup 34710 from Check 236231.
5. Remove Bolt Connector 236225 from Plunger 239954.
 - a. Slide Coupling Nut 237051 off Bolt Connector 236225.
6. Remove priming rod, piston and plunger assembly from bottom of Pump Tube 239952.
 - a. Remove Adapter 16003 from Piston Body 246913.
 - b. Remove Keepers 16008 and Adapter 16003 from Priming Rod 236227.
 - c. Remove piston assembly from Plunger 239954.
- d. Remove Piston Nut 246912 and Check Ball 68996 from Piston Body 246913.
- e. Remove U-cup 239934 from Piston Nut 246912.
- f. Remove Piston Collar 246914 and U-cup 239934 from Piston Body 246913.
7. Remove Pump Tube 239952 from Outlet Body 241047.
8. Remove O-ring 239943 from Outlet Body 241047.
9. Remove Bleeder Valve 84012 from Outlet Body 241047.
10. Remove gland nut assembly from Outlet Body 241047.
 - a. Remove O-ring 244246 and U-cup 239945 from Gland Nut 244247.
 - b. Remove Retaining Ring 239960 from Gland Nut 244247.
 - c. Remove Spacer 239951, Wiper 239950 and Bushing 239948 from Gland Nut 244247.
11. Remove Sleeve 247255, Scraper 239950, Washer 247256, and Retaining Ring 247254 from Outlet Body 241047.
12. To re-assemble pump, reverse disassembly procedure. (Refer to illustration for torque specifications.)

RETAIN THIS INFORMATION FOR FUTURE REFERENCE

When ordering replacement parts, list: Part Number, Description, Model Number and Series Letter.

LINCOLN provides a Distributor Network that stocks equipment and replacement parts.