



ELECTRIC-OPERATED PUMP (GREASE)

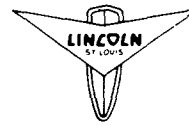

Model 1833

Series "B"

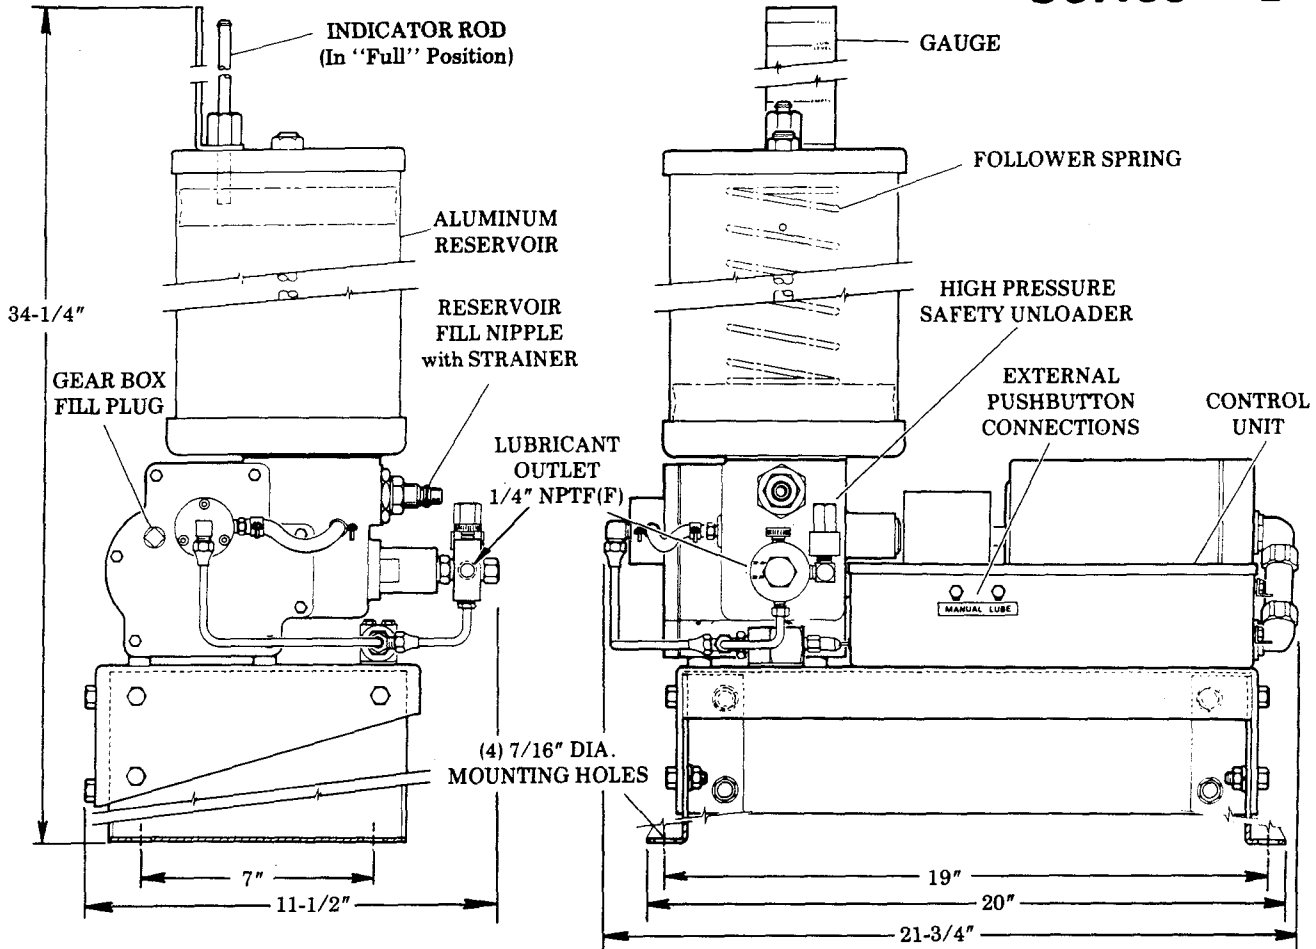

DESCRIPTION—MODEL 1833

Model 1833 is an electric-operated pump (designed for installation on mobile machinery where power is received from vehicle storage battery) consisting of an electric motor, a reciprocating-type pumping mechanism, lubricant reservoir and a control unit (timing mechanism). With full reservoir, total weight; 80 lbs.

MOTOR

A 1/4 H.P., 24 VDC, 10 AMP, 1800 RPM electric motor supplies power to the pump. A thermal overload protection to guard against extreme heat build up is incorporated.

PUMPING MECHANISM

An average of 10 oz. per minute (18 cu. in.) with pumping pressures as high as 2900 psi can be attained. Pump operation is factory pre-set for 2500 psi. A high pressure safety unloader (set to unload at 3750 to 4250 psi) is provided for protection against excessive pressure. The outlet check can be easily removed for inspection and service.

IMPORTANT: It is recommended that the Gear Box be checked periodically to maintain the proper level of S.A.E. 80 Gear Lubricant.

RESERVOIR

The lubricant reservoir has a capacity of 12 lbs. Lubricant level is denoted by the indicator rod & gauge. The reservoir assembly is gasketed and covered to prevent the entry of possible contaminants. Filling is done through the fill nipple which also strains the grease before entering the reservoir.

CONTROL UNIT

Refer to back page for wiring instructions and information for Control Unit.

MANUAL LUBE

A pushbutton switch has been provided with this unit permitting both ease in filling large supply lines after installation and manual operation of system anytime between clocked lubrication cycles. If pushbutton switch is used, it should be wired to the terminals on the front of the control unit marked "MANUAL LUBE". By depressing the switch and holding it "ON", the motor will run independent of the timer and continue to run until the desired system pressure is reached. At this point, the pressure switch contacts will open, stopping the motor. The pushbutton switch **MUST** be released at this time or, as the system begins to vent pressure, the motor will restart.

LINCOLN ST. LOUIS



4010 GOODFELLOW BLVD. • ST. LOUIS, MO. 63120 • (314) 679-4200





A DIVISION OF
McNEIL
CORPORATION

SECTION -C8
PAGE -175

DETAIL "C"

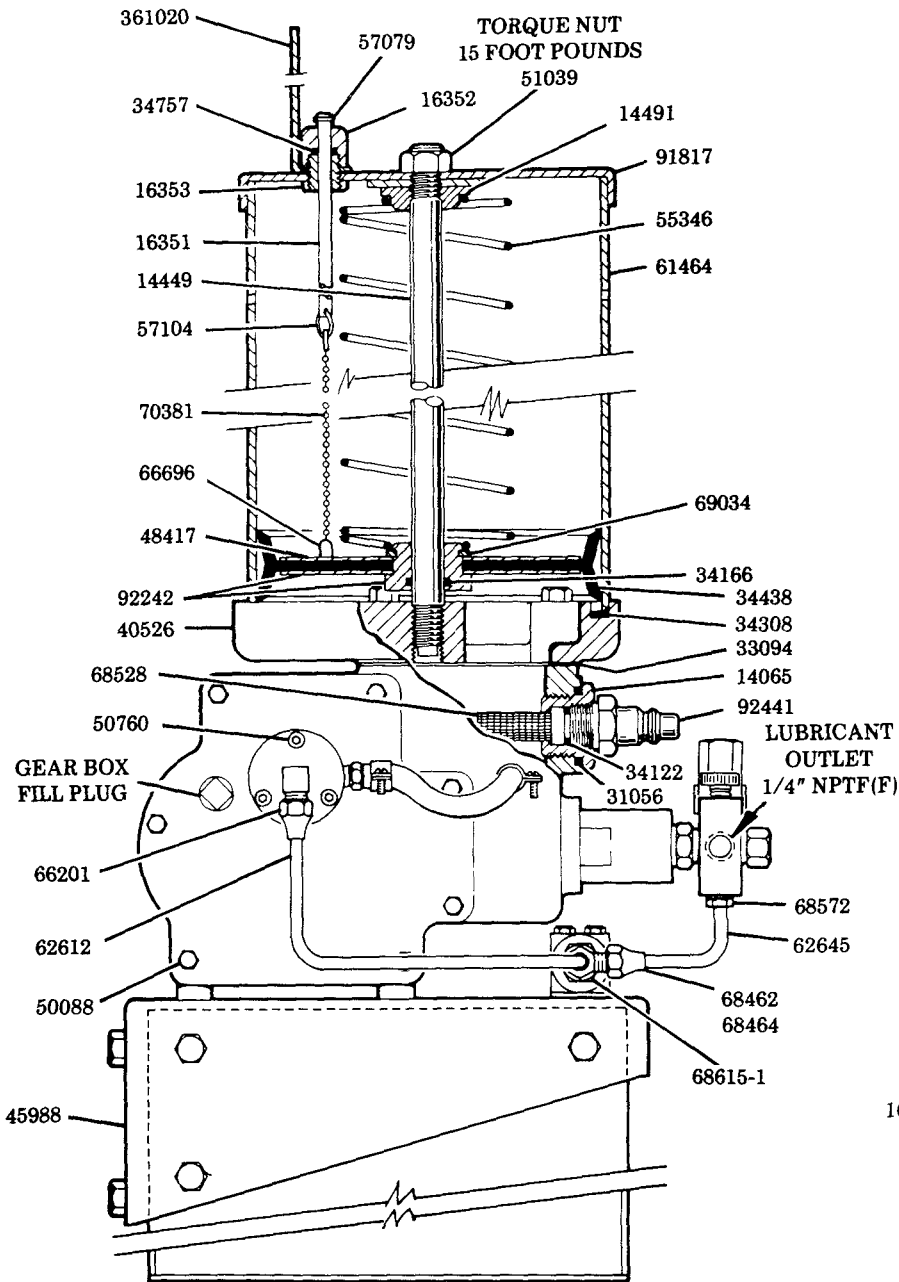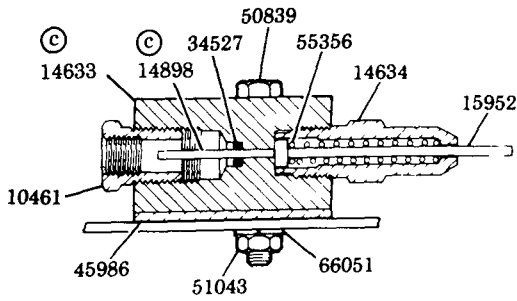

SECTION A-A

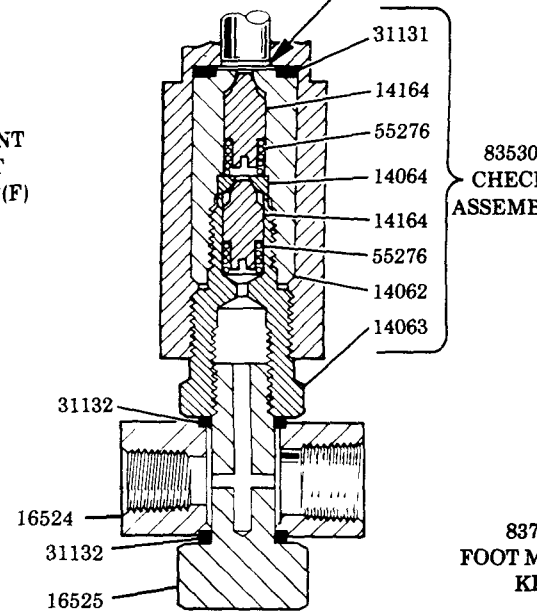
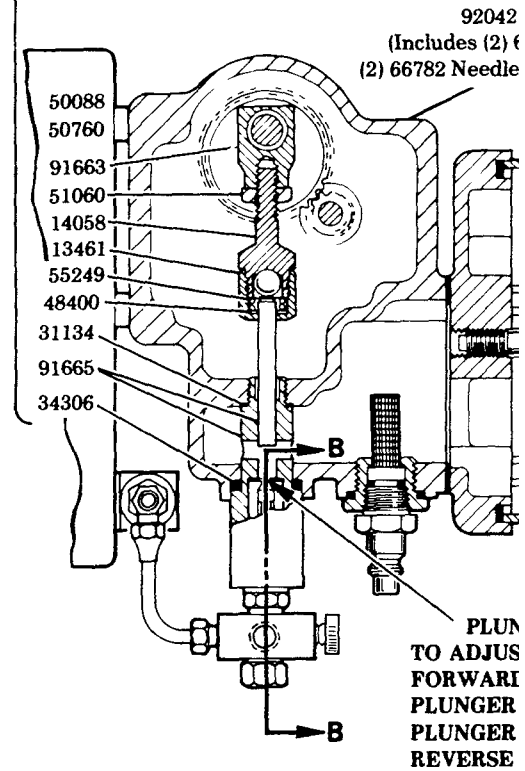


SECTION B-B


837
FOOT M
KI

83477 GEAR BOX ASSEMBLY

92042
des (2) 66641 &
Needle Bearings)

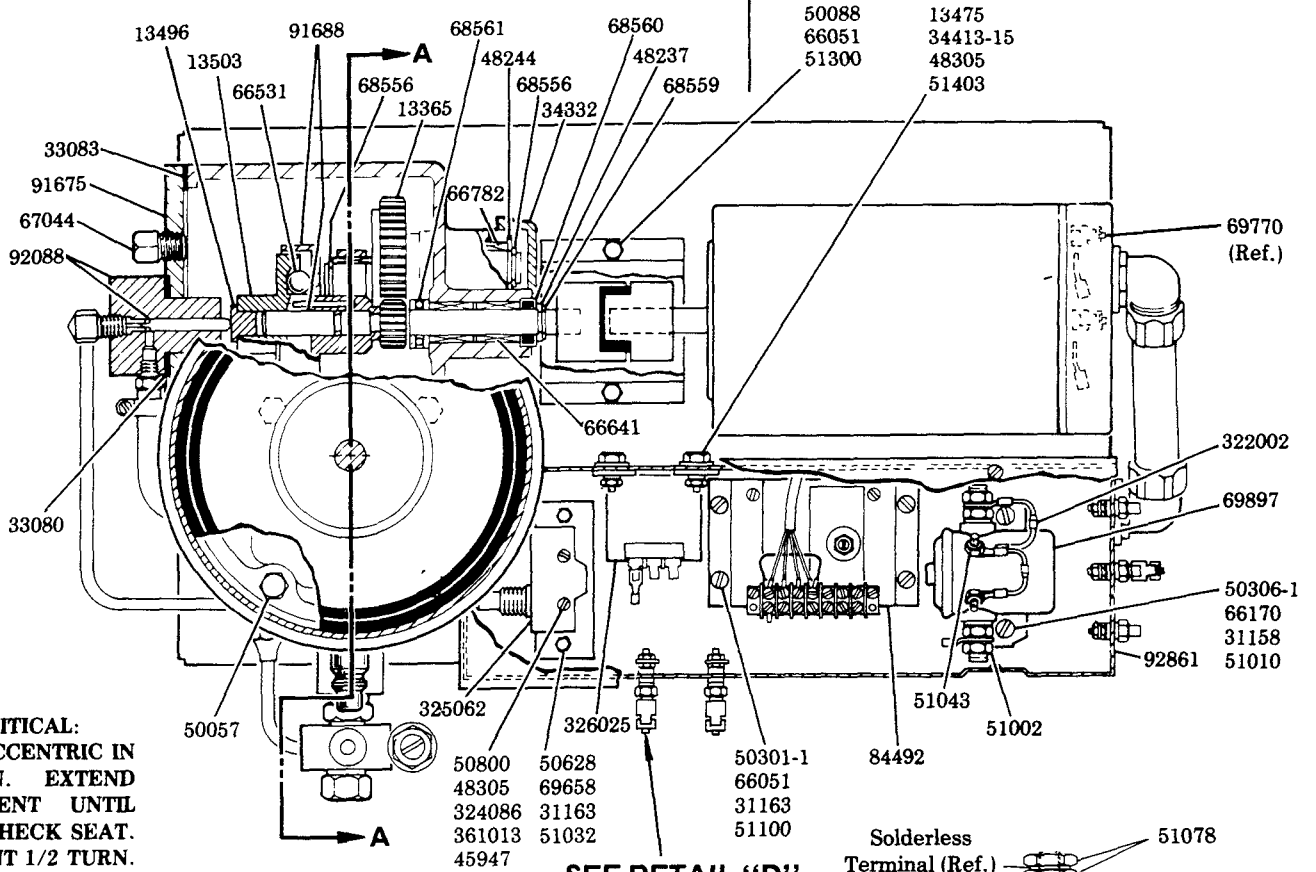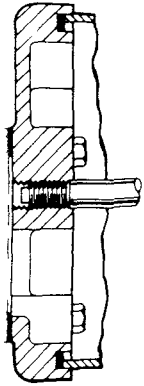


SEE DETAIL "D"

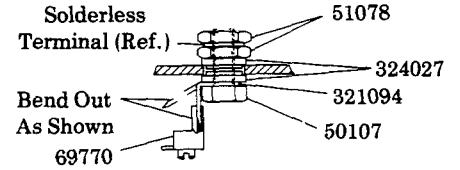

DETAIL "D"

83530
CHECK
ASSEMBLY

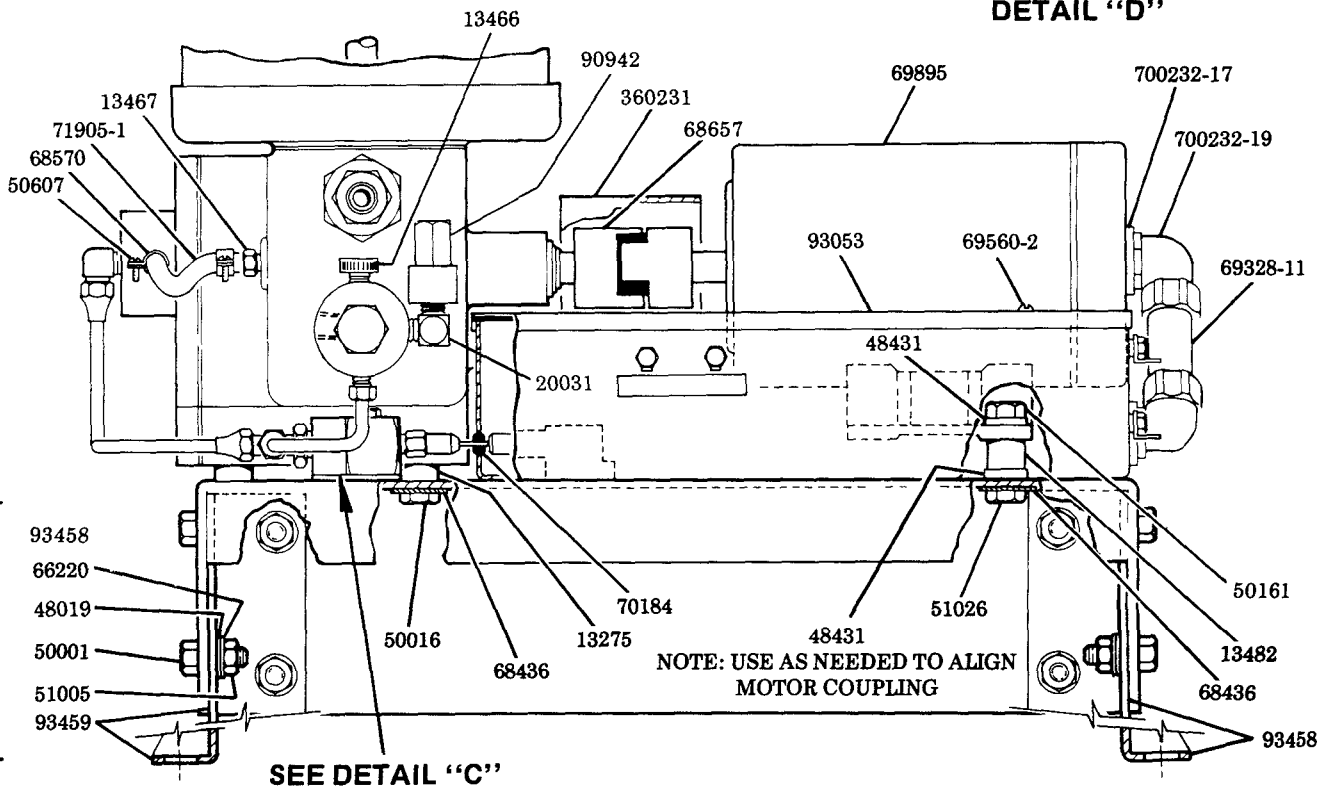

CONTROL UNIT

The control unit consists of a pressure switch, a solenoid switch, a time delay relay and a timer.

The pressure switch has been factory set for actuating at 2500 psi system pressure. Should a different pressure be desired, the switch hold down screws should be loosened only enough for the switch to be moved along the slide bracket and re-positioned (move switch closer to the actuating pin for lower pressures, and farther away for higher pressures) Disengaging the hold down screw from the threaded plate located beneath the slide bracket will require removal of the switch and bracket from the control unit and assembling back together.

The solenoid switch is a four terminal, single pole, normally open contactor that serves to deliver or interrupt power from the battery to the motor. The contact rating is 50 AMPS continuous at 24 VDC. The solenoid is also equipped with an isolated continuous duty coil for trouble-free operation


The time delay relay limits pumping time to 60 secs. max. and also serves as an alarm relay if the desired system pressure is not achieved within this time, signalling an external alarm (Supplied by customer).

Refer to "ALARM" connections, FIG. B.

The timer (Power requirement: 5 WATTS max.) has a selector switch which provides for time cycle adjustments of 2.5, 5, 10, 20, 40 and 80 minutes between lube cycles. Adjustments are made by removing the control unit cover and inserting a screwdriver into the slotted selector head and rotating to the desired time. The edge of the screwdriver will point to the time selected


NOTE:

Time indicated does not include pumping time.

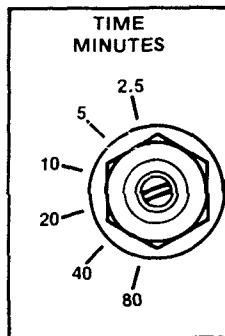


20 minute time selection shown

Relay contacts shown in "ALARM" position

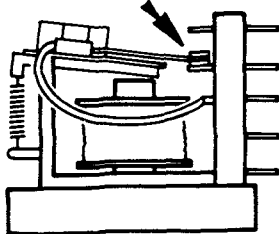

If the customer chooses not to connect an external alarm device to the unit, visual inspection of the time delay relay will denote "ALARM" condition. Contacts transferring to the low position energize the alarm circuit.

NOTE: Visual inspection of relay contacts **MUST** be done before ignition switch is turned "OFF" otherwise contacts return to the normal position.

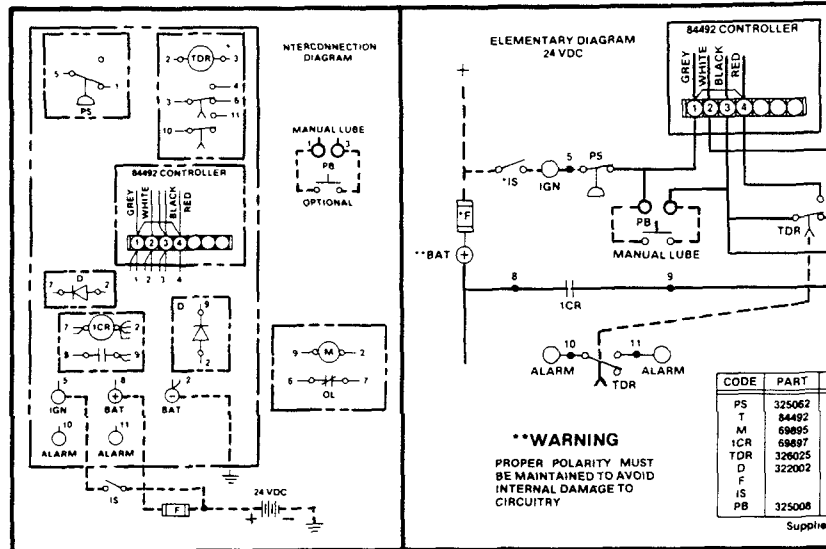

CONTROL UNIT—Side terminal connections

(Refer to Wiring Diagram and FIG. A)

IMPORTANT: This unit **MUST** be wired maintaining proper polarity to avoid internal damage to circuitry.

FOR NEGATIVE GROUND VEHICLES—


Connect positive (+) from battery through a fuse (F) to enclosure terminal (BAT.+); the (BAT.—) terminal on the enclosure connects to vehicle ground. The (IGN.) terminal of the enclosure **MUST** be connected to one side of ignition switch. The other side of the ignition switch goes to positive (+) of battery.

FOR POSITIVE GROUND VEHICLES—

Connect enclosure terminal (BAT.+) to vehicle ground; connect enclosure terminal (BAT.—) through a fuse (F) to battery (—) negative post. The (IGN.) terminal of the enclosure **MUST** be connected to one side of vehicle ignition switch. The other side of the ignition switch goes to the vehicle ground.


NOTE: Lubrication cycles will occur at set intervals only when ignition switch is turned "ON" No pre-lube is initiated when the ignition switch is turned "ON".

FIG. A

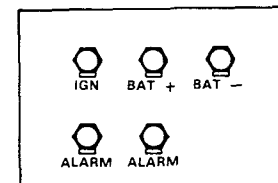

TYPICAL "ALARM" CONNECTIONS FOR NEGATIVE GROUND VEHICLES

FIG. B

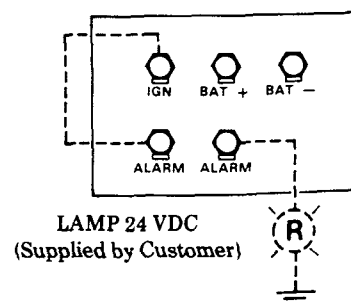

PART

10461
13275
13365
13461
13466
13467
13475
13482
*13496
*13503
14058
14062
14063
*14064
14065
*14164
14449
14491
14633
14634
14848
15952
16351
16352
16353
16524
16525
20031
*31056
*31131
*31132
*31134
31158
31163
*33080
*33083
*33094
*34122
*34166
*34306
*34308
*34332
34413-15
34438
34527
34757
40526
45947
45986
45988
48019

* Recommended

1 Closing the Ignition Switch (IS) energizes the Timer (T) time equal to the cycle frequency selected on the timer, the Control Relay (1CR) through the Time Delay Relay (TDR) the Motor (M) which in turn operates the pump. At the timing out (60 secs.).


NOTE: The Diodes (D) serve only to eliminate any A.C. sp

2 After the desired system pressure is reached, the pressure and time delay relay are de-energized. The motor and pump

3 Should system pressure not be reached within the maximum stopping the motor and pump. The time delay relay (to Customer). The unit will remain in alarm until the ignition

4 Closing the ignition switch resets the system.

5 Optional Manual Lube Pushbutton Switch (PB) provided.

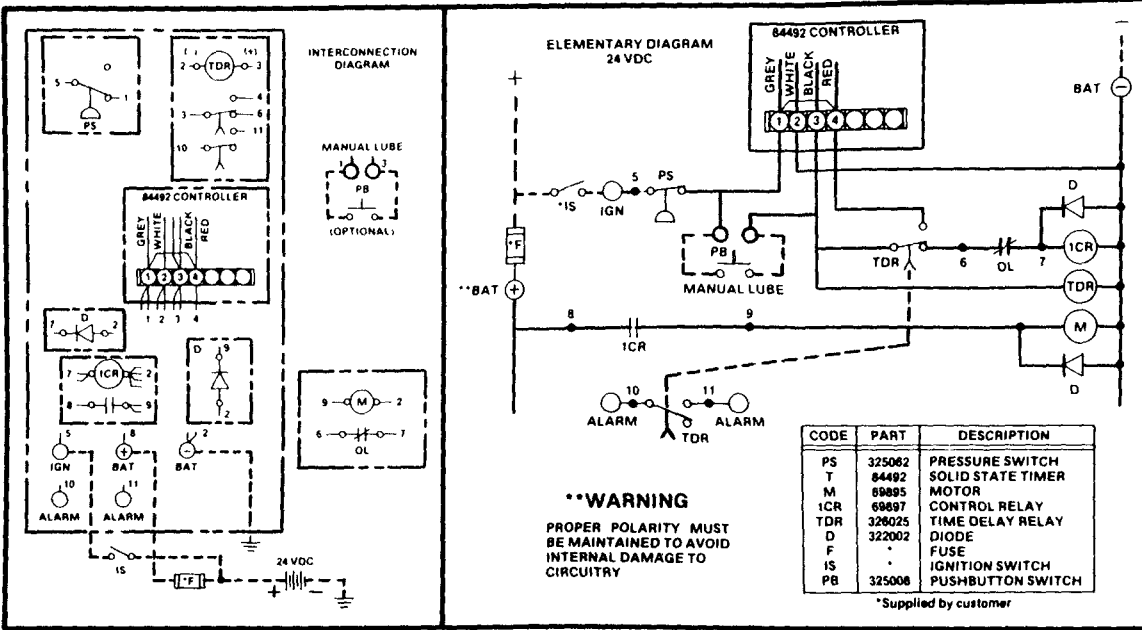

****WARNING**
 PROPER POLARITY MUST BE MAINTAINED TO AVOID INTERNAL DAMAGE TO CIRCUITRY

vitch, a solenoid

for actuating at
 rent pressure be
 ould be loosened
 along the slide
 closer to the act-
 way for higher
 screw from the
 bracket will re-
 from the control

single pole, nor-
 ver or interrupt
 contact rating is
 solenoid is also
 coil for trouble-

to 60 secs. max.
 desired system
 e, signalling an

FIG. B.
 TS max.) has a
 cycle adjustments
 een lube cycles.
 control unit cover
 ed selector head
 ge of the screw-



CONTROL UNIT—Side terminal connections

(Refer to Wiring Diagram and FIG. A)

IMPORTANT: This unit **MUST** be wired maintaining proper polarity to avoid internal damage to circuitry.


FOR NEGATIVE GROUND VEHICLES—
 Connect positive (+) from battery through a fuse (F) to enclosure terminal (BAT.+); the (BAT.—) terminal on the enclosure connects to vehicle ground. The (IGN.) terminal of the enclosure **MUST** be connected to one side of ignition switch. The other side of the ignition switch goes to positive (+) of battery.

FOR POSITIVE GROUND VEHICLES—
 Connect enclosure terminal (BAT.+) to vehicle ground; connect enclosure terminal (BAT.—) through a fuse (F) to battery (—) negative post. The (IGN.) terminal of the enclosure **MUST** be connected to one side of vehicle ignition switch. The other side of the ignition switch goes to the vehicle ground.

NOTE: Lubrication cycles will occur at set intervals only when ignition switch is turned "ON". No pre-lube is initiated when the ignition switch is turned "ON".

SERVICE PARTS

PART	QUAN.	DESCRIPTION	PART	QUAN.	DESCRIPTION
10461	1	Bushing	48237	1	Washer
13275	4	Spacer	48244	1	Washer
13365	1	Gear	48305	4	Gasket
13461	1	Nut	48400	1	Washer
13466	1	Air vent screw	48417	1	Washer
13467	2	Fitting	48431	8	Washer
13475	2	Screw	50001	10	Bolt
13482	4	Spacer	50016	4	Screw
*13496	1	Thrust bearing	50057	4	Screw
*13503	1	Cam	50088	9	Screw
14058	1	Connecting rod	50107	7	Screw
14062	1	Body	50161	4	Screw
14063	1	Cap	50301-1	4	Screw
*14064	1	Seat	50306-1	2	Screw
14065	1	Adapter	50607	2	Screw
*14164	2	Check valve	50628	2	Screw
14449	1	Tie rod	50760	3	Cap screw
14491	1	Retainer washer	50800	2	Screw
14633	1	Indicator body	50839	2	Screw
14634	1	Indicator housing	51002	2	Nut
14848	1	Pin	51005	10	Nut
15952	1	Actuator pin	51010	2	Nut
16351	1	Indicator rod	51026	4	Nut
16352	1	Nut	51032	2	Nut
16353	1	Nut	51039	1	Nut
16524	1	Connector	51043	4	Nut
16525	1	Bolt	51060	1	Locknut
20031	1	90° Elbow	51078	14	Nut
*31056	1	Gasket	51100	4	Nut
*31131	1	Gasket	51300	2	Nut
*31132	2	Gasket	51403	2	Nut
*31134	1	Gasket			

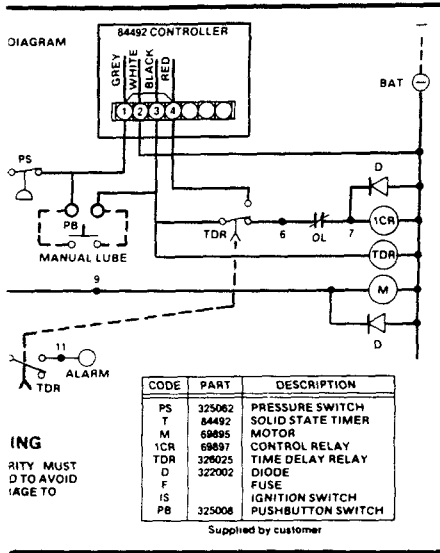

SEQUENCE OF OPERATION

- 1 Closing the Ignition Switch (IS) energizes the Timer (T) through the Pressure Switch (PS) After an initial period of time equal to the cycle frequency selected on the timer, the timer energizes an internal relay that supplies power to the Control Relay (ICR) through the Time Delay Relay (TDR) contact and the Overload (OL) contact This activates the Motor (M) which in turn operates the pump At the same time, the time delay relay coil is energized and begins timing out (60 secs)
- NOTE The Diodes (D) serve only to eliminate any A C spike initiated by the motor when it is activated
- 2 After the desired system pressure is reached, the pressure switch is opened and the timer is reset, the control relay and time delay relay are de-energized The motor and pump stop and system pressure vents
- 3 Should system pressure not be reached within the maximum pumping time of 1 minute, the time delay relay times out stopping the motor and pump The time delay relay contacts transfer, signalling an external alarm (Supplied by Customer) The unit will remain in alarm until the ignition switch is opened
- 4 Closing the ignition switch resets the system
- 5 Optional Manual Lube Pushbutton Switch (PB) provided

ING
RITY MUST
D TO AVOID
PAGE TO

SERVICE PARTS

PART	QUAN.	DESCRIPTION	PART	QUAN.	DESCRIPTION	PART	QUAN.	DESCRIPTION
10461	1	Bushing	48237	1	Washer	68464	2	Nut
13275	4	Spacer	48244	1	Washer	68528	1	Strainer
13365	1	Gear	48305	4	Gasket	68556	2	Retaining ring
13461	1	Nut	48400	1	Washer	68559	1	Retaining ring
13466	1	Air vent screw	48417	1	Washer	*68560	1	Shaft seal
13467	2	Fitting	48431	8	Washer	*68561	1	Thrust bearing
13475	2	Screw	50001	10	Bolt	68570	2	Clamp
13482	4	Spacer	50016	4	Screw	68572	1	Tube fitting
*13496	1	Thrust bearing	50057	4	Screw	68615-1	1	Tee
*13503	1	Cam	50088	9	Screw	68657	1	Coupling
14058	1	Connecting rod	50107	7	Screw	69034	1	Snap ring
14062	1	Body	50161	4	Screw	69328-11	1	Conduit
14063	1	Cap	50301-1	4	Screw	69560-2	4	Screw
*14064	1	Seat	50306-1	2	Screw	69658	2	Lockwasher
14065	1	Adapter	50607	2	Screw	69770	9	Terminal
*14164	2	Check valve	50628	2	Screw	69895	1	Motor
14449	1	Tie rod	50760	3	Cap screw	69897	1	Solenoid
14491	1	Retainer washer	50800	2	Screw	70184	1	Grommet
14633	1	Indicator body	50839	2	Screw	70381	1	Ball chain
14634	1	Indicator housing	51002	2	Nut	71905-1	1	Hose
14848	1	Pin	51005	10	Nut	83477	1	Gear box assembly
15952	1	Actuator pin	51010	2	Nut	83530	1	Check assembly
16351	1	Indicator rod	51026	4	Nut	83744	1	Foot mount kit
16352	1	Nut	51032	2	Nut	84492	1	Timer assembly
16353	1	Nut	51039	1	Nut	*90942	1	Unloader assembly
16524	1	Connector	51043	4	Nut	91663	1	Crank head assembly
16525	1	Bolt	51060	1	Locknut	*91665	1	Plunger & bushing
20031	1	90° Elbow	51078	14	Nut	91675	1	Cover assembly
*31056	1	Gasket	51100	4	Nut	91688	1	Gear & ball housing
*31131	1	Gasket	51300	2	Nut	91817	1	Reservoir cap
*31132	2	Gasket	51403	2	Nut	92042	1	Gear box
*31134	1	Gasket	*55249	1	Spring	*92088	1	Needle & vent body
31158	2	Gasket	*55276	2	Spring	92242	1	Bushing & washer
31163	6	Gasket	55346	1	Spring	92441	1	Filler fitting
*33080	1	Gasket	*55356	1	Spring	92861	1	Box
*33083	1	Gasket	57079	1	Spring clip	93053	1	Cover
*33094	1	Gasket	57104	1	Ring	93458	1	Bracket (right)
*34122	1	Packing	61464	1	Reservoir	93459	1	Bracket (left)
*34166	1	O-ring	62612	1	Tube	321094	7	Tab
*34306	1	Packing	62645	1	Tube	322002	2	Diode
*34308	1	Gasket	66051	8	Lockwasher	324027	14	Washer
*34332	1	Shaft seal	66170	2	Lockwasher	324086	1	Paper insulator
34413-15	2	Gasket	66201	1	Tube connector	325008	1	Pushbutton switch
34438	1	Follower	66220	10	Lockwasher	325062	1	Switch
34527	1	O-ring	*66531	9	Steel ball	326025	1	Relay
34757	1	O-ring	*66641	2	Needle bearing	360231	1	Coupling guard
40526	1	Reservoir base	66696	1	Ball chain retainer	361013	1	Bracket
45947	1	Plate	*66782	2	Needle bearing	361020	1	Indicator bracket
45986	1	Mounting plate	67044	1	Plug	700232-17	2	Gasket
45988	1	Base	68436	8	Lockwasher	700232-19	2	Connector
48019	10	Washer	68462	2	Ferrule			

* Recommended Service Parts Inventory.

RETAIN THIS INFORMATION FOR FUTURE REFERENCE

When ordering replacement parts, list: Part Number, Description, Model Number, and Series Letter.

LINCOLN ST. LOUIS provides a Distributor Network that stocks equipment and replacement parts. A list of Authorized Service Departments will be furnished upon request.